

[Manuals.plus](#) /

› [UBay](#) /

› UBay BN59-00996A Replacement Remote Control User Manual

UBay BN59-00996A

UBay BN59-00996A Replacement Remote Control User Manual

Model: BN59-00996A

Brand: UBay

1. INTRODUCTION

This user manual provides comprehensive instructions for the UBay BN59-00996A Replacement Remote Control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Samsung television.

2. PRODUCT OVERVIEW





Image 1: UBay BN59-00996A Replacement Remote Control. This image displays the full layout of the remote control, featuring various buttons for power, source, channel, volume, number input, and media playback.

The UBay BN59-00996A is a direct replacement remote control designed for a wide range of Samsung televisions. It features an ergonomic design for comfortable handling and provides all essential functions for controlling your TV.

3. SETUP

This replacement remote control requires no programming or pairing. It is ready for immediate use after battery installation.

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Once batteries are installed, the remote is operational.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung television's infrared receiver. Ensure there are no obstructions between the

remote and the TV.

4.1 Key Functions

- **POWER:** Turns the TV on or off.
- **SOURCE:** Changes the input source (e.g., HDMI, AV).
- **Number Buttons (0-9):** Directly input channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes the television channel.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Opens the TV's main menu.
- **CH LIST:** Displays the channel list.
- **FAV.CH:** Accesses favorite channels.
- **TOOLS:** Opens the Tools menu.
- **INFO:** Displays information about the current program.
- **Directional Pad (Up, Down, Left, Right) & Enter:** Navigates menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV applications or menus.
- **S.MODE / P.MODE:** Sound Mode / Picture Mode.
- **SLEEP:** Sets the sleep timer.
- **MTS:** Multi-channel Television Sound.
- **P.SIZE:** Picture Size adjustment.
- **CC:** Closed Captioning.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback functions.

5. COMPATIBILITY

The UBay BN59-00996A remote control is compatible with a wide range of Samsung TV models, including but not limited to:

- BN59-00996A, BN59-01178W, BN59-00997A, BN59-01199F, AA59-00594A, BN59-01179A, AA59-00600A, AA59-00652A, AA59-00666A
- UN55HU6830F, UN55HU6830FXZA, UN60H6203AF, UN60H6203AFXZA, UN65H6203AF, UN65H6203AFXZA
- PL50C530C1FXZX, PN50C530, PN50C530C1F, PN50C530C1FXZA, PN50C540, PN50C540G3F, PN50C540G3FXZA, PN50C540G3FXZC
- PN58C500G2F, PN58C500G2FXZA, PN58C540, PN58C540G3F, PN58C540G3FXZA, PN58C540G3FXZC
- PN63C540, PN63C540G3F, PN63C540G3FXZA, PN63C550G1F, PN63C550G1FXZA, PN63C590G4F, PN63C590G4FXZA
- UN19C4000, UN19C4000PD, UN19C4000PDXZA, UN22C4000, UN22C4000PD, UN22C4000PDXZA, UN22C4000PDXZX
- UN26C4000, UN26C4000PD, UN26C4000PDXZA, UN26C4000PDXZC, UN26C4000PDXZX, UN32C4000, UN32C4000PD, UN32C4000PDXZA, UN32C4000PDXZC, UN32C4000PDXZP, UN32C4000PDXZX
- LN32C530F1F, LN32C540F2D, LN37C530F1F, LN40C530, LN40C530F1F, LN40C540F2F, LN46C530F1F, LN32C480, LN40C530, LN46C540, LN52C530, PN50C530, LN52C530F1F

For a complete list of compatible models, please refer to the product listing or contact UBay customer support.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Intermittent response.	Weak batteries or obstruction.	Replace batteries. Ensure clear line of sight between remote and TV.
Certain buttons not working.	Button malfunction or specific TV model incompatibility for that function.	Verify if the button function is supported by your specific TV model. If not, the remote may be faulty; contact support.

7. SPECIFICATIONS

- **Model:** BN59-00996A
- **Brand:** UBay
- **Product Dimensions:** 9 x 1.8 x 0.8 inches
- **Item Weight:** 2.89 ounces
- **Color:** Black
- **Special Feature:** Ergonomic
- **Max Number of Supported Devices:** 1 (Television)
- **Compatible Devices:** Television (specifically Samsung TVs)
- **Power Source:** 2 x AAA Batteries (not included)

8. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

9. WARRANTY AND SUPPORT

Specific warranty details for this product are not provided in the available information. For warranty claims, technical support, or further inquiries, please contact the seller or manufacturer (UBay) directly through their official channels or the platform where the product was purchased.

Please retain your proof of purchase for any support requests.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question