



[Manuals.plus](#) /

> [Tefal](#) /

> Tefal ActiFry Genius FZ7600 Instruction Manual

## Tefal FZ7600

# Tefal ActiFry Genius FZ7600 Instruction Manual

Model: FZ7600 | Brand: Tefal

## INTRODUCTION

---

Welcome to the world of healthy and convenient cooking with your new Tefal ActiFry Genius FZ7600. This innovative air fryer allows you to prepare delicious meals with little to no oil, ensuring healthier results without compromising on taste. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your appliance to ensure optimal performance and longevity.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your ActiFry Genius FZ7600:

- **Base Unit:** Contains the heating element and motor.
- **Removable Cooking Pan:** Non-stick coated pan for cooking ingredients.
- **Stirring Paddle:** Automatically stirs food for even cooking.
- **Transparent Lid:** Allows you to monitor cooking progress.
- **Measuring Spoon:** For precise oil measurement.
- **Control Panel:** Digital display and buttons for setting programs and time.



Image: Key components of the ActiFry Genius FZ7600, including the lid, measuring spoon, and the cooking pan with its integrated stirring paddle.

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
2. **Initial Cleaning:** Before first use, wash the cooking pan, stirring paddle, and lid with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the ActiFry on a stable, heat-resistant, and flat surface, away from walls or other appliances to allow for proper air circulation.
4. **Assembly:** Ensure the stirring paddle is correctly inserted into the cooking pan. Place the cooking pan into the base unit. Close the transparent lid securely.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: Preparing ingredients by adding a small amount of oil to the raw potato fries in the ActiFry cooking pan before starting the cooking process.

## OPERATING INSTRUCTIONS

---

The ActiFry Genius FZ7600 features intuitive controls and automatic programs for various dishes.

### Basic Operation:

1. **Prepare Ingredients:** Place your ingredients into the cooking pan. For many recipes, only a small amount of oil (often one measuring spoon) is needed.
2. **Close Lid:** Ensure the lid is properly closed and latched.
3. **Select Program:** Use the control panel to select one of the pre-set cooking programs or manually set the cooking time and temperature. The appliance features 9 automatic programs.
4. **Start Cooking:** Press the start button. The stirring paddle will begin to rotate, and the appliance will start cooking.
5. **Monitoring:** You can monitor the cooking progress through the transparent lid. The stirring paddle ensures even cooking without manual intervention.
6. **Completion:** The appliance will automatically stop and signal when cooking is complete.



Image: An internal view illustrating the hot air circulation system within the ActiFry, which ensures even cooking and crisping of food.

### **Cooking Tips:**

- For best results with fresh potatoes, rinse and dry them thoroughly before cooking.
- Do not overload the pan; adhere to the maximum capacity of 1.2 kg for optimal cooking.
- Refer to the included recipe book or the Tefal ActiFry app for a wide variety of recipes and cooking guidelines.



Image: The Tefal ActiFry Genius FZ7600 ready for use, showcasing its capacity for fries, accompanied by its recipe book and oil measuring spoon.



Image: The ActiFry Genius FZ7600 displayed in a kitchen setting, surrounded by a variety of dishes that can be prepared using the appliance, including savory snacks and desserts.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and hygiene of your ActiFry.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Dishwasher Safe Parts:** The cooking pan, stirring paddle, and lid are removable and dishwasher safe for easy cleaning.
3. **Hand Washing:** If washing by hand, use warm water and a non-abrasive sponge with dish soap. Rinse thoroughly.
4. **Base Unit:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.
5. **Storage:** Ensure all parts are completely dry before reassembling and storing the appliance.



Image: The disassembled components of the ActiFry Genius FZ7600, including the lid, measuring spoon, and cooking pan with paddle, highlighting their ease of removal for cleaning.

## TROUBLESHOOTING

If you encounter any issues with your ActiFry Genius FZ7600, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; ensure power outlet is functional; try a different outlet.

Problem	Possible Cause	Solution
Food not cooking evenly.	Too much food in the pan; stirring paddle not installed correctly.	Reduce the quantity of food; ensure the stirring paddle is properly in place.
Smoke or unusual odor during first use.	Protective coating burning off; residual manufacturing oils.	This is normal for first use and should dissipate quickly. Ensure good ventilation.
Lid does not close properly.	Obstruction; pan not seated correctly.	Check for any food particles or debris; ensure the cooking pan is fully seated in the base unit.

## SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	FZ7600
Color	White
Product Dimensions	39.1 x 39.1 x 26 cm
Product Weight	4.08 kg
Capacity	1.2 Kilograms (food) / 1.2 Liters (volume)
Power	1550 Watts
Output Wattage	1350 Watts
Voltage	220 Volts (AC)
Material	Ceramic (cooking pan)
Special Features	Automatic shutdown, Integrated on/off switch, Built-in display, Water-resistant dish parts, Timer
Recommended Uses	Roasting, Grilling, Steaming, Baking, Reheating

## WARRANTY AND SUPPORT

Your Tefal ActiFry Genius FZ7600 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the duration of coverage and what is covered. For technical support, spare parts, or service inquiries, please visit the official Tefal website or contact their customer service department. Keep your proof of purchase for warranty claims.