

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DADA-TECH](#) /

› [DADA-TECH Kids Sonic Electric Toothbrush \(Model DT-K6\) Instruction Manual](#)

DADA-TECH DT-K6

DADA-TECH Kids Sonic Electric Toothbrush (Model DT-K6) Instruction Manual

Brand: DADA-TECH | Model: DT-K6

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SETUP

1.1 Package Contents

Ensure all components are present:

- DADA-TECH Kids Sonic Electric Toothbrush handle
- Replacement Brush Heads (3 included)
- User Manual

1.2 Battery Installation

The toothbrush is battery-operated. To install or replace the battery:

1. Twist the bottom cap of the toothbrush handle counter-clockwise to open the battery compartment.
2. Insert one AAA battery, ensuring correct polarity (+/-).
3. Twist the bottom cap clockwise to securely close the compartment.

1.3 Attaching the Brush Head

To attach a brush head:

1. Align the brush head with the shaft on the toothbrush handle.
2. Twist the brush head clockwise until it clicks securely into place.
3. To remove, twist counter-clockwise and pull gently.



Figure 1: DADA-TECH Kids Sonic Electric Toothbrush (Blue Giraffe)

Attractive for Kids

Colorful LED Light Attract Children to Brush Their Teeth



Figure 2: Toothbrush Components and Battery Compartment

2. OPERATING INSTRUCTIONS

2.1 Powering On/Off and Mode Selection

Press the power button on the handle to cycle through the operating modes:

- **First Press:** Activates the toothbrush with sonic vibrations and a white LED light for inspection.
- **Second Press:** Activates the toothbrush with sonic vibrations and a rainbow LED light mode, designed to make brushing engaging.
- **Third Press:** Turns the toothbrush off.

2.2 Brushing Technique and Timer

The toothbrush features a built-in 2-minute timer and 30-second pulse reminders to guide proper brushing habits:

1. Apply a pea-sized amount of toothpaste to the brush head.

2. Place the brush head against the teeth at a slight angle towards the gum line.
3. Gently move the brush across the teeth, allowing the sonic vibrations to clean.
4. The toothbrush will pause briefly every 30 seconds, signaling to move to a different quadrant of the mouth (upper right, upper left, lower right, lower left).
5. After 2 minutes, the toothbrush will automatically turn off, indicating the completion of the recommended brushing time.

Video 1: Demonstration of the DADA-TECH Kids Electric Toothbrush Rainbow Light Series, showcasing its colorful LED lights and sonic action.



Figure 3: Brushing Habits with 2-Minute Timer and 30-Second Pulse Reminders

Removes 99.99% of Plaque

Over 90% rounded bristle and BPA-FREE

Soft Nylon Bristles

Comfort 45% ↑

Cleaning Efficiency 25% ↑



Food-Grade Brush Head



Figure 4: LED White Light for Oral Inspection

3. MAINTENANCE

3.1 Cleaning the Toothbrush

After each use:

- Rinse the brush head thoroughly under running water.
- Wipe the handle with a damp cloth.
- The toothbrush is IPX7 waterproof, allowing for safe rinsing under water, but avoid prolonged submersion.

Sonic Tech for Kids

- **Gentle LED Light**

Inspects oral environment and makes brushing fun



- **Food-Grade TPE Handle**

Comfortable grip, easy to hold



- **Battery Lock Chamber**

Prevents babies from swallowing batteries



- **24,000 VPM Gentle Motor**

Optimal power for kids



- **IPX7 Waterproof**

Suitable for use during bath time



Figure 5: IPX7 Waterproof Feature

3.2 Replacing Brush Heads

Dentists recommend replacing brush heads every 3 months, or sooner if bristles are frayed. Refer to section 1.3 for instructions on attaching and removing brush heads.



Figure 6: Soft Nylon Bristles and Food-Grade Brush Head

4. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------|---|---|
| Toothbrush does not turn on. | Battery is dead or incorrectly installed. | Replace the AAA battery or ensure it is inserted with correct polarity. |
| Weak vibration or LED light. | Low battery power. | Replace the AAA battery. |
| Brush head is loose. | Brush head not securely attached. | Ensure the brush head is twisted clockwise until it clicks into place. |

5. SPECIFICATIONS

- **Model:** DT-K6
- **Brand:** DADA-TECH
- **Age Range:** Kid (2-12 years)
- **Power Source:** Battery Operated (1x AAA battery)
- **Vibrations Per Minute (VPM):** 24,000
- **Bristle Material:** Nylon (Ultra Soft, >90% rounded tips)
- **Handle Material:** Acrylonitrile Butadiene Styrene (ABS) and TPE
- **Waterproof Rating:** IPX7
- **Special Features:** 2-Minute Timer, 30-Second Pulse Reminder, Rainbow LED Light, White LED Inspection Light, BPA-Free, Non-slip handle
- **Product Dimensions:** 7.24 x 0.79 x 0.79 inches
- **Item Weight:** 2.08 ounces
- **Included Components:** Toothbrush handle, 3 Replacement Brush Heads, User Manual
- **UPC:** 615311758351

6. WARRANTY & SUPPORT

DADA-TECH offers a two-year warranty for this product. For warranty claims or any support inquiries, please follow these steps:

1. Log in to your Amazon account.
2. Navigate to "Your orders".
3. Find the order ID for your DADA-TECH Kids Sonic Electric Toothbrush.
4. Click on "Contact seller" to reach DADA-TECH customer support.

This process ensures you receive prompt assistance and helps us understand customer needs for continuous improvement.