



[Manuals.plus](#) /

> [IMC Audio](#) /

> IMC Audio Replacement Remote Control Instruction Manual for Kenwood DDX790, DDX793, DDX794, DDX8901HD, DDX896, DDX9702S, DDX9703S

IMC Audio DDX790, DDX793, DDX794, DDX8901HD, DDX896, DDX9702S, DDX9703S

IMC Audio Replacement Remote Control Instruction Manual

For Kenwood DDX790, DDX793, DDX794, DDX8901HD, DDX896, DDX9702S, DDX9703S
Car Stereos

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your IMC Audio replacement remote control. This remote is specifically designed to be compatible with various Kenwood car stereo and navigation system models, including DDX790, DDX793, DDX794, DDX8901HD, DDX896, DDX9702S, and DDX9703S. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your device.



Image of the black ergonomic remote control, showing its button layout.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Initial Use

This remote control utilizes infrared (IR) technology. No complex pairing is required. Simply point the remote directly at your Kenwood car stereo or navigation system. Ensure there are no obstructions between the remote and the device's IR receiver for optimal performance.

OPERATING INSTRUCTIONS

The remote control features 7 distinct buttons designed for intuitive control of your Kenwood car stereo. While specific functions may vary slightly depending on your Kenwood model, the general operations are as follows:

- **Power Button:** Turns the car stereo on or off.
- **Volume Up/Down:** Adjusts the audio output level.
- **Source/Mode Button:** Cycles through available audio sources (e.g., Radio, CD, USB, Bluetooth).
- **Track Skip/Seek Buttons:** Navigates to the next or previous track/station.
- **Menu/Function Buttons:** Accesses and navigates through the stereo's menu options.

For detailed information on specific button functions, please refer to your Kenwood car stereo's original user manual.

MAINTENANCE

Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and internal components.
- Avoid getting moisture into any openings.

Battery Replacement

Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure there is a clear line of sight between the remote and the car stereo's IR receiver. Remove any obstructions.

- Confirm that the remote is pointed directly at the stereo.
- **Limited operating range:**
 - Replace the batteries with fresh ones.
 - Ensure you are within the maximum operating range of 10 meters (approximately 33 feet).
 - Minimize interference from strong light sources or other electronic devices.

If issues persist after attempting these troubleshooting steps, please contact customer support.

SPECIFICATIONS

Brand	IMC Audio
Model Compatibility	Kenwood DDX790, DDX793, DDX794, DDX8901HD, DDX896, DDX9702S, DDX9703S
Special Feature	Ergonomic design
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Car Stereo, Navigation System
Connectivity Technology	Infrared (IR)
Button Quantity	7
Controller Type	Button Control
Maximum Range	10 Meters (approx. 33 feet)
Unit Count	1 Count
Manufacturer	IMC AUDIO

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase for any warranty claims.