

Manuals.plus /

- › Bayer Chic 2000 /
- › Bayer Chic 2000 562 76 Super Doll Stroller Roadstar Instruction Manual

Bayer Chic 2000 562 76

Bayer Chic 2000 Super Doll Stroller Roadstar Instruction Manual

Model: 562 76

IMPORTANT SAFETY INFORMATION

WARNING: Not suitable for children under 3 years of age.

Always ensure all parts are securely assembled before use. Adult supervision is recommended during play.

1. SETUP AND ASSEMBLY

The Bayer Chic 2000 Super Doll Stroller Roadstar requires assembly. Please follow these steps carefully.

1.1 Unpacking

Carefully remove all components from the packaging. Check that all parts are present according to the packing list (not provided in this manual, refer to product packaging).

1.2 Frame Assembly

Unfold the main frame of the stroller. Ensure all locking mechanisms click into place securely.

1.3 Wheel Attachment

Attach the wheels to the designated axles on the stroller frame. Push firmly until they lock into position. Verify that all wheels rotate freely and are securely attached.

1.4 Attaching the Bassinet/Seat Unit

The stroller features a versatile unit that can function as a bassinet or a seat. Align the attachment points on the bassinet/seat unit with the corresponding connectors on the stroller frame. Press down firmly until you hear a click, indicating it is securely fastened. Ensure the unit is stable and does not wobble.

1.5 Canopy and Accessories

Attach the canopy to the bassinet/seat unit. The canopy features panoramic windows and a sun protection shield. The large luggage net can be attached to the bottom of the frame, and the modern changing bag can be hung on the handle.



Image 1: The Bayer Chic 2000 Super Doll Stroller in pram configuration, featuring the canopy and an attached changing bag.

2. OPERATION

This doll stroller is designed for versatile play, offering multiple configurations.

2.1 Adjustable Handlebar

The handlebar is height-adjustable from 57 cm to 92 cm to accommodate different users. Locate the adjustment

buttons or levers on the side of the handlebar, press them, and adjust the handle to the desired height. Release the buttons/levers to lock it in place.

2.2 Convertible Bassinet/Seat

The main unit can be converted between a bassinet (pram) and a seat (stroller) configuration. Follow the instructions provided with the product for specific conversion steps. Ensure all straps and buckles are properly secured when changing modes.



Image 2: The doll stroller configured as a seat, alongside the soft carrycot and changing bag.

2.3 Soft Carrycot Functionality

The included soft carrycot can be used independently or placed within the bassinet/seat unit. It is designed for dolls up to approximately 52 cm. The changing mat within the carrycot can be opened for doll care.



Image 3: A doll resting comfortably inside the soft carrycot.

2.4 Swivel Wheels

The stroller features swivel wheels for easy maneuverability. These wheels can be locked for straight-line pushing if desired (refer to specific product mechanism for locking/unlocking).

3. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your doll stroller.

3.1 Cleaning

- Wipe down the frame with a damp cloth and mild soap.
- Fabric parts can be spot cleaned with a gentle fabric cleaner. For deeper cleaning, check the care labels on individual fabric components.
- Do not use abrasive cleaners or solvents.

3.2 Storage

When not in use, store the stroller in a clean, dry place away from direct sunlight to prevent fading and material degradation. The stroller can be easily folded for compact storage.

4. TROUBLESHOOTING

If you encounter any issues with your doll stroller, please refer to these common solutions.

- **Wheels not turning smoothly:** Check for any debris caught in the wheels or axles. Ensure wheels are properly attached and lubricated if necessary.
- **Frame not locking:** Ensure all parts are fully extended and aligned correctly. Apply firm pressure until locking mechanisms engage.
- **Unit unstable:** Verify that the bassinet/seat unit is correctly attached to the frame and all connectors are securely fastened.

If problems persist, please contact customer support.

5. SPECIFICATIONS

Feature	Detail
Model Number	562 76
Dimensions (L x W x H)	85 x 47 x 82 cm
Item Weight	6.4 kg
Recommended Age	3 years and up
Maximum Doll Size	Up to 52 cm
Adjustable Handle Height	57 cm to 92 cm
Material	Plastic, Textile (Jeans, Grey)
Assembly Required	Yes
Wheel Type	Swivel

6. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact Bayer Chic 2000 customer service directly. Contact details can typically be found on the product packaging or the manufacturer's official website.

Please retain your proof of purchase for any warranty claims.