

Casio AQ-E10

Casio Illuminator AQ-E10 Digital-Analog Watch User Manual

Model: AQ-E10

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio Illuminator AQ-E10 digital-analog watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The AQ-E10 features both analog and digital time displays, an alarm, a stopwatch, and an illuminator backlight.



Front view of the Casio Illuminator AQ-E10 watch, showcasing its digital and analog display, black rubber strap, and round black dial.

SETUP

Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all buttons operate smoothly. If any issues are found, contact your retailer.

Setting the Digital Time and Date

1. In the Timekeeping Mode, press and hold the **ADJUST** button (usually top-left) until the seconds digits start to flash, indicating the setting screen.

2. Press the **MODE** button (usually bottom-left) to cycle through the settings: Seconds → Hour → Minutes → Year → Month → Day → 12/24-hour format.
3. Use the **SEARCH** button (usually top-right) or **FORWARD** button (usually bottom-right) to increase the flashing value. Hold the button to change values rapidly.
4. Once all settings are adjusted, press the **ADJUST** button again to exit the setting screen.

Synchronizing Analog Hands

The analog hands are typically synchronized automatically with the digital time. If they are out of sync, refer to the detailed instructions in the operating section for manual adjustment, or consult the full Casio module manual for your specific watch module number (often found on the watch's case back).

OPERATING THE WATCH

Mode Navigation

Press the **MODE** button to cycle through the watch's functions: Timekeeping Mode → Alarm Mode → Stopwatch Mode.

Timekeeping Mode

This mode displays the current time (hours, minutes, seconds) and date (month, day, day of the week) digitally, alongside the analog hands.

Alarm Mode

1. From Timekeeping Mode, press **MODE** until you reach the Alarm Mode. The alarm time will be displayed.
2. Press and hold the **ADJUST** button until the alarm hour digits flash.
3. Use the **SEARCH** or **FORWARD** button to set the desired alarm hour.
4. Press **MODE** to move to the minutes setting, then use **SEARCH** or **FORWARD** to set the minutes.
5. Press **ADJUST** to confirm and exit.
6. To turn the alarm ON/OFF, press the **SEARCH** button while in Alarm Mode (without holding **ADJUST**). An indicator will show if the alarm is active.

Stopwatch Mode

1. From Timekeeping Mode, press **MODE** until you reach the Stopwatch Mode. The display will show "00'00"00".
2. Press the **SEARCH** button to start the stopwatch.
3. Press **SEARCH** again to stop the stopwatch.
4. Press the **ADJUST** button to reset the stopwatch to "00'00"00".

Illuminator (Backlight)

Press the **LIGHT** button (usually top-right or a dedicated button) to illuminate the digital display for easy viewing in low-light conditions. The illumination duration is typically a few seconds.

MAINTENANCE

Water Resistance

The Casio AQ-E10 is designed to be water resistant. However, it is important to avoid operating the watch buttons while submerged in water to prevent water ingress. Avoid exposing the watch to hot water or steam, as this can

compromise the seals.

Cleaning

Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, as they may damage the watch's materials.

Battery Replacement

The watch is powered by a battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is highly recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance integrity.

Storage

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Incorrect Time Display:** If the digital or analog time is incorrect, refer to the "Setting the Digital Time and Date" and "Synchronizing Analog Hands" sections under Setup to re-adjust.
- **Blank or Dim Digital Display:** This usually indicates a low battery. Arrange for battery replacement by a professional.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable, though not a common feature for this model). If the issue persists, a battery replacement or professional inspection may be required.
- **Condensation Inside Watch:** If condensation appears inside the watch, it indicates a breach in water resistance. Stop using the watch immediately and have it inspected by a professional to prevent further damage.

SPECIFICATIONS

Model Number:

AQ-E10-1BEF

Display Format:

Analog-Digital

Movement Type:

Quartz

Special Features:

Alarm, Chronograph (Stopwatch), Illuminator (Backlight)

Power Source:

Battery

Clasp Type:

Buckle

Strap Material:

Rubber

Case Material:

Rubber

Crystal Type:

Acrylic

Strap Color:

Black

Dial Color:

Black

Case Thickness:

7 Millimeters

Strap Width:

16 Millimeters

Dimensions (Package):

11 x 11 x 7.49 cm; 27.22 g

Water Resistance:

General water resistance (specific depth not provided, avoid button operation underwater).

WARRANTY AND SUPPORT

Your Casio Illuminator AQ-E10 watch is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support, service, or inquiries, please contact Casio customer service or an authorized service center.

Official Casio Website: www.casio.com