

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EGLO](#) /

› [EGLO Outdoor Wall Light Model 203029A Instruction Manual](#)

EGLO 203029A

EGLO Outdoor Wall Light Model 203029A Instruction Manual

Model: 203029A | Brand: EGLO

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your EGLO Outdoor Wall Light, Model 203029A. Please read all instructions carefully before beginning installation and retain this manual for future reference.

SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installing or servicing.

- Installation must be performed by a qualified electrician or a person with electrical experience.
- Ensure the electrical supply is suitable for the fixture.
- Always follow local electrical codes and ordinances.
- Do not install near flammable materials.
- This product is designed for outdoor use and is water-resistant.
- Please check your local laws before purchasing and installing this product.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- EGLO Outdoor Wall Light Fixture (Model 203029A)
- Mounting Hardware (screws, wire nuts)
- Instruction Manual (this document)

Note: Light bulb is not included.

SETUP AND INSTALLATION

Follow these steps for proper installation of your EGLO Outdoor Wall Light.

1. Prepare for Installation:

Turn off power at the circuit breaker or fuse box to avoid electrical shock. Ensure the power is completely off before proceeding.

2. Mounting Bracket Installation:

Attach the mounting bracket to the junction box using the provided screws. Ensure the bracket is securely fastened and level.

3. Wiring Connections:

Connect the electrical wires according to standard wiring practices:

- Connect the **black** wire from the fixture to the**black** (live) wire from the junction box.
- Connect the **white** wire from the fixture to the**white** (neutral) wire from the junction box.
- Connect the **green** or bare copper (ground) wire from the fixture to the**green** or bare copper (ground) wire from the junction box.

Secure all connections with wire nuts and ensure no bare wire is exposed.

4. Fixture Mounting:

Carefully align the fixture with the mounting bracket and secure it using the provided screws or nuts. Ensure a tight seal against the mounting surface to prevent water intrusion.



Image: Product dimensions for installation planning. The light measures 5.37 inches in length, 5.23 inches in width, and 12.01 inches in height.

5. Install Light Bulb:

Insert one A19 medium base bulb (not included) into the socket. Do not exceed the maximum wattage of 60 watts.

6. Restore Power:

Once installation is complete, restore power at the circuit breaker or fuse box and test the light fixture.

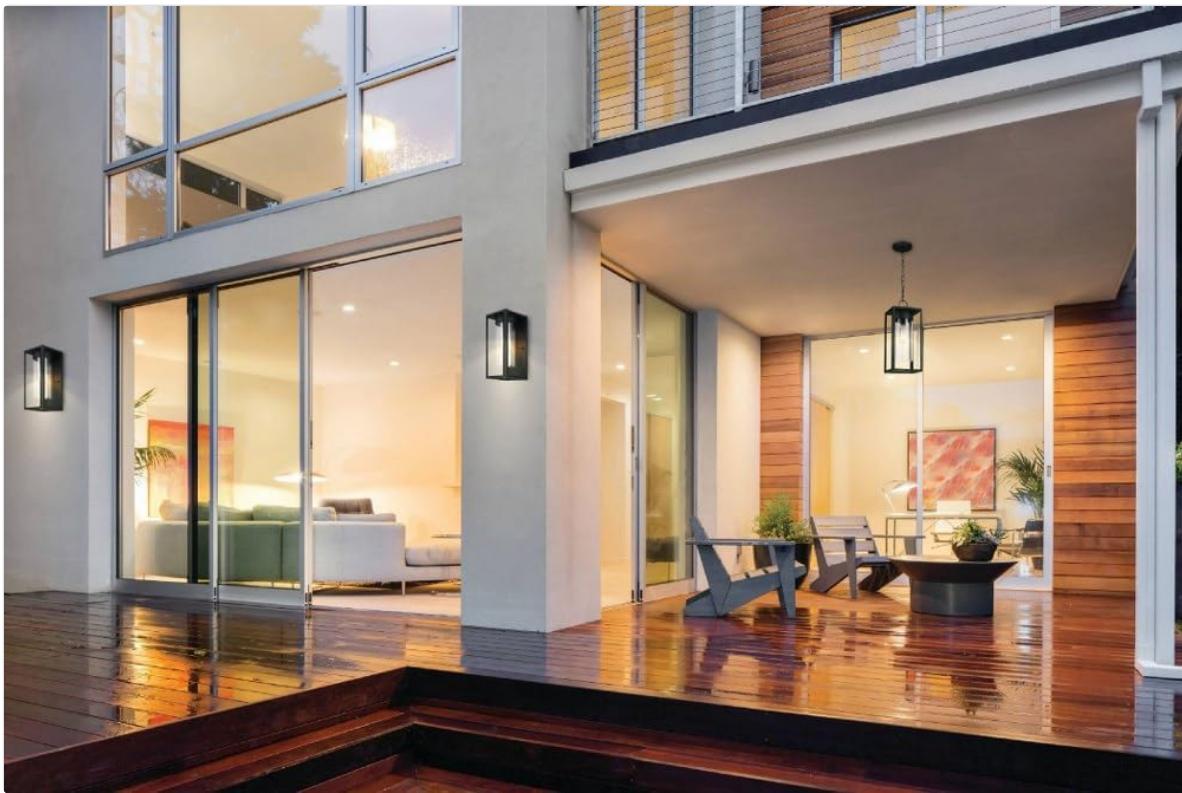


Image: EGLO Outdoor Wall Light installed on a contemporary home, showcasing its appearance in an outdoor setting.

OPERATING INSTRUCTIONS

The EGLO Outdoor Wall Light operates via your home's standard electrical switch. Once installed and powered, the light will turn on and off with the connected wall switch.

- **Light Source:** Uses one A19 medium base bulb (E26 socket).
- **Maximum Wattage:** Do not exceed 60 watts.
- **Power Source:** Corded Electric, 120 Volts.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your wall light.

- **Cleaning:**

Before cleaning, ensure the power is turned off at the circuit breaker. Wipe the fixture with a soft, damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or glass. Dry thoroughly after cleaning.

- **Bulb Replacement:**

Turn off power at the circuit breaker before replacing the bulb. Allow the old bulb to cool completely before removing. Unscrew the old bulb and screw in a new A19 medium base bulb, ensuring it does not exceed 60 watts. Restore power after replacement.

- **Inspection:**

Periodically inspect the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.

TROUBLESHOOTING

If your EGLO Outdoor Wall Light is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wiring connection. Defective light bulb.	Check circuit breaker/fuse. Ensure wall switch is ON. Turn off power, check wiring connections. Replace light bulb.
Light flickers.	Loose bulb. Incorrect bulb type/wattage. Loose wiring connection.	Tighten bulb. Ensure bulb is A19 medium base, 60W max. Turn off power, check wiring connections.
Water inside fixture.	Improper sealing during installation. Damaged glass or seal.	Turn off power, inspect and re-seal fixture to mounting surface. Contact support if glass or seal is damaged.

If the problem persists after attempting these solutions, contact customer support.

SPECIFICATIONS

Brand:	EGLO
Model Name:	203029A
Finish:	Oil-Rubbed Bronze
Shade Material:	Glass (Clear)
Material:	Steel/Glass
Product Dimensions (L x W x H):	5.37" x 5.23" x 12.01"
Item Weight:	5.51 pounds
Indoor/Outdoor Usage:	Outdoor
Power Source:	Corded Electric
Voltage:	120 Volts
Light Source Type:	A19
Lamp Type:	A19 Medium Base (E26)
Wattage:	60 watts (Max)
Number of Light Sources:	1
Installation Type:	Surface Mount
Water Resistance Level:	Water Resistant
Assembly Required:	Yes

WARRANTY AND SUPPORT

Warranty Information:

All products purchased have a 30-day replacement parts policy to ensure a fully working item. All products are covered under a 1-year warranty when purchased on Amazon. The warranty period begins on the day the product is originally shipped. The warranty covers all of the items and conditions identified in the original manufacturer's warranty.

Items specifically not covered by the warranty include loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

Customer Support:

For technical assistance, warranty claims, or replacement parts, please contact EGLO customer support. Refer to your purchase documentation for specific contact details or visit the official EGLO website. When contacting support, please have your model number (203029A) and proof of purchase readily available.