

[Manuals.plus](#) /

› [Zoomer](#) /

› Zoomer Playful Pup Instruction Manual

Zoomer 6042065

Zoomer Playful Pup Instruction Manual

Model: 6042065

Brand: Zoomer

INTRODUCTION

Welcome to the world of Zoomer Playful Pup! Your new interactive robotic dog is designed to bring joy and companionship with its realistic movements, sounds, and responsive interactions. This manual will guide you through everything you need to know to get the most out of your Playful Pup, from initial setup to advanced tricks and maintenance.



Figure 1: The Zoomer Playful Pup in a sitting position.

SETUP

1. Unboxing and Initial Charge

Carefully remove your Zoomer Playful Pup from its packaging. Locate the included USB charging cable. The Playful Pup requires **1 Lithium Polymer battery**, which is built-in. Connect the USB charging cable to the charging port on your Playful Pup and plug the other end into a USB wall adapter (not included) or a powered USB port. Allow approximately **1 hour** for a full charge, which provides about **30-40 minutes of playtime**.

2. Powering On

Once charged, locate the power button on your Playful Pup. Press and hold the button until the eyes light up and you hear a sound, indicating it is powered on. *Ensure no touch sensors are being pressed during power-on to prevent functionality issues.*

OPERATING YOUR PLAYFUL PUP

1. Voice Recognition

Your Playful Pup features sophisticated voice recognition technology. To begin, you can teach your pup its name. Speak clearly and in a quiet environment for best results. Once a name is set, the pup will respond when you call it.

2. Touch Response

The Playful Pup is designed to respond to your touch. Give your pup snuggles, cuddles, and belly rubs, and it will react with happy doggy sounds. If you stop petting, it may whimper, just like a real dog.



Figure 2: Playful Pup enjoying a belly rub.

3. Learning Tricks

Your Playful Pup can learn and perform over **25 tricks**. Use clear voice commands to train your puppy. Examples of tricks include:

- **Lie Down**
- **Shake a Paw**
- **Beg**
- **Play Dead**
- **Roll Over**

The pup will walk, bounce, pounce, and play, mimicking a real dog's movements. Refer to the quick start guide included in the box for a full list of commands and how to teach them.



Figure 3: Playful Pup performing a trick.

4. Interactive Play

Engage with your Playful Pup by calling its name, petting it, and giving commands. Its eyes will change color to indicate different moods and responses. The pup is designed for indoor use.

Video 1: Official demonstration of Zoomer Playful Pup's interactive features and tricks.

MAINTENANCE

1. Cleaning

To clean your Playful Pup, gently wipe its surface with a soft, damp cloth. Do not submerge the toy in water or use harsh chemicals, as this can damage the electronic components.

2. Battery Care

To prolong battery life, fully charge the Playful Pup before first use and after each play session. Avoid completely draining the battery frequently. If storing for an extended period, ensure the battery is partially charged (around 50%) and store in a cool, dry place.

3. Storage

When not in use, store your Playful Pup in a safe, dry place away from direct sunlight and extreme temperatures. Keep it away from dust and debris to ensure smooth operation of its moving parts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pup not responding to voice commands.	Noisy environment; unclear speech; incorrect command.	Ensure a quiet environment. Speak clearly and directly to the pup. Refer to the instruction book for correct commands.
Pup's movements are erratic or legs bend.	Obstruction in moving parts; low battery; internal malfunction.	Check for any hair or debris caught in the legs/joints. Recharge the battery fully. If issues persist, contact customer support.
Touch sensors not working.	Sensors were pressed during power-on.	Turn the pup off and then on again, ensuring no sensors are touched during the power-on sequence.
Short battery life.	Battery not fully charged; aging battery.	Ensure the pup is charged for the recommended time. Battery performance may decrease over time.

SPECIFICATIONS

- Product Dimensions:** 12.5 x 3.2 x 7.5 inches
- Item Weight:** 1.94 pounds
- Item Model Number:** 6042065
- Manufacturer Recommended Age:** 5 - 7 years
- Batteries:** 1 Lithium Polymer battery required (included)
- Manufacturer:** Spin Master
- Release Date:** November 24, 2021

WARRANTY AND SUPPORT

The Zoomer Playful Pup is covered by the **Spin Master Care Commitment**. For detailed warranty information, product support, or to report any issues, please refer to the contact information provided in the quick start guide or visit the official Spin Master website. Keep your purchase receipt as proof of purchase for warranty claims.



