

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI 10x20 ft Pop Up Canopy Tent (Model wh1010) Instruction Manual

## VINGLI wh1010

# VINGLI 10x20 ft Pop Up Canopy Tent Instruction Manual

MODEL: WH1010

## 1. SAFETY INFORMATION

---

Read all instructions carefully before setting up and using the canopy. Failure to follow these instructions may result in injury or damage to the product.

- This product should be used with caution in windy conditions and properly secured to the ground.
- Keep the canopy away from open flames, heat sources, and flammable materials.
- Regularly inspect the canopy for any signs of wear, tear, or damage and repair or replace any damaged parts immediately.
- Always supervise children and pets near the canopy.
- Ensure the canopy is set up on a flat, stable surface.
- Users should take breaks from direct sunlight exposure and use appropriate sun protection measures.
- Do not leave the canopy unattended in severe weather conditions (heavy rain, strong winds, snow).

## 2. PRODUCT OVERVIEW

---

The VINGLI 10x20 ft Pop Up Canopy Tent is designed for outdoor events, providing shade and shelter. It features a durable frame, UV-protected and waterproof fabric, and adjustable height settings.



Image: The VINGLI 10x20 ft Pop Up Canopy Tent providing shelter for an outdoor gathering.

### Key Features:

- **Easy Setup:** Designed for quick assembly and disassembly by one or two persons without tools.
- **Adjustable Height:** Offers 3 different height positions for versatility (8.2 ft to 8.8 ft peak height).
- **UV & Water Protection:** Canopy top tarp is UV coated (50+ UV sun protection, blocks 99% UV rays) and made from waterproof material.
- **Portability:** Includes an oversized rolling wheeled storage bag for convenient transport and compact storage.
- **Durable Construction:** Features a full truss structure and alloy steel frame for enhanced strength.



Image: Visual representation of the canopy's UV protection and waterproof capabilities.

### 3. SETUP INSTRUCTIONS

---

Follow these steps for a safe and efficient setup of your VINGLI Pop Up Canopy Tent.

# EINFACHER AUFBAU


## 1 SCHRITT 1

Entfalten Sie das Gestell



## 2 SCHRITT 2

Setzen Sie das Verdeck auf das Gestell

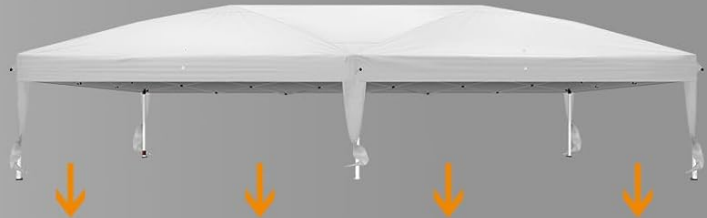

## 3 SCHRITT 3

Schieben Sie das Gestell hoch und stellen Sie die Höhe wie gewünscht ein



## 4 SCHRITT 4

An den Seitenwänden wie gewünscht aufhängen



Image: Illustrated guide for the four main steps of canopy assembly.

### 1. Step 1: Unfold the Frame

Take the fully assembled frame out of the carry bag. With a partner, gently pull the frame open from opposite sides until it is partially extended.

### 2. Step 2: Place the Canopy Fabric

Carefully place the canopy fabric over the partially extended frame. Ensure the fabric is centered and the corners align with the frame's corners. Secure the fabric to the frame using any attached fasteners (e.g., Velcro straps).

### 3. Step 3: Extend and Adjust Height

Continue to pull the frame open until it is fully extended. Push up on the central hub of the frame to lock it into place. Then, extend the legs to your desired height. Press the red button on each leg to release the locking mechanism and slide the inner leg up or down. Ensure all four legs are locked at the same height.

### 4. Step 4: Attach Sidewalls (Optional)

If using the sidewalls, attach them to the canopy frame using the provided fasteners (e.g., zippers, Velcro). Arrange them as desired for privacy or additional weather protection.

### Securing the Canopy:

Always secure the canopy to prevent it from being lifted by wind. Use the provided ropes and anchoring stakes. Attach ropes to the canopy frame and stake them firmly into the ground at an angle.




Image: Detailed view of the canopy's securing ropes, thicker crossbar, height adjustment mechanism, and anchoring stakes.

## 4. OPERATING INSTRUCTIONS

### Height Adjustment:

The canopy offers 3 height positions. To adjust the height, locate the red button on each leg. Press the button to release the locking pin, then slide the inner leg to the desired height. Ensure the pin locks securely into place at the chosen height for all four legs.

# 10 X 20 FT CANOPY

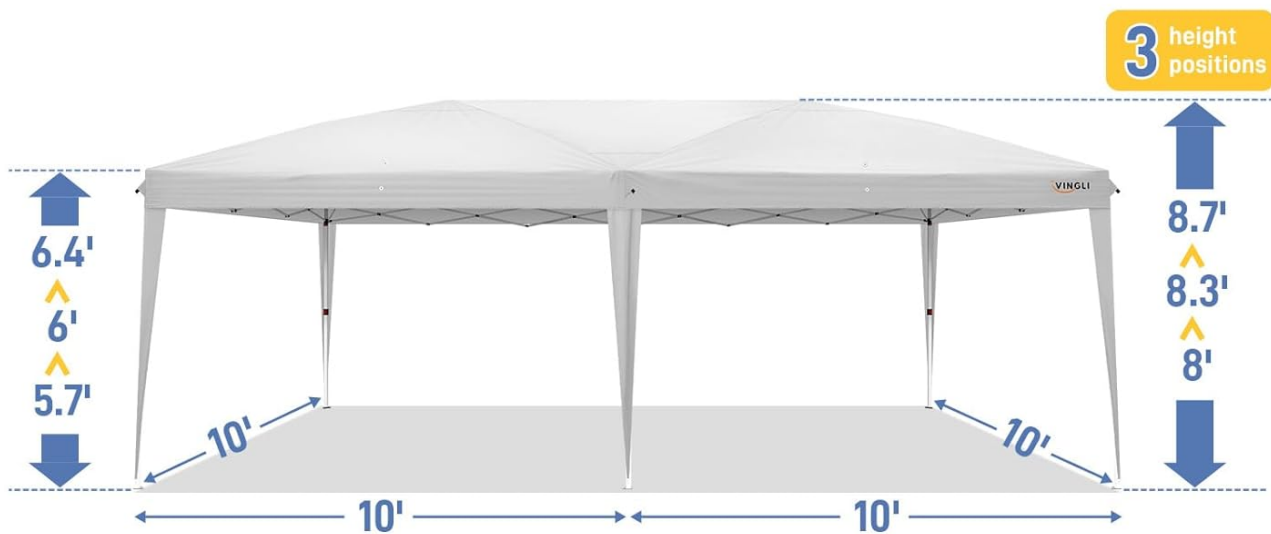

## Note:

Keep the canopy away from fire, and should not be used in heavy rain or against strong winds.

Image: Dimensions of the 10x20 ft canopy and its three adjustable height settings.

## Takedown:

To take down the canopy, reverse the setup steps. Lower the legs to their shortest position, unlock the frame, and gently push the frame inwards until it collapses. Remove the canopy fabric and sidewalls, fold them neatly, and place all components back into the wheeled carry bag.

## 5. MAINTENANCE

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before storing to prevent mildew.
- **Frame Care:** Wipe down the metal frame with a damp cloth to remove dirt and debris. Ensure all moving parts are free of obstructions.
- **Storage:** Store the canopy in its carry bag in a cool, dry place away from direct sunlight when not in use.
- **Inspection:** Periodically check all connections, fasteners, and fabric for any signs of wear, tear, or damage. Replace any damaged parts immediately.

## 6. TROUBLESHOOTING

| Problem                        | Possible Cause                                        | Solution                                                                                                                             |
|--------------------------------|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Canopy difficult to open/close | Frame parts are stiff or misaligned.                  | Ensure all locking pins are disengaged. Gently wiggle the frame to align parts. Apply silicone spray to moving joints if necessary.  |
| Water pooling on canopy top    | Canopy not fully extended or set up on uneven ground. | Ensure the frame is fully extended and locked. Adjust leg heights to ensure the canopy top is taut and slightly sloped for drainage. |
| Canopy unstable in light wind  | Not properly anchored.                                | Always use ropes and stakes to secure the canopy to the ground. Consider adding sandbags or weights to the legs for extra stability. |
| Fabric tearing or fraying      | Wear and tear, or improper handling.                  | Inspect regularly. Repair small tears with a patch kit. Avoid dragging the fabric on rough surfaces.                                 |

## 7. SPECIFICATIONS

| Feature                | Detail                                          |
|------------------------|-------------------------------------------------|
| Brand                  | VINGLI                                          |
| Model Number           | wh1010                                          |
| Dimensions (L x W x H) | 240"L x 120"W x 103"H (20 ft x 10 ft x 8.58 ft) |
| Floor Area             | 200 Square Feet                                 |
| Max Ceiling Height     | 8.8 Feet                                        |
| Material (Frame)       | Alloy Steel                                     |
| Material (Canopy)      | UV & Water Resistant Fabric                     |
| Color                  | White                                           |
| Item Weight            | 62.8 Pounds                                     |
| UV Protection          | True (50+ UV, blocks 99% UV rays)               |
| Water Resistance Level | Waterproof                                      |
| Required Assembly      | Yes                                             |
| UPC                    | 611890872556, 788211017344, 611890871054        |

## 8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact VINGLI customer service directly. Keep your purchase receipt for warranty claims.

For additional assistance, visit the [VINGLI Store on Amazon](#).

