

[Manuals.plus](#) /

› [MEDION](#) /

› Medion Life e66265 MD 43147 Stereo Radio with CD Player User Manual

MEDION MD43147

Medion Life e66265 MD 43147 Stereo Radio with CD Player User Manual

Brand: MEDION | Model: MD43147

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Medion Life e66266 MD 43147 Stereo Radio with CD Player. Please read it thoroughly before using the device and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the device is placed on a stable, level surface.
- Do not expose the device to moisture, rain, or extreme temperatures.
- Avoid blocking ventilation openings.
- Only use the provided power adapter.
- Do not attempt to repair the device yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Medion Life e66265 MD 43147 Stereo Radio with CD Player Unit
- Remote Control
- Power Adapter
- Mounting accessories (for under-cabinet installation)
- User Manual (this document)

4. PRODUCT OVERVIEW

4.1 Main Unit



Figure 1: Front view of the Medion Life e66265 MD 43147 with the CD tray open, showing control buttons on the left and navigation/volume controls on the right.

The main unit features a front-loading CD player, an integrated display, and various control buttons. On the left side of the display, you will find buttons for TIMER, SENDER-, SENDER+, REPEAT, FUNC, MEM, MODUS, STOP, EQ, and SCHLAFEN (Sleep). On the right side, there are buttons for AL1 (Alarm 1), AL2 (Alarm 2), IR sensor, AUX input, and navigation/volume controls.



Figure 2: Angled view of the Medion Life e66265 MD 43147, showcasing the side grille and the digital display indicating time and track information.

The unit's compact design allows for versatile placement. The side panels feature a grille design, contributing to both aesthetics and sound dispersion. The digital display provides clear information regarding time, radio frequency, or CD track details.

4.2 Remote Control







Figure 3: The remote control for the Medion Life e66265 MD 43147, displaying buttons for power, mode, volume, track navigation, alarm settings, timer, memory, sleep, function, equalizer, and dimmer.

The included remote control provides convenient access to all functions of the stereo radio. It includes buttons for power, mode selection, volume adjustment, track navigation, alarm settings (AL1, AL2), radio station tuning (SENDER-, SENDER+), timer, memory (MEM), sleep function (SCHLAF), function (FUNC), equalizer (EQ), and display dimmer (DIM).

5. SETUP

5.1 Power Connection

1. Connect the power adapter to the DC IN socket on the back of the unit.
2. Plug the power adapter into a standard wall outlet.

5.2 Mounting Options

The device can be used as a tabletop unit or mounted under kitchen cabinets.



Figure 4: The Medion Life e66265 MD 43147 installed neatly under a kitchen cabinet, demonstrating its space-saving mounting capability.

For under-cabinet mounting, use the provided accessories and follow the detailed instructions in the separate mounting guide (if applicable) or the general instructions for secure installation. Ensure the mounting surface is sturdy enough to support the unit's weight.

5.3 Antenna

Extend the FM wire antenna for optimal radio reception. Adjust its position to improve signal quality if needed.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the unit or remote control to turn the device on or off.

6.2 Mode Selection

Press the **MODUS** (Mode) button on the unit or remote control repeatedly to cycle through available modes: CD, FM Radio, AUX.

6.3 CD Playback

1. Press the **OPEN/CLOSE** button (if available, or gently push the CD tray) to open the CD compartment.
2. Place a CD (CD, CD-R/CD-RW compatible) with the label side facing up into the tray.
3. Close the CD compartment. The unit will automatically start playing the CD.
4. Use the **PLAY/PAUSE**, **STOP**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons for control.
5. Press **REPEAT** to repeat the current track or all tracks.

6.4 FM Radio Operation

1. Select FM Radio mode using the **MODUS** button.
2. Press **SENDER-** or **SENDER+** to manually tune to a station. Hold the button for automatic scanning.
3. To save a station: Tune to the desired station, press **MEM** (Memory), then use **SENDER-** or **SENDER+** to select a preset number, and press **MEM** again to confirm.
4. To recall a saved station: Press **MEM**, then use **SENDER-** or **SENDER+** to select the preset.

6.5 AUX Input

Connect an external audio device (e.g., smartphone, MP3 player) to the **AUX IN** jack using a 3.5mm audio cable. Select AUX mode using the **MODUS** button. Audio from the external device will now play through the stereo radio.

6.6 Alarm Function

The unit features two independent alarms (AL1, AL2).

1. Press and hold **AL1** or **AL2** button to enter alarm setting mode.
2. Use the navigation buttons to set the hour and minute.
3. Press the alarm button again to confirm each setting.
4. Select the alarm source (Buzzer, CD, or Radio) and volume level.
5. Press the alarm button one last time to activate the alarm. An alarm icon will appear on the display.
6. To deactivate a sounding alarm, press the **POWER** button. To temporarily silence (snooze), press the **SNOOZE** button (if available, or a specific button like **REPEAT** or **SCHLAFEN** might function as snooze).

6.7 Kitchen Timer

The **TIMER** function can be used as a kitchen timer.

1. Press the **TIMER** button.
2. Use the navigation buttons to set the desired countdown time.

3. Press **TIMER** again to start the countdown.
4. An audible signal will sound when the timer expires.

6.8 Display Dimmer

Press the **DIMMER** button on the unit or **DIM** on the remote control to adjust the brightness of the display.

6.9 Equalizer (EQ)

Press the **EQ** button to cycle through various preset equalizer settings (e.g., Flat, Rock, Pop, Jazz) to optimize sound output for different music genres.

6.10 Sleep Function

Press the **SCHLAFEN** (Sleep) button to activate the sleep timer. Repeatedly press the button to select the desired duration (e.g., 15, 30, 60, 90 minutes) after which the unit will automatically turn off.

7. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Player:** Keep the CD compartment clean. Avoid touching the lens. If a CD skips, try cleaning it with a soft, lint-free cloth.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Check power connections. Try a different outlet.
No sound	Volume too low, wrong mode selected, or headphones connected.	Increase volume. Ensure correct mode (CD, FM, AUX) is selected. Disconnect headphones if present.
CD not playing/skipping	CD dirty, scratched, or inserted incorrectly.	Clean the CD. Try a different CD. Ensure CD is inserted correctly.
Poor radio reception	Antenna not extended or poor signal area.	Fully extend and adjust the FM antenna. Try repositioning the unit.
Remote control not working	Batteries depleted or obstruction between remote and unit.	Replace remote control batteries. Ensure no obstructions block the IR sensor.

9. SPECIFICATIONS

Feature	Detail
Model Number	MD43147
Brand	MEDION
Dimensions (W x D x H)	30 x 21 x 6.8 cm

Feature	Detail
Weight	1.42 kg
Power Output	2 x 2 W RMS
Power Source	Electric with cable
Tuner Technology	PLL FM
Supported Radio Bands	FM
CD Compatibility	CD, CD-R/CD-RW
Connectivity	AUX Input
Special Features	2 Alarms, Kitchen Timer, Sleep Function, Equalizer, Dimmer

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official MEDION website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079S5B6BD>

More documents and user manuals: <https://manuals.plus/>