

Bosch EASY AQUATAK-100

Bosch Easy Aquatak 100 High-Pressure Washer User Manual

Model: EASY AQUATAK-100

1. INTRODUCTION

Thank you for choosing the Bosch Easy Aquatak 100 High-Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read these instructions carefully before first use and keep them for future reference.

The Bosch Easy Aquatak 100 is designed for light to medium-duty cleaning tasks around the home, such as washing cars, patios, garden furniture, and other outdoor surfaces. Its compact design and electric power source make it convenient for various applications.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This includes:

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear appropriate safety gear:** Always wear safety glasses or goggles, and protective clothing to prevent injury from high-pressure spray.
- **Keep children and pets away:** Do not allow children or untrained persons to operate this appliance.
- **Electrical safety:** Ensure the power supply matches the voltage specified on the rating plate. Use only extension cords rated for outdoor use and properly grounded. Never operate the unit with a damaged cord or plug.
- **Water connection:** Connect the pressure washer to a cold water supply only. Do not use hot water. Ensure the water supply hose is free from kinks and damage.
- **Avoid spraying people or animals:** The high-pressure jet can be dangerous if misused. Never direct the jet at people, pets, or electrical equipment.
- **Secure footing:** Always maintain proper footing and balance. Do not overreach.
- **Disconnect power:** Always unplug the pressure washer from the power outlet before performing any

maintenance, cleaning, or when not in use.

3. SETUP

Before operating your Bosch Easy Aquatak 100, follow these steps for proper setup:

1. **Unpack the unit:** Carefully remove all components from the packaging. Ensure all parts are present and undamaged.
2. **Assemble the handle (if required):** Follow the instructions in the quick start guide for attaching the handle.
3. **Connect the high-pressure hose:** Securely attach one end of the high-pressure hose to the outlet on the pressure washer and the other end to the spray gun. Ensure connections are tight to prevent leaks.
4. **Connect the water supply hose:** Attach a standard garden hose (not supplied) to the water inlet on the pressure washer. Ensure the water supply is turned on fully before starting the unit.
5. **Connect the power cord:** Plug the power cord into a suitable, grounded electrical outlet.



Image: The compact design of the Bosch Easy Aquatak 100 allows for easy transport and setup. A person is shown carrying the main unit and the spray gun, highlighting its portability.

4. OPERATING INSTRUCTIONS

Once the unit is set up, follow these steps to operate your pressure washer:

1. **Turn on water supply:** Ensure the water tap is fully open.
2. **Purge air from the system:** Squeeze the trigger on the spray gun until a steady stream of water flows out, indicating that all air has been purged from the pump and hose.
3. **Turn on the pressure washer:** Switch the ON/OFF button to the "ON" position. The motor will start.
4. **Begin cleaning:** Direct the spray gun nozzle at the surface to be cleaned, maintaining a safe distance. Adjust the nozzle for the desired spray pattern (e.g., fan spray for wider coverage, pencil jet for stubborn dirt).
5. **Using detergent (if applicable):** If your model includes a detergent bottle or system, fill it with appropriate pressure washer detergent. Attach it to the spray gun as per instructions. Apply detergent to the surface, allow it to soak, then rinse thoroughly with clear water.



Image: A man is shown using the Bosch Easy Aquatak 100 with a detergent attachment to apply foam while washing a car. This demonstrates the unit's capability for vehicle cleaning.



Image: A woman is cleaning an outdoor air conditioning unit with the Bosch Easy Aquatak 100. This illustrates the versatility of the pressure washer for various household cleaning tasks.

To stop operation: Release the trigger, switch the ON/OFF button to "OFF", and turn off the water supply. Squeeze the trigger again to release any residual pressure in the system.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning the nozzle:** If the nozzle becomes clogged, use the supplied nozzle cleaning tool to clear any debris.
- **Water inlet filter:** Periodically check and clean the water inlet filter to prevent debris from entering the pump.
- **Hose and connections:** Inspect the high-pressure hose and all connections for wear, damage, or leaks before each use. Replace damaged parts immediately.
- **Storage:** Store the pressure washer in a dry, frost-free area. If storing for extended periods, especially in cold climates, ensure the pump is drained of water to prevent freezing damage. Run a pump protector solution through the unit if available.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power supply; ON/OFF switch in "OFF" position; Thermal overload activated.	Check power connection and outlet; Switch to "ON"; Allow unit to cool down for 5-10 minutes.
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump; Leaks in hose/connections.	Ensure water tap is fully open; Clean nozzle; Purge air from system; Check and tighten connections.
Water leaks	Loose connections; Damaged O-rings or seals.	Tighten all connections; Inspect and replace damaged O-rings/seals.
Motor runs intermittently	Air in pump; Water supply issues.	Purge air from system; Check water supply for kinks or restrictions.

If you encounter problems not listed here or if solutions do not resolve the issue, please contact Bosch customer support.

7. SPECIFICATIONS

- **Model:** Bosch Easy Aquatak 100
- **Type:** High-Pressure Washer
- **Power Source:** Electric Corded
- **Materials:** Metal components
- **Exterior Finish:** Stainless Steel (referring to internal components or specific parts)
- **Item Dimensions (L x W x H):** 40 x 20 x 31.5 cm
- **Inlet Connection Type:** Hose Thread
- **Certifications:** CE, CSA

8. WARRANTY AND SUPPORT

Your Bosch Easy Aquatak 100 High-Pressure Washer comes with a manufacturer's warranty. Please refer to the separate warranty document included with your purchase for details on coverage and terms. For technical support, spare parts, or warranty claims, please contact Bosch customer service through their official website or the contact information provided in your product documentation.

You can visit the official Bosch store for more information and products: [Bosch Store](#)