

Z-Shade ZSB10EVRBL

Z-Shade Everest 10x10 Instant Canopy User Manual

Model: ZSB10EVRBL

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Z-Shade Everest 10x10 Instant Outdoor Steel-Frame Canopy Pop-Up Tent. Please read all instructions carefully before setup and operation to ensure proper use and longevity of the product.

The Z-Shade Everest canopy is designed to provide temporary shelter from sun and light rain for outdoor activities such as picnics, camping, and sporting events. It features a durable, powder-coated steel frame and 150D polyester fabric offering 99% UV sun protection and 100 square feet of shading coverage.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- This product is intended for outdoor activities and picnics.
- Avoid using the canopy during extreme weather conditions, such as high winds, heavy rain, or storms. Always take down the canopy in such conditions to prevent damage or injury.
- Ensure a stable anchor by using the included stakes. Proper anchoring is crucial to prevent the canopy from lifting or collapsing.
- While the canopy offers 99% UV protection, prolonged exposure to direct sunlight should still be approached with caution.
- Do not use open flames or heating devices inside or near the canopy.
- Keep children and pets away from the canopy during setup and takedown.
- This canopy is not designed to be a permanent shelter.

COMPONENTS LIST

Before beginning assembly, ensure all components are present:

- Pre-assembled Steel Frame (1)
- Canopy Top (150D Polyester Fabric) (1)
- Stakes (4)
- Oversized Roller Bag (1)



**DON'T LET THE HOT
SUN SPOIL YOUR FUN!**

Image: All components of the Z-Shade Everest canopy, including the folded frame, the canopy fabric, and the roller bag for transport and storage.

SETUP INSTRUCTIONS

The Z-Shade Everest canopy is designed for quick and easy setup. It comes fully assembled and can be set up in minutes.

1. **Step 1: Unpack the Canopy.** Remove the canopy frame and top from the oversized roller bag. Place the folded frame in the desired setup location.

- Step 2: Partially Open the Frame.** With a person at each corner, gently pull the legs outwards, partially extending the frame. Do not fully extend yet.
- Step 3: Attach the Canopy Top.** Drape the canopy fabric over the partially opened frame. Secure the corners of the fabric to the frame's corner posts. Ensure the fabric is centered and taut.
- Step 4: Fully Extend the Frame.** Continue pulling the legs outwards until the frame is fully extended and the top canopy locks into place. You may need to push up on the center hub to fully extend the canopy.
- Step 5: Adjust Leg Height.** The frame has 3 height adjustments. Press the push-button sliders on each leg to extend them to your desired height. Ensure all legs are set to the same height for stability.
- Step 6: Secure with Stakes.** Use the provided stakes to anchor each leg of the canopy to the ground. This is crucial for stability, especially in light wind conditions.



Image: The Z-Shade Everest canopy fully set up, providing shade in an outdoor environment.

OPERATING INSTRUCTIONS

Once set up, the Z-Shade Everest canopy provides instant shade and protection.

- **Shade and UV Protection:** The 150D polyester fabric provides 100 square feet of shading coverage and

99% UV sun protection. Position the canopy to maximize shade based on the sun's position.

- **Rain Protection:** The canopy offers protection from light rain. In case of heavy rain, water may pool on the canopy top. Regularly push up on the underside of the canopy to release pooled water to prevent damage to the frame or fabric.
- **Height Adjustment:** The canopy features 3 height adjustments. To change the height, press the push-button sliders on each leg and slide the inner leg to the desired position. Ensure all legs are adjusted equally.

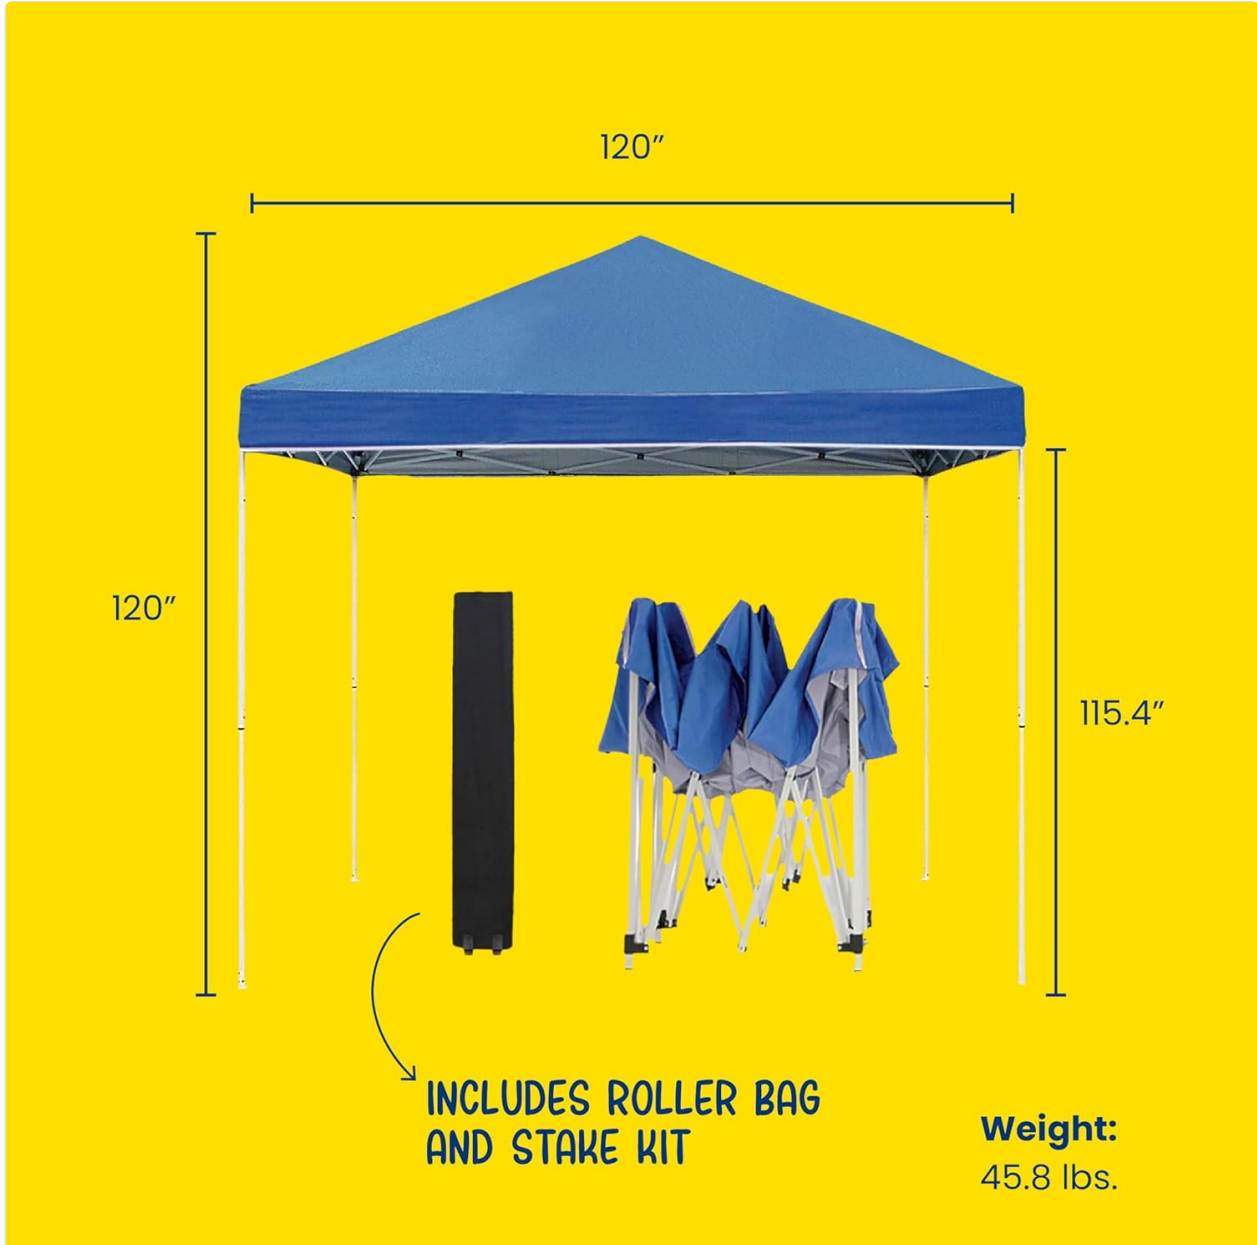


Image: The Z-Shade Everest canopy providing ample shade for a picnic table with people enjoying an outdoor meal.

MAINTENANCE AND STORAGE

Proper maintenance and storage will extend the life of your Z-Shade Everest canopy.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** The steel frame is powder-coated for rust resistance. If scratches occur, touch up with rust-inhibiting paint to prevent corrosion.
- **Drying Before Storage:** Always ensure the canopy fabric and frame are completely dry before folding

and storing them in the roller bag. Storing a damp canopy can lead to mold, mildew, and fabric degradation.

- **Storage:** Store the canopy in its oversized roller bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Disassembly:** To disassemble, reverse the setup steps. Lower the legs, unlock the frame, and gently push the frame inwards until it is fully collapsed. Carefully remove the canopy top.



Image: The Z-Shade Everest canopy frame and fabric neatly folded and stored inside its included roller bag, ready for transport or storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy is unstable or wobbly.	Not properly staked; legs not extended to equal height; uneven ground.	Ensure all stakes are firmly in the ground. Verify all legs are set to the same height. Move to more level ground if possible.
Water pooling on canopy top during rain.	Heavy rainfall exceeding drainage capacity; canopy not taut enough.	Periodically push up on the underside of the canopy to release pooled water. Ensure canopy fabric is stretched tautly over the frame. Consider taking down in heavy rain.

Problem	Possible Cause	Solution
Difficulty extending or collapsing the frame.	Frame joints are stiff or misaligned; debris in joints.	Ensure all push-button sliders are fully depressed when adjusting height. Check for any obstructions in the joints. Apply a silicone-based lubricant to moving parts if necessary.

SPECIFICATIONS

- **Brand:** Z-Shade
- **Model:** ZSB10EVRBL
- **Dimensions (L x W x H):** 120" x 120" x 115.4" (10 ft x 10 ft x 9.6 ft)
- **Coverage Area:** 100 square feet
- **Frame Material:** Powder-coated Alloy Steel
- **Canopy Material:** 150D Polyester Fabric
- **UV Protection:** 99%
- **Water Resistance Level:** Water Resistant
- **Item Weight:** 47.8 Pounds
- **Assembly Required:** No (Pre-assembled frame)
- **Included Accessories:** Stakes, Oversized Roller Bag

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Z-Shade customer service. Refer to your purchase receipt for specific warranty terms and conditions.

Contact Information: Please visit the official Z-Shade website or refer to the contact details provided at the point of purchase for support.

Note: Protection plans may be available for purchase separately. Refer to your retailer for details.