

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hitachi](#) /

› [Hitachi 372535 Bracket \(A\) C10Fshc Instruction Manual](#)

Hitachi 372535

Hitachi 372535 Bracket (A) C10Fshc Instruction Manual

Model: 372535 | Brand: Hitachi (now Metabo HPT)

INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of the Hitachi 372535 Bracket (A) C10Fshc. This component is a genuine Hitachi replacement part, designed to ensure compatibility and performance with specified Hitachi power tools. Please read this manual thoroughly before proceeding with installation or use.

PRODUCT OVERVIEW

The Hitachi 372535 Bracket (A) is a critical replacement component for the C10Fshc model. It is manufactured to Hitachi's high standards, ensuring durability and precise fit. As Hitachi Power Tools has transitioned to Metabo HPT, this part maintains the same quality and design.

- Genuine Hitachi (now Metabo HPT) replacement part.
- Designed for specific compatibility with the C10Fshc model.
- Ensures proper function and structural integrity of the power tool.

Image: The Hitachi 372535 Bracket (A) C10Fshc, a black plastic component with a cylindrical opening and a flat base, featuring part numbers embossed on its surface.

INSTALLATION AND SETUP

Safety First: Always disconnect the power tool from its power source before attempting any installation or replacement. Wear appropriate personal protective equipment (PPE), such as safety glasses and gloves.

1. **Identify the Original Part:** Locate the existing bracket on your C10Fshc power tool that requires replacement.
2. **Remove Old Bracket:** Carefully remove any fasteners (screws, bolts, etc.) securing the old bracket. Note their positions and types for reassembly.
3. **Inspect Area:** Clean the area where the new bracket will be installed, ensuring no debris or obstructions.
4. **Position New Bracket:** Align the Hitachi 372535 Bracket (A) into its correct position.
5. **Secure New Bracket:** Reinstall the fasteners, tightening them securely but without over-tightening, which could damage the bracket or tool housing.
6. **Functionality Check:** After installation, manually check the movement or stability of the component the bracket supports to ensure proper function.

ensure proper function before reconnecting power.

MAINTENANCE

As a replacement part, the 372535 Bracket (A) requires minimal maintenance.

- **Regular Inspection:** Periodically inspect the bracket for any signs of wear, damage, or loosening of fasteners.
- **Cleaning:** Keep the bracket and surrounding area clean from dust and debris to prevent interference with moving parts (if applicable).
- **Storage:** Store any spare brackets in a dry, clean environment away from extreme temperatures.

TROUBLESHOOTING

If you encounter issues after installing the 372535 Bracket (A), consider the following:

- **Loose Fit:** Ensure all fasteners are properly tightened. Refer to the power tool's main instruction manual for specific torque specifications if available.
- **Incorrect Alignment:** Verify that the bracket is correctly oriented and aligned with its mating components.
- **Persistent Issue:** If the problem persists, it may indicate an issue with another component of the power tool or incorrect part identification. Consult a qualified service technician or refer to the complete service manual for your C10Fshc tool.

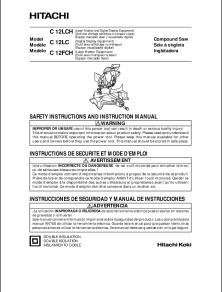
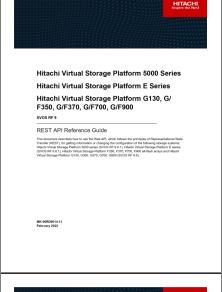
SPECIFICATIONS

Feature	Detail
Part Number	372535
Item Model Number	372535
Brand	Hitachi (Metabo HPT)
Included Components	Hitachi 372535 BRACKET (A)C10FSHC
Item Weight	1 pounds
Product Dimensions	1 x 1 x 1 inches
Item Package Quantity	1
Measurement System	Metric
Batteries Required	No
Manufacturer	Koki Holdings America, Ltd
Date First Available	February 13, 2018

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your Hitachi (Metabo HPT) power tool or genuine replacement parts, please refer to the official Hitachi or Metabo HPT website or contact their customer service directly. Always use genuine replacement parts to maintain warranty validity and ensure optimal performance.

Related Documents - 372535

	<p>Hitachi PSC-6RAD RAC-Adapter Installationsanleitung</p> <p>Detaillierte Installationsanleitung für den Hitachi PSC-6RAD RAC-Adapter, ein Steuerungszubehör für Klimaanlagen. Erfahren Sie, wie Sie diese Komponente sicher und korrekt installieren.</p>
	<p>Hitachi Virtual Storage Platform REST API Reference Guide</p> <p>A comprehensive guide to using the REST API for Hitachi Virtual Storage Platform 5000 Series, E Series, G130, G/F350, G/F370, G/F700, G/F900, covering system configuration, user management, volume allocation, and more.</p>
	<p>Hitachi RC43140 Remote Control Guide</p> <p>A comprehensive guide to the Hitachi RC43140 remote control, detailing original and replacement button functions for enhanced usability.</p>
	<p>Hitachi C12LCH/C12LC/C12FCH Compound Saw Safety and Instruction Manual</p> <p>This manual details safety instructions, operation, and maintenance for Hitachi C12LCH, C12LC, and C12FCH compound saws. Learn to safely use these precision cutting tools for wood and aluminum sash.</p>
	<p>Hitachi Virtual Storage Platform REST API Reference Guide</p> <p>A comprehensive guide to using the REST API for Hitachi Virtual Storage Platform 5000 Series, E Series, G130, G/F350, G/F370, G/F700, G/F900 storage systems with SVOS RF 9.8.1 and 9.6.</p>
	<p>Hitachi Ops Center Installation and Configuration Guide</p> <p>This manual provides comprehensive information for the installation and configuration of Hitachi Ops Center, a system designed to optimize data center operations through integrated configuration, analytics, automation, and copy data management.</p>