

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Z-Shade](#) /

› [Z-Shade 20 x 10 Foot Everest Instant Canopy User Manual](#)

Z-Shade Everest Instant Canopy (20 x 10 Foot)

Z-Shade 20 x 10 Foot Everest Instant Canopy User Manual

Model: Everest Instant Canopy (20 x 10 Foot)

1. INTRODUCTION

Thank you for choosing the Z-Shade 20 x 10 Foot Everest Instant Canopy. This manual provides essential information for the safe and effective use, setup, maintenance, and troubleshooting of your canopy. Please read this manual thoroughly before assembly and retain it for future reference.

The Z-Shade Everest Instant Canopy is designed to provide instant shade and shelter for various outdoor activities, including camping, picnics, outdoor events, and patio use. Its robust steel frame and easy pop-up design ensure quick setup and reliable performance.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Ensure the canopy is properly secured during use. Use all provided stakes and guy ropes to anchor the canopy firmly to the ground.
- Avoid using the canopy in extreme weather conditions, including strong winds, heavy rain, lightning, or snow. Disassemble and store the canopy if adverse weather is expected.
- Be aware of potential hazards from prolonged UV exposure, even under the canopy. Use additional sun protection as needed.
- Do not use open flames or heating appliances inside or near the canopy. The fabric is not fireproof.
- Keep children and pets away from the canopy during setup and takedown to prevent accidents.
- Regularly inspect the frame and fabric for any signs of wear or damage. Do not use if damaged.
- Do not hang heavy objects from the canopy frame.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Z-Shade Everest Instant Canopy Frame (Pre-assembled)

- 1 x Canopy Top Fabric
- Stakes for ground anchoring
- Oversized Roller Bag for storage and transport

4. SETUP INSTRUCTIONS

The Z-Shade Everest Instant Canopy features a pop-up design for quick and easy assembly. No tools are required.

4.1 Unfolding the Frame

1. Place the roller bag on a flat, level surface. Unzip the bag and carefully remove the folded canopy frame.
2. With two people, grasp two opposite outer legs of the frame. Slowly pull the frame outwards, allowing it to begin expanding.
3. Continue pulling until the frame is approximately halfway open.



Image: The Z-Shade Everest Instant Canopy in its fully extended state, showcasing its large coverage area.

4.2 Attaching the Canopy Top

1. Drape the canopy top fabric over the partially opened frame. Ensure the Z-Shade logo is positioned correctly on one of the corners.
2. Secure the corners of the fabric to the frame's corner posts using the hook-and-loop fasteners or clips provided on the fabric.

4.3 Extending and Locking the Frame

1. From the center of the canopy, push upwards on the central hub until the frame fully extends and locks into place. You should hear a click.
2. Extend each leg downwards until it clicks into one of the three height adjustment settings. Ensure all legs are at the same height for stability.

SET UP IN MINUTES

UNFOLD, LOCK, AND ANCHOR

No tools required! Just expand the frame, lock canopy arms into place, extend the legs, and pound in the ground-stakes (if using). To store, reverse the set-up steps and stow the canopy in the included rolling storage bag.



Image: A visual guide demonstrating the steps to set up the canopy, including unfolding the frame, extending the legs, and securing it.

4.4 Securing the Canopy

1. Use the provided stakes to anchor each leg to the ground. For added stability, attach guy ropes to the canopy corners and stake them into the ground at an angle.
2. Ensure all connections are secure before leaving the canopy unattended.

5. OPERATING INSTRUCTIONS

The Z-Shadow Everest Instant Canopy is designed for temporary outdoor use, providing shade and light rain protection.

- **Shade and Rain Protection:** The canopy offers 200 square feet of coverage, providing ample shade and protection from light rain. It is not intended for heavy downpours or as a permanent shelter.
- **Height Adjustment:** The canopy features 3 height adjustments. To adjust, depress the locking pins on each leg and slide the leg to the desired height. Ensure all legs are locked at the same height.
- **Portability:** The included oversized roller bag facilitates easy transport and storage of the canopy.



Image: The Z-Shade canopy providing shade over a long dining table setup on a patio, illustrating its use for events.

6. MAINTENANCE

Proper maintenance will extend the life of your Z-Shade canopy.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** The steel frame is powder-coated for rust resistance. Wipe down the frame with a damp cloth as needed. If any rust appears, clean it and apply a rust-inhibiting paint.
- **Storage:** Always ensure the canopy fabric and frame are completely dry before storing them in the roller bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect all frame components, fabric, stakes, and the roller bag for wear, tears, bends, or damage. Replace damaged parts as necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy difficult to open/close	Frame joints are stiff or misaligned.	Ensure the frame is on a level surface. Gently wiggle joints to loosen. Apply a silicone-based lubricant to moving parts if necessary.

Problem	Possible Cause	Solution
Canopy unstable or wobbling	Legs not fully extended/locked; not properly staked; uneven ground.	Ensure all legs are fully extended and locked at the same height. Use all provided stakes and guy ropes. Relocate to a more level surface if possible.
Water pooling on canopy top	Insufficient tension in fabric; heavy rain.	Ensure fabric is tautly attached to the frame. If heavy rain, consider taking down the canopy to prevent damage.
Tears or holes in fabric	Abrasion, sharp objects, or prolonged exposure.	Patch small tears with a fabric repair kit. For large damage, replacement canopy tops may be available from Z-Shade.

8. SPECIFICATIONS

Brand	Z-Shade
Model	Everest Instant Canopy (20 x 10 Foot)
Color	White
Item Weight	81.5 Pounds
Product Dimensions (L x W x H)	240"L x 120"W x 116.4"H (Fully Extended)
Coverage Area	200 Square Feet
Frame Material	Alloy Steel (Powder-Coated)
Pole Material Type	Alloy Steel
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	True
Assembly Required	No (Pop-up design)
Recommended Uses	Camping, Outdoor Activities, Picnic, Events
UPC	854441002075
ASIN	B079SSZZ33

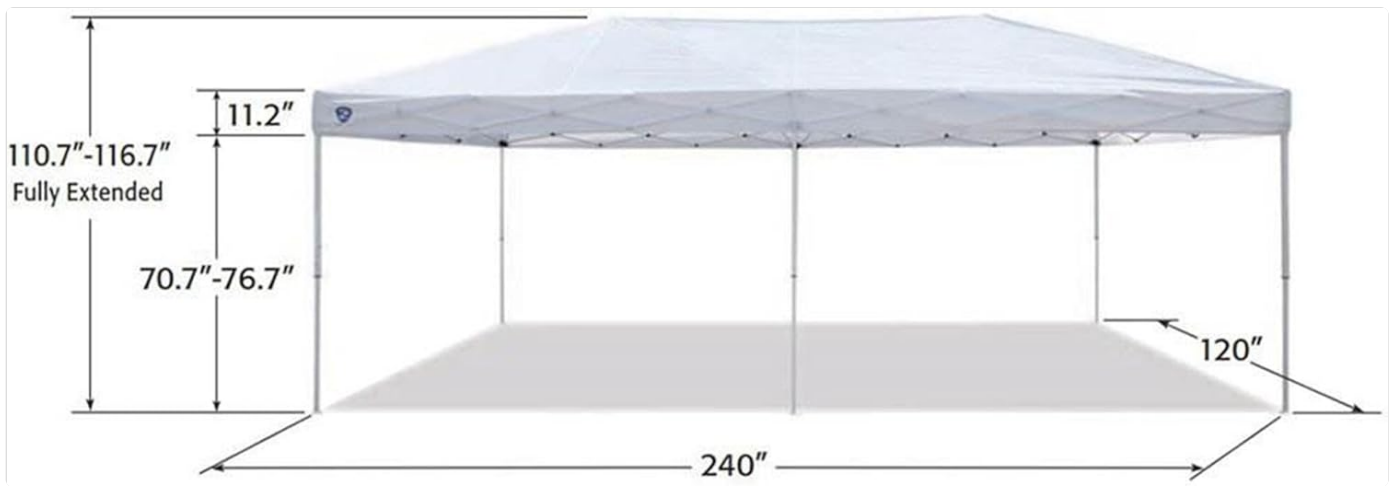


Image: A diagram illustrating the key dimensions of the Z-Shade Everest Instant Canopy, including length, width, and adjustable height ranges.

9. WARRANTY INFORMATION

Z-Shade products are manufactured to high-quality standards. For specific warranty details regarding your Everest Instant Canopy, please refer to the warranty card included with your purchase or visit the official Z-Shade website. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact Z-Shade customer support. Contact information can typically be found on the product packaging or the official Z-Shade website.

You can also visit the [Z-Shade Store on Amazon](#) for more product information and support resources.