

[manuals.plus](#) /› [PureMate](#) /› [PureMate 43-inch Tower Fan Instruction Manual](#)

PureMate PM850

PureMate 43-inch Tower Fan Instruction Manual

Model: PM850

1. SAFETY INFORMATION

Please read all instructions carefully before using this appliance and retain for future reference. Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the fan with a damaged cord or plug.
- Keep the fan away from water and moisture. Do not immerse in water or other liquids.
- Do not insert fingers or foreign objects into the grille while the fan is operating.
- Unplug the fan from the power outlet when not in use, when moving it, or before cleaning.
- This appliance is for indoor use only.
- Keep out of reach of children.

2. PRODUCT OVERVIEW

The PureMate 43-inch Tower Fan (Model PM850) is designed to provide efficient and comfortable air circulation for your home or office. It features multiple speed and wind modes, oscillation, a timer, and an aroma function for enhanced comfort.

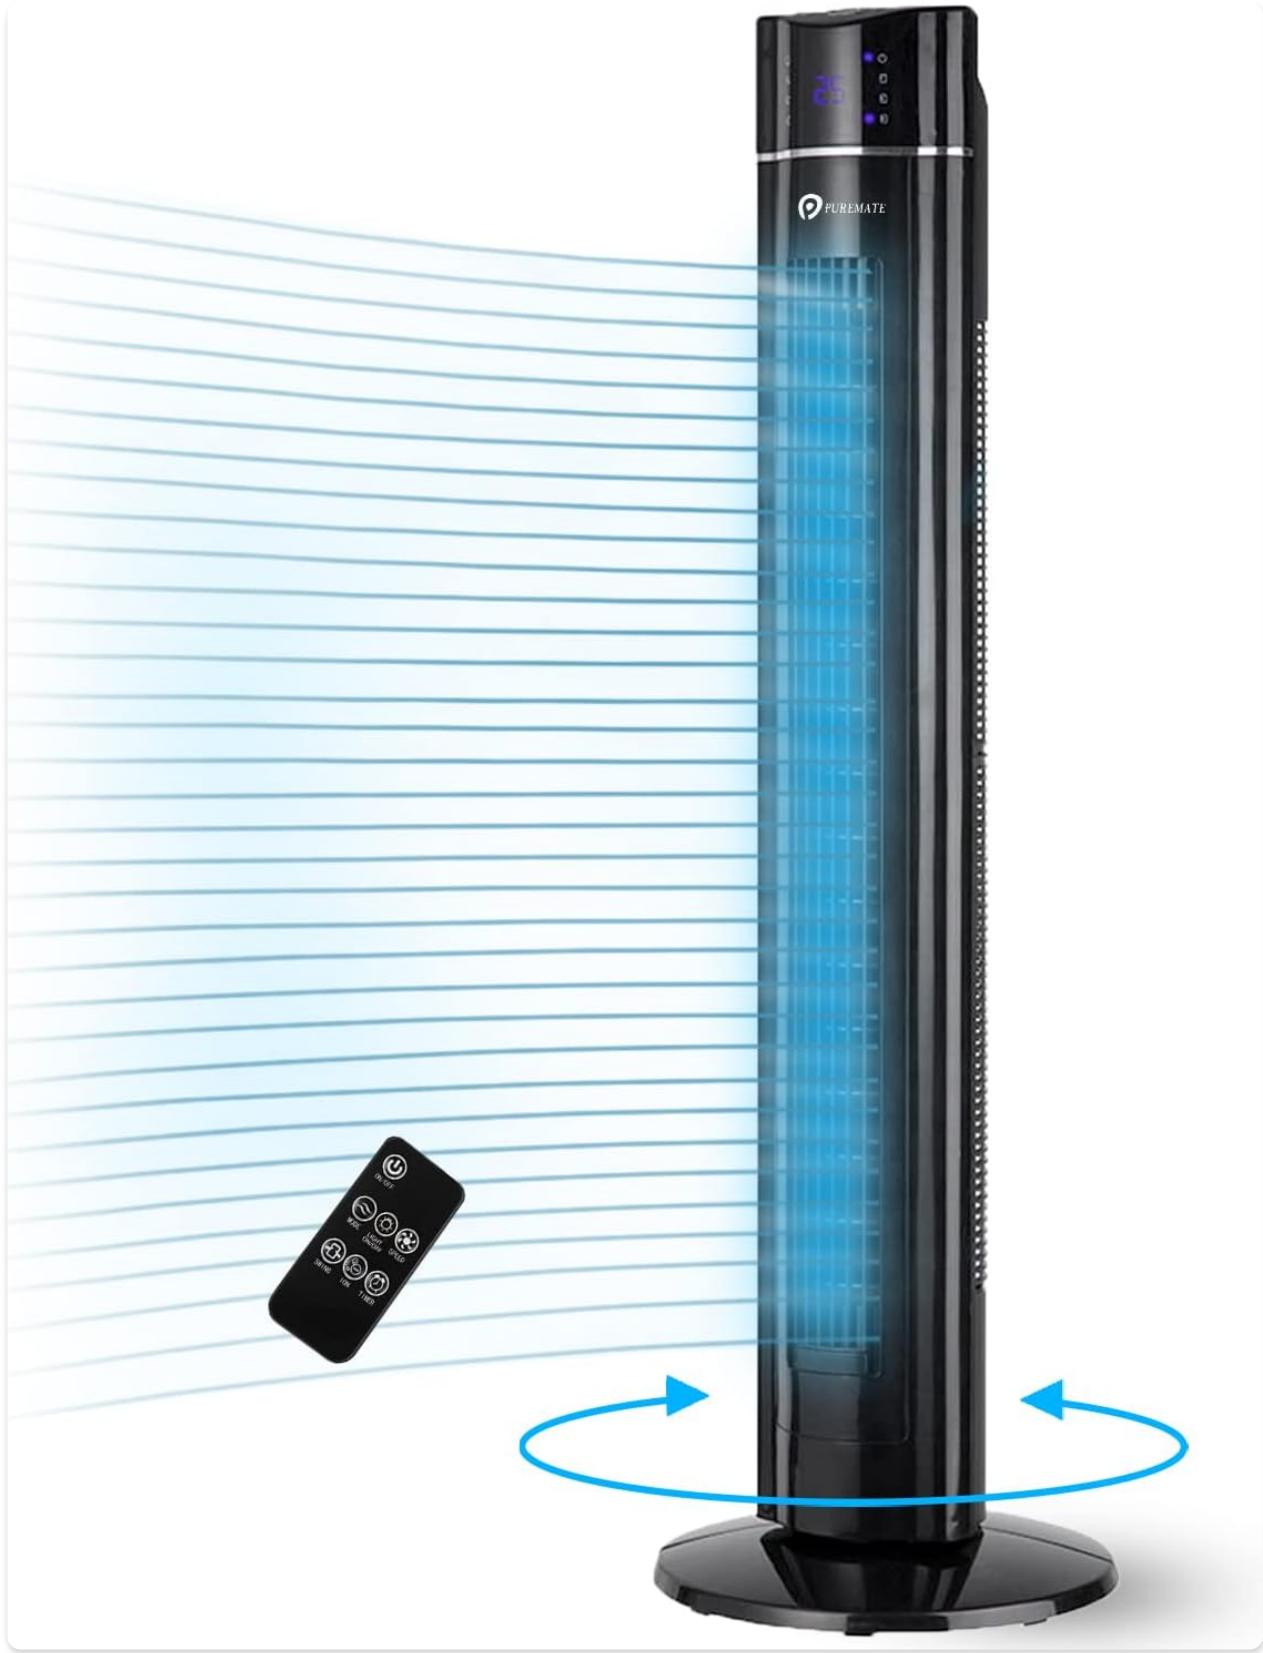


Image: The PureMate 43-inch Tower Fan in black, showing its sleek design, the remote control, and an illustration of air movement.

Key Features:

- **3 Wind Modes:** Normal, Natural, and Sleep for varied comfort.
- **3 Speed Settings:** Low, Medium, and High to adjust airflow intensity.
- **70-Degree Oscillation:** Provides widespread air distribution.
- **8-Hour Timer:** Allows for automatic shut-off.
- **Remote Control:** For convenient operation from a distance.

- **Aroma Function:** Integrated tray for essential oils to diffuse fragrance.
- **Air Purifier:** Helps improve air quality.
- **Large LED Display:** Clear indication of settings and room temperature.
- **Quiet Operation:** Designed for low noise levels, ideal for bedrooms.



Image: Detailed diagram of the fan's control panel, illustrating the various buttons and their corresponding functions such as ON/OFF, Speed, Mode, and Oscillation.

3. SETUP

The PureMate Tower Fan requires minimal assembly. Follow these steps to set up your fan:

1. Carefully remove all packaging materials from the fan and its components.
2. Attach the base to the main fan unit. Align the screw holes on the base with those on the bottom of the fan.
3. Secure the base using the provided screws. Typically, four screws are used to firmly attach the base.
4. Place the fan on a firm, level surface.
5. Plug the power cord into a suitable electrical outlet.

Dimensions



Image: The PureMate Tower Fan with its height (109 cm) and base width (31.5 cm) clearly marked, illustrating its compact and space-saving design.

4. OPERATING INSTRUCTIONS

Your PureMate Tower Fan can be operated using the control panel on top of the unit or the included remote control.

4.1 Power On/Off

- Press the **ON/OFF** button on the control panel or remote control to turn the fan on or off.

4.2 Adjusting Speed

- Press the **Speed** button repeatedly to cycle through Low, Medium, and High settings. The current speed will be indicated on the LED display.

4.3 Selecting Wind Mode

- Press the **Mode** button repeatedly to select Normal, Natural, or Sleep wind mode.
- **Normal Mode:** Provides a constant airflow.
- **Natural Mode:** Simulates a natural breeze with varying fan speeds.
- **Sleep Mode:** Gradually decreases fan speed and dims the LED display for undisturbed sleep.



Image: The PureMate Tower Fan demonstrating its three speed settings (Low, Medium, High) and three wind modes (Normal, Natural, Sleep) for customized comfort.

4.4 Oscillation Function

- Press the **OSC** (Oscillation) button to activate or deactivate the 70-degree oscillation feature, which

helps distribute air across a wider area.

4.5 Timer Function

- Press the **Timer** button repeatedly to set the desired operating time, from 1 to 8 hours, in 1-hour increments. The fan will automatically turn off after the set time.

4.6 Aroma Function

- Locate the aroma tray on the back or side of the fan.
- Pull out the tray and add a few drops of your preferred essential oil onto the sponge pad.
- Slide the tray back into its slot. The fan's airflow will diffuse the aroma.



Image: A close-up view of the PureMate Tower Fan's aroma essential oils tray, showing how to add drops of oil for fragrance diffusion.

4.7 Remote Control

- The remote control provides full functionality of the fan from a distance. Ensure batteries are correctly inserted.
- Store the remote control in the designated slot on the fan when not in use to prevent misplacement.

Handy Remote Control

A user-friendly remote gives you full control



Image: A hand holding the remote control, demonstrating its use to operate the PureMate Tower Fan from a comfortable distance.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your PureMate Tower Fan.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to remove dust from the air inlet and outlet grilles.
- **Aroma Tray:** Periodically clean the aroma tray and replace the sponge pad if it becomes discolored or worn.
- **Storage:** When not in use for extended periods, unplug the fan, clean it, and store it in a cool, dry place,

preferably in its original packaging.

Caution: Always unplug the fan before cleaning or performing any maintenance.

6. TROUBLESHOOTING

If you encounter issues with your PureMate Tower Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Power button not pressed; Remote control batteries dead.	Check if the fan is plugged in and the outlet is working. Press the power button firmly. Replace remote control batteries.
Weak airflow.	Fan speed too low; Air inlets/outlets blocked by dust.	Increase fan speed. Clean the air inlets and outlets.
Fan makes unusual noise (rattling).	Loose components; Fan not on a level surface.	Ensure the base is securely attached. Place the fan on a stable, flat surface. If noise persists, contact customer support.
LED display is too bright at night.	Display light is active.	Use the 'Night Mode' or 'Light Off' button on the remote control or control panel to dim/turn off the display light. Note: Some models may reactivate the light upon power cycle.
Fan turns on/off unexpectedly.	Interference from other remote controls (e.g., TV remote).	Relocate the fan away from other devices that use infrared remote controls, or be mindful of other remote usage.
Loud beeping sound when changing settings.	Normal operational feedback.	This is a design feature. There is no option to disable the beeping sound.

7. SPECIFICATIONS

Feature	Detail
Brand	PureMate
Model Number	PM850

Feature	Detail
Colour	Tower_fan_black
Product Dimensions	31.5 x 31.5 x 109 cm
Item Weight	4.3 kg
Power / Wattage	60 watts
Voltage	230 Volts
Noise Level	52 dB
Oscillation	70 degrees
Timer	Up to 8 hours
Special Features	Aroma Function, Air purifier, Portable, Oscillating, Lightweight, Bladeless, Timer, Remote Controlled, Quiet Operation, Safety Certified

8. WARRANTY AND SUPPORT

PureMate products are manufactured with durability and quality in mind. For specific warranty details and customer support, please refer to the warranty card included with your product or visit the official PureMate website.

For further assistance, you may contact PureMate customer service through their official channels. You can also visit the [PureMate Store on Amazon](#) for more information and product registration.