

Lifetime Stealth Pro Angler 118

Emotion Stealth Pro Angler 118 Fishing Kayak

USER MANUAL

Model: Stealth Pro Angler 118 | Brand: Lifetime

INTRODUCTION

This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your Lifetime Emotion Stealth Pro Angler 118 Fishing Kayak. Designed for stability and functionality, this kayak offers an excellent platform for angling enthusiasts.

Key features include:

- Adjustable framed seating system with three settings: high for fishing, low for paddling, and reclining for relaxation.
- Innovative Combination Tunnel Hull designed to aggressively cut through the water while gradually transitioning into a tunnel hull for tracking performance.
- High initial stability hull allows for stand-up casting.
- Comes with 2 Flambeau Tackle Boxes and 2 Flush Mount Rod Holders.

SETUP AND INITIAL PREPARATION

Before your first use, ensure all components are properly installed and secured.

1. Seat Installation and Adjustment

The kayak features an adjustable framed seating system. Position the seat in the desired setting (high, low, or reclining) and secure it using the attached straps and clips to the designated points on the kayak hull. Ensure the seat is stable before use.



Image: Adjustable framed seat for comfort and versatility.

2. Rod Holder and Tackle Box Placement

The kayak is equipped with flush mount rod holders. Insert your fishing rods securely into these holders. The included Flambeau tackle boxes can be stored in the designated areas, such as under the seat or in the bow hatch, for easy access.



Image: Fishing gear secured on the kayak, highlighting storage and rod holder features.

3. Pre-Launch Inspection

Always perform a quick inspection before launching. Check for any visible damage, ensure all hatches are securely closed, and verify that the drain plug is properly sealed to prevent water intrusion.

OPERATING YOUR KAYAK

Understanding the kayak's characteristics will enhance your experience on the water.

1. Launching and Paddling

Carefully launch the kayak from a stable surface. Once afloat, enter the kayak by stepping into the center to maintain balance. Use a standard kayak paddle for propulsion. The tunnel hull design provides excellent tracking, making it easier to paddle in a straight line.

2. Stability and Standing

The Emotion Stealth Pro Angler 118 is designed with high initial stability, allowing for stand-up casting. When attempting to stand, do so slowly and deliberately, keeping your weight centered over the kayak's midline. Practice in calm water before attempting in challenging conditions.



Image: Kayak in use, showcasing its design and stability on water.

3. Weight Capacity

The maximum weight capacity for this kayak is 375 lbs (170 kg). Do not exceed this limit, as it can compromise stability and performance.

MAINTENANCE

Proper care will extend the life of your kayak and ensure continued performance.

1. Cleaning

After each use, especially in saltwater, rinse the kayak thoroughly with fresh water. Use mild soap and a soft brush or cloth to clean any dirt or grime. Avoid abrasive cleaners or solvents that could damage the polyethylene material.

2. Storage

Store your kayak in a cool, dry place, away from direct sunlight when not in use. Prolonged exposure to UV rays can degrade the plastic. If storing outdoors, cover the kayak with a UV-resistant cover. Store the kayak on its side or upside down to prevent hull deformation over time.

3. Drain Plug

The kayak is equipped with a drain plug to remove any water that may accumulate inside the hull. After each use, open the drain plug to allow water to escape, then close it securely before the next use.

TROUBLESHOOTING

Here are solutions to common issues you might encounter.

- Kayak is leaking:** Check the drain plug to ensure it is tightly sealed. Inspect the hull for any cracks or punctures. Small leaks can sometimes be repaired with a plastic repair kit. If the leak is significant or from a manufacturing defect, contact customer support.
- Seat feels unstable or damaged:** Verify that all seat straps and clips are correctly attached and adjusted. If the seat frame or fabric is damaged, replacement parts may be available from the manufacturer.
- Difficulty tracking straight:** Ensure your paddling technique is balanced. Check if there is any debris caught under the hull or if the hull itself has any deformation.

SPECIFICATIONS

Detailed technical specifications for the Emotion Stealth Pro Angler 118 Fishing Kayak.

Feature	Specification
Brand	Lifetime
Model Name	Stealth Pro Angler 118
Product Dimensions (L x W x H)	140"L x 32"W x 12.5"H (355.6 cm x 81.3 cm x 31.8 cm)
Item Weight	85 Pounds (38.5 kg)
Weight Limit	375 Pounds (170 kg)
Material	Polyethylene (PE)
Color	Gator Camo
Seating Capacity	1
Part Number	90693
UPC	081483806228

WARRANTY INFORMATION

The Lifetime Emotion Stealth Pro Angler 118 Fishing Kayak comes with a **5-year limited warranty**. This warranty covers defects in materials and workmanship under normal use and service. For specific terms, conditions, and to register your

product or make a claim, please refer to the warranty documentation included with your purchase or visit the official Lifetime website.

CUSTOMER SUPPORT

For further assistance, replacement parts, or inquiries not covered in this manual, please contact Lifetime customer support. You can often find contact information on the manufacturer's website or through the retailer where you purchased the product.

Visit the official Lifetime Store for more information and support:[Lifetime Store on Amazon](#)

© 2023 Lifetime Products. All rights reserved.

This manual is for informational purposes only and is subject to change without notice.