

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JMA](#) /

> [M-BT Remote Control JMA 3016137 Black User Manual](#)

JMA 3016137

JMA M-BT Remote Control 3016137 Black

USER MANUAL

Introduction

This manual provides detailed instructions for the proper use and maintenance of your JMA M-BT Remote Control, model 3016137. This device is designed for seamless control of compatible systems via Bluetooth connectivity. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

Product Overview



Figure 1: JMA M-BT Remote Control (Model 3016137)

This image displays the JMA M-BT Remote Control, model 3016137, in black. The device is rectangular with rounded corners. Its face features a central circular area with four numbered buttons (1, 2, 3, 4) arranged around a smaller central button. A bright blue LED ring illuminates the circular button area. The bottom right corner of the remote shows the 'JMA' logo. The surface has a subtle circuit-like pattern.

Setup

1. Battery Installation

The JMA M-BT Remote Control requires 1 'A' type battery (Lithium Ion recommended). To install the battery:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide or unclip the cover to open the compartment.
3. Insert the 'A' type battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Dispose of used batteries responsibly according to local regulations.

2. Bluetooth Pairing

To connect your JMA M-BT Remote Control to a compatible device (e.g., auto system):

1. Ensure the remote control has a fresh battery installed.
2. Put your compatible device into Bluetooth pairing mode. Refer to your device's manual for specific instructions.
3. On the JMA M-BT Remote Control, press and hold the central button (or a designated pairing button, if available) until the blue LED ring begins to flash, indicating it is in pairing mode.
4. On your compatible device, select "JMA M-BT Remote" (or similar name) from the list of available Bluetooth devices.
5. Once paired, the blue LED ring on the remote control will stop flashing and remain solid for a few seconds, then turn off, indicating a successful connection.

If pairing fails, ensure both devices are within range and repeat the steps.

Operating Instructions

The JMA M-BT Remote Control features four numbered buttons and a central button for various functions. The specific functions of these buttons depend on the device it is paired with.

- **Numbered Buttons (1, 2, 3, 4):** These buttons typically correspond to programmable functions on your paired device. Consult your device's manual to assign or understand the functions of these buttons.
- **Central Button:** This button often serves as a primary action button, such as 'Enter', 'Select', or 'Power' depending on the paired device. It may also be used for pairing mode activation.
- **LED Indicator:** The blue LED ring indicates the remote's status (e.g., pairing mode, low battery, button press confirmation).

For detailed operation, refer to the user manual of the specific device you are controlling with this remote.

Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the surface or internal components.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace the battery when the LED indicator shows signs of low power or the remote's responsiveness decreases.
- **Avoid Moisture:** Do not expose the remote control to water or excessive humidity.

Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Low or dead battery.	Replace the battery with a new one.
Remote not pairing with device.	Out of range; device not in pairing mode; interference.	Ensure remote and device are close. Put device in pairing mode. Try pairing again. Move away from other electronic devices.

Problem	Possible Cause	Solution
Buttons not performing expected functions.	Incorrect pairing; functions not programmed.	Re-pair the remote. Refer to your paired device's manual for button programming.

Specifications

Brand	JMA
Model Name	3016137
Item Model Number	3016137
Product Dimensions	150 x 5 x 5 cm
Item Weight	26 Grams
Colour	Black
Connectivity Technology	Bluetooth
Compatible Devices	Auto
Number of Buttons	4
Controller Type	Button Control
Battery Description	Lithium
Batteries Required	1 A batteries required.

Warranty and Support

For information regarding warranty coverage and technical support for your JMA M-BT Remote Control, please refer to the documentation provided with your purchase or contact the retailer or manufacturer directly. Specific warranty terms may vary by region and point of purchase.

Manufacturer: JMA