

JVD NR2219/23

JVD NR2219/23 Wall Clock User Manual

Model: NR2219/23

1. INTRODUCTION

Thank you for choosing the JVD NR2219/23 Wall Clock. This clock combines classic design with modern radio-controlled timekeeping, ensuring accurate time display. It also features a radio function. This manual provides essential information for the safe and efficient operation of your new wall clock. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not expose the clock to water or other liquids.
- Use only the specified battery type. Ensure correct polarity when inserting batteries.
- Remove depleted batteries promptly to prevent leakage and damage.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Keep batteries out of reach of children.

3. SETUP

3.1 Unpacking

Carefully remove the clock from its packaging. Inspect for any signs of damage. Retain the packaging for future transport or storage.

3.2 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert the included battery(ies) according to the polarity indicators (+ and -).
4. Close the battery compartment cover securely.

3.3 Initial Time Setting (Radio Control)

After battery installation, the clock will automatically search for the radio time signal. This process may take several minutes to an hour, depending on your location and signal strength. During this time, the hands may move erratically before settling to the correct time. Place the clock near a window for optimal signal reception.

3.4 Manual Time Setting (If Radio Signal is Unavailable)

If the clock does not set itself automatically after several hours, or if you are in an area without radio signal reception, you may need to set the time manually. Refer to the small adjustment wheel or button on the back of the clock. Rotate or press to move the hands to the correct time.

3.5 Mounting

The JVD NR2219/23 is designed for wall mounting. Use a suitable screw or hook (not included) securely fastened into a wall stud or appropriate anchor. Hang the clock using the keyhole slot on the back. Ensure the clock is level and stable.

4. OPERATING THE CLOCK

4.1 Time Display

Once set, the clock will continuously display the current time. The radio-controlled mechanism ensures high accuracy and automatic adjustment for daylight saving time (where applicable and signal is received).

4.2 Radio Function

This clock features an integrated radio. Specific controls for tuning and volume will be located on the side or back of the clock. Refer to these controls to:

- **Tune:** Use the tuning knob or buttons to select your desired radio station.
- **Volume:** Adjust the volume knob or buttons to your preferred listening level.

Optimal radio reception may vary based on location and environmental factors.

5. MAINTENANCE

5.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and internal components.

5.2 Battery Replacement

When the clock hands stop moving or the radio function weakens, it is time to replace the battery. Follow the battery installation steps in Section 3.2. Dispose of old batteries responsibly according to local regulations.

5.3 Storage

If storing the clock for an extended period, remove the battery to prevent leakage and potential damage.

6. TROUBLESHOOTING

- **Clock not working:** Check if the battery is inserted correctly and is not depleted. Replace the battery if necessary.

- **Incorrect time:** Ensure the clock is receiving a radio signal. Try moving it to a different location, preferably near a window. If manual setting was used, re-adjust the time.
- **Radio not receiving signal or poor reception:** Extend the antenna if available. Try repositioning the clock or adjusting its orientation. Interference from other electronic devices can affect reception.
- **Hands are stuck or moving erratically:** This may occur during initial signal search. Allow time for the clock to synchronize. If the issue persists, replace the battery.

7. SPECIFICATIONS

- **Brand:** JVD
- **Model:** NR2219/23
- **Material:** Walnut Wood
- **Special Features:** Radio-controlled time, Integrated Radio
- **Display Type:** Analog
- **Power Source:** Battery Powered
- **Mounting Type:** Wall Mount

8. WARRANTY INFORMATION

This JVD product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or contact your retailer for specific terms and conditions. The warranty typically covers defects in materials and workmanship under normal use.

9. SUPPORT

For further assistance, technical support, or inquiries regarding your JVD NR2219/23 Wall Clock, please contact the retailer where you purchased the product or visit the official JVD website for contact information.