



Manuals.plus /

› Chicco /

› Chicco Next2Dreams Baby Mobile Instruction Manual

Chicco 00007627200000

Chicco Next2Dreams Baby Mobile Instruction Manual

Model: 00007627200000

Information	Setup	Operation	Introduction Maintenance Support	Safety Troubleshooting	Specifications	Warranty & Support
-------------	-------	-----------	--	---------------------------	----------------	-----------------------

1. INTRODUCTION

The Chicco Next2Dreams Baby Mobile is an electronic music box designed to soothe and entertain infants from birth (0+ months). It is specifically engineered to be compatible with the Chicco Next2Me cot, but its versatile design allows for easy installation on most standard wooden cots. This 3-in-1 mobile features classical music, white noise sounds, a soft night light, and rotating pendants to create a calming environment for your baby.

Key features include:

- **Versatile Compatibility:** Designed for Next2Me cots and adaptable to most wooden cots.
- **Soothing Sounds:** Plays 20 minutes of classical music (Chopin, Schumann, Offenbach) and calming white noise (heartbeat, womb sounds).
- **Gentle Illumination:** Features a soft night light to create a serene atmosphere.
- **Removable Electronic Panel:** The music and light unit can be detached and used independently on a cot or pushchair.
- **Hypoallergenic Pendants:** Four soft fabric pendants gently rotate to engage and comfort the baby.



Figure 1.1: The Chicco Next2Dreams Baby Mobile, showcasing its design and hanging elements.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the Chicco Next2Dreams Baby Mobile. Failure to follow these instructions could result in serious injury or death.

- **WARNING:** Possible entanglement injury. Keep the mobile out of the baby's reach. Remove the mobile from the crib or playpen when the baby begins to push up on hands and knees or reaches 5 months of age, whichever comes first.
- **Adult Assembly Required:** This product contains small parts and sharp points prior to assembly.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Batteries should be inserted with the correct polarity.
 - Remove exhausted batteries from the product.
 - Do not short-circuit the supply terminals.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Remove rechargeable batteries from the product before being charged.
- Always ensure the mobile is securely attached to the cot according to the instructions.
- Do not modify the product or use non-original accessories.
- Keep packaging materials away from children to prevent suffocation.

3. SETUP

3.1 Package Contents

Before assembly, ensure all components are present and undamaged. The package should contain:

- 1 x Mobile Arm
- 1 x Electronic Music Box/Projector Unit
- 4 x Hypoallergenic Fabric Pendants (Bear, Moon, Star, Cloud)
- Instruction Manual



Figure 3.1: Product packaging illustrating the contents and features.

3.2 Battery Installation

The electronic unit requires AAA batteries (not included).

1. Locate the battery compartment on the back of the electronic music box unit.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert the required AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

3.3 Mobile Assembly and Installation

Follow these steps to assemble and attach the mobile to your baby's cot:

1. **Attach Mobile Arm:** Securely attach the mobile arm to the side of the cot.
 - **For Chicco Next2Me Cots:** Use the dedicated hooking system designed for a snug fit.
 - **For Wooden Cots:** Utilize the adjustable clamp mechanism to firmly attach the arm to the cot rail. Ensure it is stable and cannot be easily dislodged.

2. **Attach Electronic Unit:** Slide the electronic music box unit onto the designated slot at the end of the mobile arm until it clicks securely into place.
3. **Attach Pendants:** Hang the four hypoallergenic fabric pendants onto the hooks provided on the mobile arm. Ensure they are securely fastened and hang freely.



Figure 3.2: The mobile securely attached to a cot, ready for use.

4. OPERATING INSTRUCTIONS

The Chicco Next2Dreams mobile offers various functions to soothe and entertain your baby.

4.1 Power On/Off and Mode Selection

Locate the control buttons on the electronic music box unit. Typically, there is a power button and buttons for selecting music/sound modes and light functions.

- Press the **Power Button** to turn the unit on or off.
- Use the **Music/Sound Selection Button** to cycle through the available audio options:

- Classical Music (Chopin, Schumann, Offenbach)
- White Noise (heartbeat, womb sounds)

The mobile will play for approximately 20 minutes before automatically turning off.

- Press the **Light Button** to activate or deactivate the soft night light.



Figure 4.1: The mobile's night light function in a darkened room.

4.2 Removable Electronic Panel

The electronic music box unit can be detached from the mobile arm for standalone use.

1. Gently press the release button or mechanism on the mobile arm to detach the electronic unit.
2. The unit can then be attached to other compatible structures, such as a pushchair or pram, using its integrated hooking system.
3. This allows your baby to enjoy the soothing music and light even when away from the cot.



Figure 4.2: The electronic unit detached, highlighting its portability.



Figure 4.3: The electronic unit attached to a pushchair for on-the-go use.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and safe operation of your Chicco Next2Dreams Baby Mobile.

- **Cleaning:** Wipe the electronic unit and mobile arm with a soft, damp cloth. Do not immerse the electronic unit in water. The fabric pendants can be hand-washed with mild soap and air-dried.
- **Storage:** When not in use for extended periods, remove the batteries from the electronic unit. Store the mobile in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the sound becomes distorted, the light dims, or the mobile's movement slows down. Refer to Section 3.2 for battery installation instructions.
- **Inspection:** Regularly inspect all parts for signs of wear, damage, or loose components. Discontinue use if any damage is observed.

6. TROUBLESHOOTING

If you encounter issues with your Chicco Next2Dreams Baby Mobile, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Mobile does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Sound is distorted or too low.	Low battery power.	Replace batteries.
Pendants are not rotating.	Low battery power or obstruction.	Replace batteries. Ensure nothing is blocking the rotation mechanism.
Night light is dim or not working.	Low battery power or light function not activated.	Replace batteries. Press the Light Button to activate.
Mobile is unstable on the cot.	Improper attachment.	Re-secure the mobile arm to the cot, ensuring the clamp is tightened or the Next2Me hooking system is fully engaged.

If the problem persists after trying these solutions, please contact Chicco customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	00007627200000
Dimensions (L x W x H)	10.43 x 19.09 x 23.07 inches (26.5 x 48.5 x 58.6 cm)
Item Weight	1.87 pounds (0.85 kg)
Power Source	AAA Batteries (not included)
Material	Durable plastic, hypoallergenic fabric (pendants)
Special Features	Hypoallergenic, Removable Electronic Panel, Soft Night Light, Classical Music, White Noise
Mounting Type	Crib Mount (compatible with Next2Me and most wooden cots)
Color	Blue
Recommended Age	0+ Months

8. WARRANTY & SUPPORT

Chicco products are manufactured to the highest quality standards. For detailed warranty information specific to your region and product, please refer to the official Chicco website or the warranty card included with your purchase.

For customer support, technical assistance, or to inquire about replacement parts, please visit the official Chicco website or contact their customer service department:

- **Chicco Official Website:** www.chicco.com
- Refer to the website for regional contact details (phone numbers, email addresses).

Please have your product model number (00007627200000) and purchase date ready when contacting support.

