

[Manuals.plus](#) /

> [UBay](#) /

> UBay Universal Remote Control BN59-01199F for Samsung TVs User Manual

UBay BN59-01199F

UBay Universal Remote Control BN59-01199F for Samsung TVs User Manual

Model: BN59-01199F | Brand: UBay

1. INTRODUCTION

This manual provides instructions for the UBay Universal Remote Control, model BN59-01199F. This remote is designed for use with a wide range of Samsung LCD, LED, HDTV, and 3D Smart TVs. It requires no programming or pairing; simply insert batteries and it is ready for immediate use.

2. PRODUCT OVERVIEW

The UBay Universal Remote Control features a standard layout for easy navigation and control of your Samsung television. Below is an illustration of the remote control with its key components.



Figure 1: Front View of Remote Control

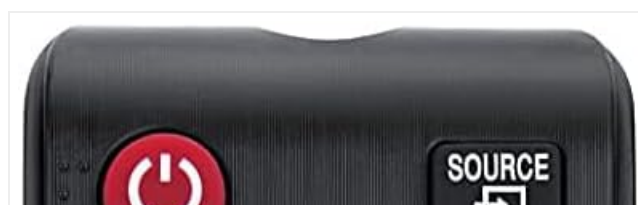






Figure 2: Side View of Remote Control

Key Buttons and Functions:

- **Power Button** (): Turns the TV on or off.
- **Source Button**: Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Direct channel selection.
- **Volume Up/Down (VOL +/-)**: Adjusts the volume level.
- **Channel Up/Down (CH +/-)**: Changes TV channels.
- **Mute Button**: Mutes or unmutes the TV sound.
- **Menu Button**: Accesses the TV's main menu.
- **Smart Hub Button**: Opens the Samsung Smart Hub for apps and streaming services.
- **Guide Button**: Displays the electronic program guide.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Navigates through menus and selections.
- **Return Button**: Goes back to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Colored Buttons (A, B, C, D)**: Functionality varies by TV model and application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.

3. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Note: This remote control requires no programming or pairing. It is ready for use immediately after installing new batteries.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

Basic Functions:

- **Power On/Off**: Press the **Power** button once.
- **Change Channels**: Use the **CH +/-** buttons to cycle through channels or the number pad for direct entry.
- **Adjust Volume**: Use the **VOL +/-** buttons.
- **Mute Sound**: Press the **Mute** button.

Smart TV Functions:

- **Access Smart Hub**: Press the **Smart Hub** button to open your TV's smart features.
- **Navigate Menus**: Use the **Navigation Pad** (Up, Down, Left, Right) and the **Enter** button to make selections.
- **Return to Previous Screen**: Press the **Return** button.

- **Exit Application/Menu:** Press the **Exit** button.

5. COMPATIBILITY

This UBay Universal Remote Control is compatible with a wide range of Samsung LCD, LED, HDTV, and 3D Smart TVs. It is designed to replace many original Samsung remote models without requiring any setup.

Compatible Samsung TV Models (Partial List):

- UN32J4500AF, UN32J5205AF, UN32J525DAF
- UN40J5200AF, UN40J520DAF, UN40J6200, UN40J6200AF, UN40JU6400F, UN40JU640DF
- UN43J5200AF, UN43JU640DF
- UN48J5200AF, UN48J5201AF, UN48J520DAF, UN48J520DAFDXN, UN48J6200AF, UN48JU6400, UN48JU6400F, UN48JU640DF
- UN50J5200, UN50J5200AF, UN50J520DAF, UN50J6200, UN50J6200AF
- UN55J6200, UN55J6200AF, UN55J6201, UN55J6201AF, UN55J620DAF, UN55JU6400, UN55JU6400F, UN55JU640DF
- UN58J5190, UN58J5190AF
- UN60J620, UN60J6200, UN60J6200AF, UN60J6200AF/XZC, UN60J620DAF, UN60JU6390F, UN60JU6400, UN60JU6400F
- UN65J620, UN65J6200, UN65J6200AF, UN65J620DAF, UN65JU640, UN65JU6400, UN65JU6400F, UN65JU640D, UN65JU640DAF, UN65JU640DF

Compatible Samsung Remote Models (Partial List):

- BN59-01315A, BN59-01315J, BN59-01301A, BN59-01175N, BN59-01199F
- AA59-00741A, AA59-00786A, AA59-00602A, BN59-01247A, AA59-00743A
- BN59-01175B, AA59-00818A, AA59-00603A, BN59-01199G, AA59-00622A
- AA59-00496A, AA59-01180A, AA59-00666A, AA59-00600A

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if there are any obstructions between the remote and the TV.
 - Replace the batteries with new AA alkaline batteries.
 - Verify that the TV is powered on.
- **Some buttons not working:**
 - This remote is designed for universal compatibility with Samsung TVs. Some advanced or specific functions of your original remote might not be replicated.
 - Ensure the remote is clean and free from debris that might obstruct button presses.

- **Poor range:**

- Replace batteries. Low battery power can reduce the remote's effective range.
- Ensure you are within the maximum operating range of 10 meters (approximately 33 feet).

8. SPECIFICATIONS

Brand	UBay
Model Name	BN59-01199F
Color	Black
Compatible Devices	Samsung Televisions (LCD, LED, HDTV, 3D Smart TVs)
Connectivity Technology	Infrared
Number of Buttons	20
Maximum Range	10 Meters
Batteries Required	2 AA Alkaline batteries
Item Weight	2 Ounces

9. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove exhausted batteries promptly.
- Do not dispose of batteries in fire; they may explode or leak.
- Keep batteries out of reach of children.
- Do not expose the remote control to direct sunlight, heat sources, or extreme humidity.

10. CUSTOMER SUPPORT

For further assistance or inquiries regarding your UBay Universal Remote Control, please refer to the retailer's support channels or the manufacturer's official website.

