

[manuals.plus](#) /

- › [TOTO](#) /
- › [TOTO K300 Electronic Bidet Toilet Seat \(SW3036#01\) Instruction Manual](#)

TOTO SW3036#01

TOTO K300 Electronic Bidet Toilet Seat (SW3036#01) Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your TOTO K300 Electronic Bidet Toilet Seat (Model SW3036#01). The K300 WASHLET is an advanced electronic bidet toilet seat designed to provide a refreshing and hygienic cleansing experience with warm water. Key features include instantaneous water heating, PREMIST technology, a deodorizer, a warm air dryer, and a comfortable heated seat. The unit is controlled via an illuminated remote, offering personalized settings for multiple users.



Figure 1: TOTO K300 Bidet Seat with highlighted features.

2. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or injury. Keep this manual for future reference.

- Ensure the electrical outlet is a 120V GFCI (Ground Fault Circuit Interrupter) outlet and is properly grounded.
- Do not immerse the unit in water or spray water directly onto the electrical components.
- Turn off the water supply and unplug the unit before performing any maintenance or cleaning.
- Do not allow children or individuals with reduced physical, sensory, or mental capabilities to operate the unit without supervision.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Electronic bidet seat (WASHLET)
- Mounting bracket
- Remote control with batteries
- Tee-connector



Figure 2: Included components and required tools.

4. SETUP AND INSTALLATION

The TOTO K300 WASHLET is designed for easy, do-it-yourself installation. For a comprehensive visual guide, download the BILT app for interactive 3D instructions.

4.1 Pre-Installation Checks

- Ensure your toilet is an elongated model. The K300 is specifically designed for elongated toilets.
- Confirm a 120V GFCI electrical outlet is available near the toilet. The power cord length is approximately 48 inches.

- Turn off the water supply to the toilet before starting.

4.2 Installation Steps

- 1. Remove Existing Toilet Seat:** Unscrew and remove your current toilet seat and lid.
- 2. Install Mounting Bracket:** Secure the provided mounting bracket onto the toilet bowl using the screws and washers. Adjust its position to ensure proper alignment.
- 3. Connect Water Supply:** Turn off the water supply to the toilet. Disconnect the existing water supply hose from the toilet tank. Install the provided tee-connector between the toilet tank fill valve and the water supply hose. Connect the bidet's water supply hose to the tee-connector.
- 4. Attach WASHLET:** Slide the WASHLET unit onto the mounting bracket until it clicks into place.
- 5. Connect Power:** Plug the WASHLET into the 120V GFCI electrical outlet.
- 6. Restore Water Supply:** Slowly turn on the water supply to the toilet and check for leaks.



Figure 3: Visual guide for TOTO K300 installation steps.

TOUCH ACTIVATED REMOTE CONTROL

Easy and Convenient to Use

WASHLET® K300 models

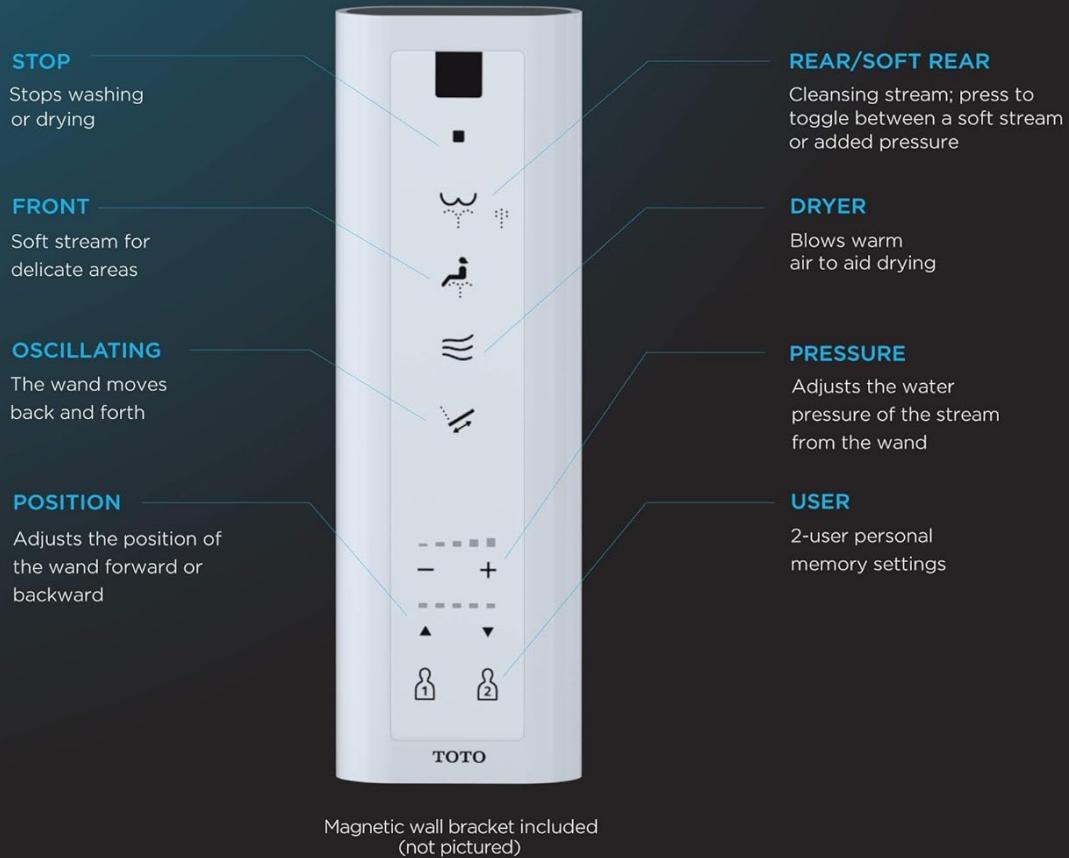


Figure 4: Improved Tee Connector for leak-free installation.

4.3 Installation Video Guide

Your browser does not support the video tag.

Video 1: This video provides a detailed demonstration of the TOTO K300 WASHLET installation process, guiding users through each step for a successful setup.

4.4 Optional Accessories

For toilets with difficult-to-reach fill valves, optional accessories such as a 2-inch extender (9AU321-A) or a 6-inch hose (THU9090R) may be required.



TOTO®

Figure 5: Optional accessories for installation.

5. OPERATING INSTRUCTIONS

The TOTO K300 WASHLET is operated using the included remote control. Familiarize yourself with the remote's functions for optimal use.

5.1 Remote Control Overview

K300 ELONGATED MEASUREMENTS

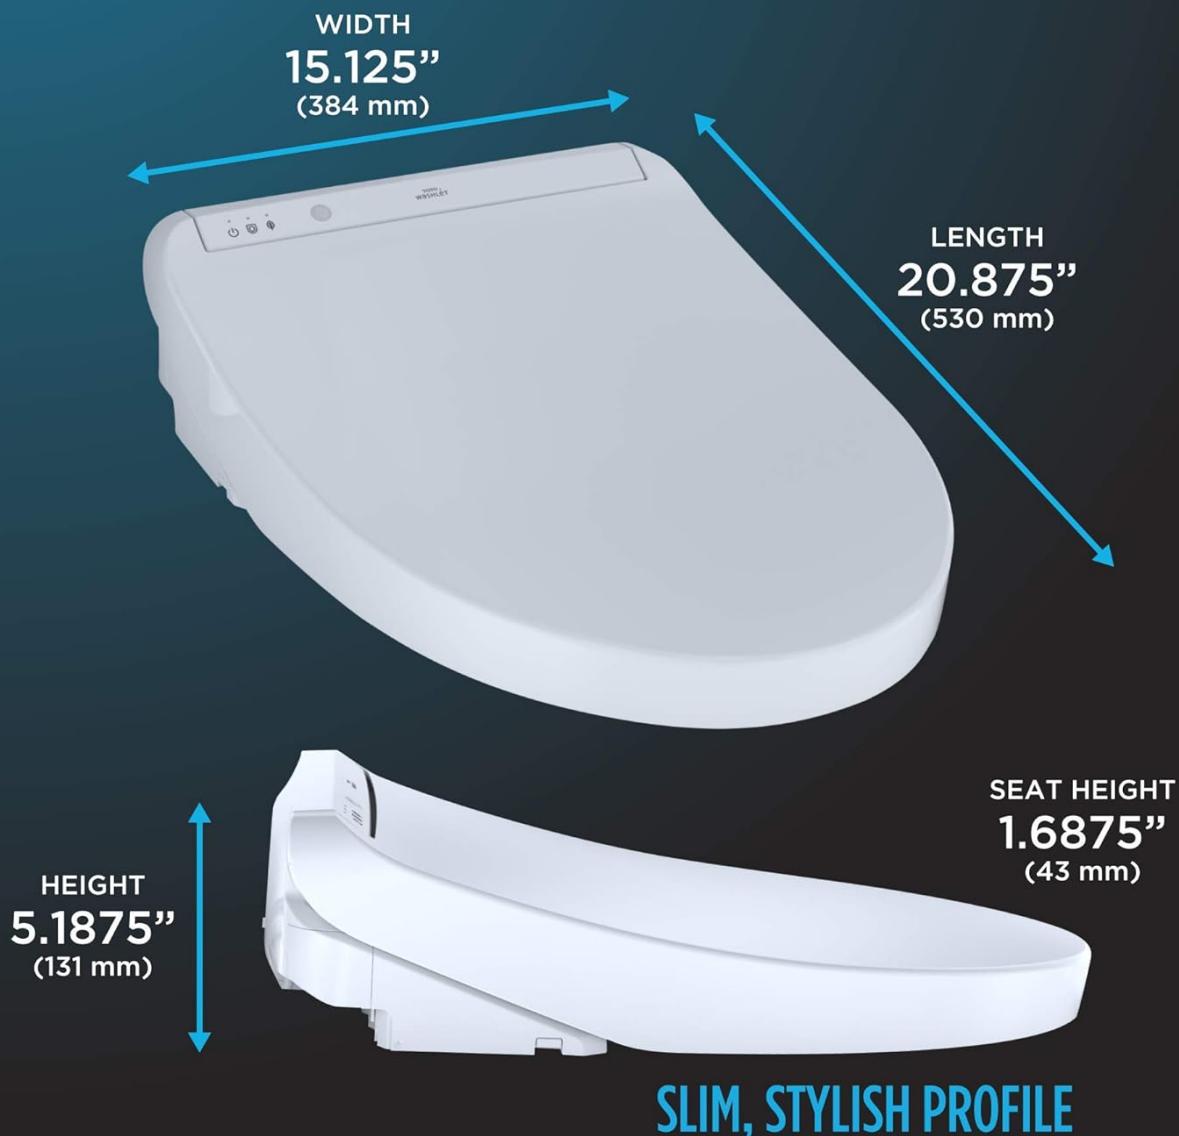


Figure 6: TOTO K300 Remote Control functions.

- **STOP:** Stops all washing or drying functions.
- **REAR/SOFT REAR:** Initiates rear cleansing. Press once for a softer stream, twice for added pressure.
- **FRONT:** Activates front cleansing for delicate areas.
- **OSCILLATING:** Moves the wand back and forth for a wider cleansing area.
- **POSITION:** Adjusts the forward or backward position of the wand.
- **DRYER:** Activates the warm air dryer.
- **PRESSURE:** Adjusts the water pressure of the spray.
- **USER 1/2:** Allows two users to save and quickly access personalized settings.

5.2 Cleansing Functions

The K300 offers multiple spray settings for a thorough and comfortable clean:

- **Rear Cleansing:** Standard rear wash.
- **Soft Rear Cleansing:** Gentle rear wash.
- **Front Cleansing:** Soft stream for feminine hygiene.

- **Oscillating Spray:** The wand moves back and forth during cleansing.
- **Pulsating Spray:** Provides a massaging effect during cleansing.



Figure 7: Adjustable water spray and pressure options.

5.3 Water Stream Options Video

Your browser does not support the video tag.

Video 2: This video demonstrates the various water stream options and adjustments available on the TOTO K300 WASHLET.

5.4 Heated Seat

The seat provides consistent warmth across its entire surface. The temperature can be adjusted to your preference using the remote control.

5.5 Heated Seat Video

Your browser does not support the video tag.

Video 3: This video highlights the comfortable heated seat feature of the TOTO K300 WASHLET.

5.6 Warm Air Dryer

After cleansing, the warm air dryer provides a comfortable and effective drying experience. The air temperature is adjustable.

5.7 Warm Air Dryer Video

Your browser does not support the video tag.

Video 4: This video demonstrates the warm air dryer function of the TOTO K300 WASHLET.

5.8 PREMIST Function

Before each use, PREMIST technology sprays the toilet bowl with water, creating a slick surface that helps prevent waste from sticking and keeps the bowl cleaner.

5.9 Deodorizer

The built-in air deodorizer neutralizes bathroom odors using powerful air filters, enhancing the overall experience.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your TOTO K300 WASHLET.

- **Self-Cleaning Wand:** The cleansing wand automatically cleans itself both inside and outside before and after each use.
- **Deodorizing Filter:** The deodorizing filter should be removed and cleaned monthly with a soft brush (e.g., a toothbrush) to remove dust and maintain effectiveness.
- **Unit Cleaning:** Wipe the exterior of the WASHLET with a soft, damp cloth and a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive pads.



Figure 8: Self-cleaning wand mechanism.

7. TROUBLESHOOTING

Refer to the following common issues and solutions. If the problem persists, contact TOTO customer service.

Problem	Possible Cause	Solution
Wand extends unexpectedly.	Self-cleaning function initiated.	This is normal operation. The wand extends to clean itself before and after use.
Spray function does not activate.	Seat sensor not engaged.	The WASHLET features a seat sensor to prevent the wand from spraying when no one is seated. Ensure you are seated properly. To test, press the seat down until you hear the sensor click, then cover the spray from the wand with a cup.

Problem	Possible Cause	Solution
Water pressure is too soft.	Low pressure setting or insufficient water supply.	Adjust the water pressure setting on the remote control. Ensure the water supply valve is fully open. The rear spray has two options: soft (single press) and strong (double press).
No warm water.	Temperature setting too low or power saving mode.	Adjust the water temperature setting on the remote. Check if the power saving mode is active and adjust if necessary.

8. SPECIFICATIONS

Feature	Detail
Model Number	SW3036#01
Color	Cotton White
Material	Plastic
Style	Self-Cleaning Wand
Shape	Elongated Oval
Product Dimensions	20.88" L x 15.13" W
Item Weight	14.5 Pounds
Voltage	120 Volts
Temperature Range (Water)	86 - 104 Degrees Fahrenheit
Included Components	Electronic bidet seat, Mounting bracket, Remote control with batteries, Tee-connector
Batteries	2 AA batteries required (included)



Figure 9: TOTO K300 Elongated Measurements.

9. WARRANTY AND SUPPORT

Warranty Description: Manufacturer One Year Limited Warranty.

For customer service and technical support, please contact TOTO directly. For assistance with installation, you can also refer to the BILT app.

WARM
WATER
SEAT
DRYER

CLEAN
WAND
PREMIST
DEODORIZER

WASH
REAR
FRONT
SOFT



Figure 10: Download the BILT app for interactive 3D instructions.

TOTO Customer Service: 1-888-295-8134 (ext. 1347)