

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [OVENTE](#) /

> [OVENTE SK11112B 11.5-Inch Electric Skillet & Frying Pan Instruction Manual](#)

OVENTE SK11112B

OVENTE SK11112B 11.5-Inch Electric Skillet & Frying Pan Instruction Manual

Model: SK11112B | Brand: OVENTE

1. INTRODUCTION

Thank you for choosing the OVENTE 11.5-Inch Electric Skillet & Frying Pan. This versatile 1400W appliance is designed to simplify your cooking experience, allowing you to sauté, braise, simmer, sear, and fry with ease. Featuring a durable nonstick coating, adjustable temperature control, and cool-touch handles, it's perfect for preparing a variety of delicious meals. Please read this manual thoroughly before first use to ensure safe and optimal operation.



The OVENTE 11.5-Inch Electric Skillet, ready for use.

2. IMPORTANT SAFEGUARDS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the temperature control probe in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact OVENTE Customer Service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn the temperature control to '0' (OFF), then remove the plug from the wall outlet.
- Use the appliance only for its intended household use.
- Always use the skillet on a stable, level, heat-resistant surface.
- Avoid using metal utensils on the nonstick surface to prevent scratching. Use plastic, nylon, or

wooden utensils.

3. PARTS AND FEATURES

Your OVENTE Electric Skillet comes with several key components designed for convenience and performance:

- **Electric Skillet Base:** The main cooking pan with a durable aluminum body and nonstick coating.
- **Tempered Glass Lid:** A clear, heat-resistant lid with a steam vent, allowing you to monitor cooking without losing heat or moisture.
- **Adjustable Temperature Control Probe:** Detachable probe with a dial for precise temperature settings from 200-450°F.
- **Cool-Touch Handles:** Ergonomically designed handles that remain cool during operation for safe handling and transport.
- **Indicator Light:** Illuminates when the skillet is heating and turns off when the desired temperature is reached.



The spacious 11.5-inch diameter of the skillet is ideal for cooking large meals.

TEMPERED GLASS LID

Durable and heat-resistant



The tempered glass lid allows for easy monitoring of food while cooking.



TEMPERATURE CONTROL

5 temperature settings to suit your needs

The adjustable temperature control offers five settings for precise cooking.

NON-STICK COATING

Makes cooking and clean-up easier



The non-stick coating ensures effortless cooking and easy cleanup.



COOL-TOUCH HANDLES

For safe, effortless use

Cool-touch handles provide safe and easy transport of the skillet.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the skillet pan and glass lid in warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the temperature control probe in water.
3. **Assemble:** Insert the temperature control probe firmly into the receptacle on the side of the skillet. Ensure it is fully seated.
4. **Placement:** Place the electric skillet on a dry, stable, and heat-resistant surface away from the edge of the counter.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal cooking results:

1. **Prepare for Cooking:** Lightly coat the nonstick surface of the skillet with cooking oil or butter, if desired.
2. **Connect Power:** Ensure the temperature control probe is securely inserted into the skillet. Plug the

power cord into a standard 120V AC electrical outlet.

3. **Set Temperature:** Turn the adjustable temperature control dial to your desired heat setting. The indicator light will illuminate, signaling that the skillet is heating. The temperature range is 200-450°F, with 5 distinct settings.
4. **Preheat:** Allow the skillet to preheat for a few minutes until the indicator light turns off, indicating that the set temperature has been reached. The light will cycle on and off during cooking to maintain the temperature.
5. **Add Food:** Carefully place food into the preheated skillet. Use the tempered glass lid to retain heat and moisture, and to prevent splatters.
6. **Monitor Cooking:** Adjust the temperature as needed throughout the cooking process. The transparent lid allows you to monitor your food without lifting the lid.
7. **Finish Cooking:** Once cooking is complete, turn the temperature control dial to '0' (OFF) and unplug the appliance from the outlet.

Your browser does not support the video tag.

Watch this video for an overview of the OVENTE Electric Skillet SK11112 Series, demonstrating its features and ease of use.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your electric skillet:

1. **Unplug and Cool:** Always unplug the skillet from the power outlet and allow it to cool completely before cleaning.
2. **Remove Temperature Probe:** Detach the temperature control probe from the skillet. The probe should never be immersed in water or other liquids. Wipe it clean with a damp cloth if necessary.
3. **Wash Skillet and Lid:** The skillet pan and tempered glass lid can be washed in warm, soapy water. For stubborn food residue, allow the pan to soak for a short period.
4. **Nonstick Care:** Use a soft sponge or cloth to clean the nonstick surface. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the nonstick coating.
5. **Rinse and Dry:** Rinse all parts thoroughly with clean water and dry completely before storing.
6. **Storage:** Store the clean, dry skillet and its components in a safe place.

7. TROUBLESHOOTING


If you encounter any issues with your OVENTE Electric Skillet, refer to the following common problems and solutions:

- **Skillet not heating:** Ensure the temperature control probe is fully inserted into the skillet and the power cord is securely plugged into a working electrical outlet. Check if the temperature dial is set to an appropriate heat level (not '0').
- **Food sticking to the surface:** Although the skillet has a nonstick coating, always use a small amount of cooking oil or butter, especially for the first few uses. Ensure the skillet is properly preheated before adding food. Avoid using metal utensils that can scratch and damage the nonstick surface.
- **Uneven heating:** While the skillet is designed for even heat distribution, some variations may occur. Stir or move food periodically to ensure uniform cooking. Ensure the skillet is placed on a flat, stable surface.
- **Indicator light not working:** If the indicator light does not illuminate when the skillet is plugged in and the temperature is set, check the power connection. If the issue persists, contact customer

service.

8. SPECIFICATIONS

Feature	Detail
Brand	OVENTE
Model	SK11112B
Product Dimensions	11.5"D x 13.5"W x 4"H
Wattage	1400 watts
Voltage	120 Volts
Material	Aluminum
Special Features	Adjustable Temperature, Cool Touch Handles, Indicator Light
Number of Temperature Settings	5
Color	Black

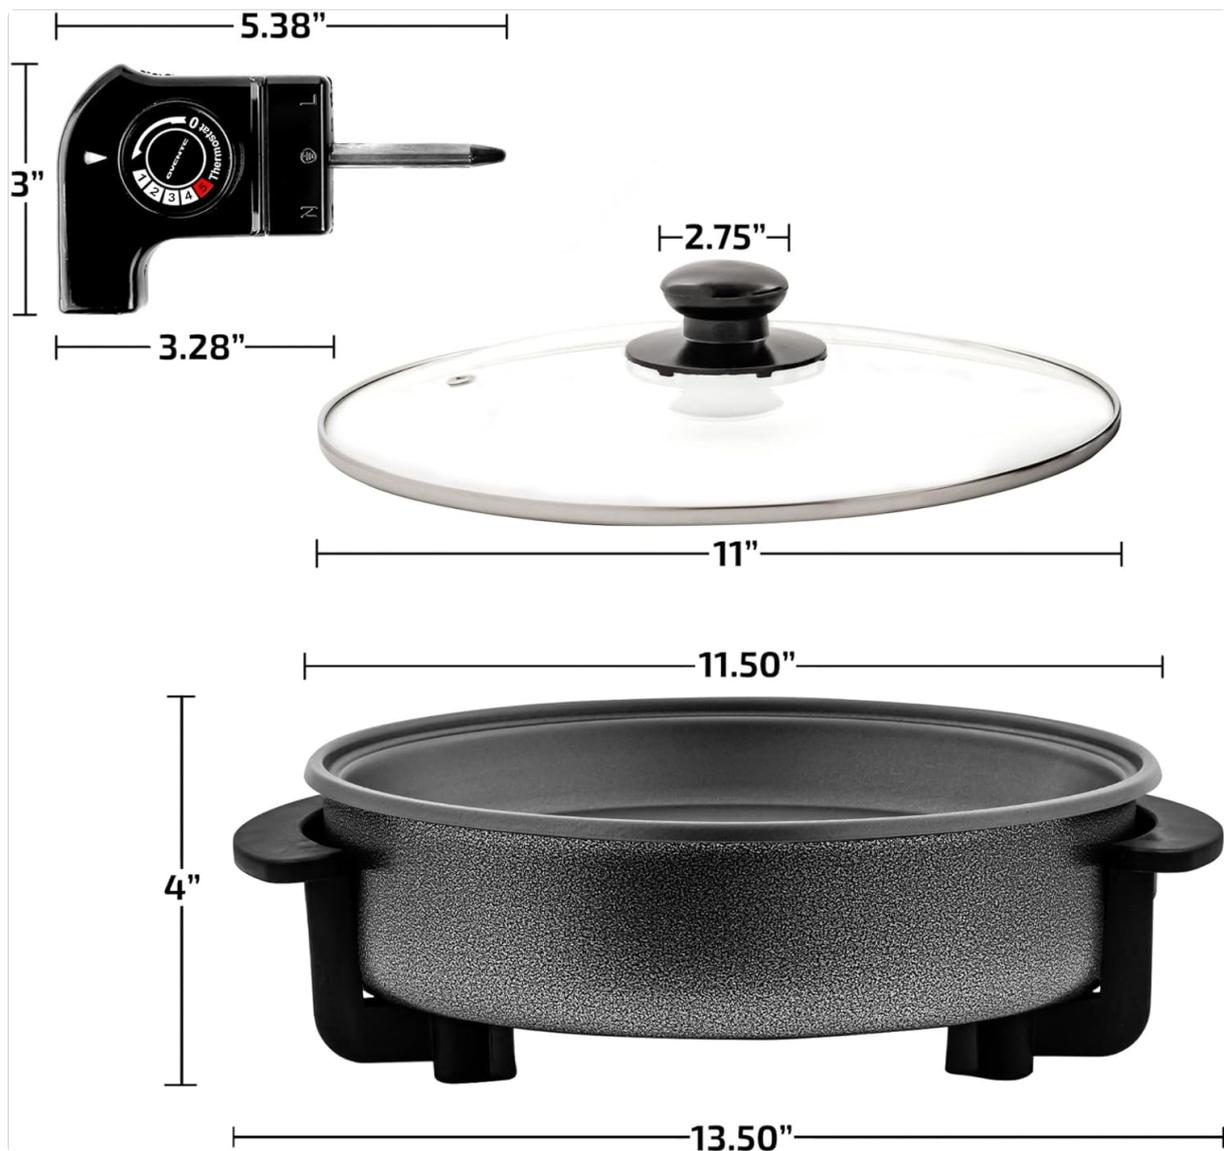

9. WARRANTY AND SUPPORT

OVENTE provides a **1 Year Limited Warranty** from the original purchase date, ensuring the product is free from defects in material and workmanship under normal use and conditions. For any questions, concerns, or warranty claims, please contact OVENTE Customer Service.



Your OVENTE Electric Skillet comes with a 1-year limited warranty.

US-Based Customer Service: OVENTE is committed to providing excellent customer support. For assistance, please refer to the contact information provided in your product packaging or visit the official OVENTE website.