

[Manuals.plus](#) /

› [Lenovo](#) /

› Lenovo ThinkPad E580 (Model 20KS003WUS) User Manual

Lenovo 20KS003WUS

Lenovo ThinkPad E580 (Model 20KS003WUS) User Manual

Comprehensive Guide for Your Notebook

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo ThinkPad E580 notebook. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.

2. PRODUCT OVERVIEW

The Lenovo ThinkPad E580 is a 15.6-inch notebook designed for productivity, featuring an Intel Core i5 processor, 4GB RAM, and a 500GB HDD, running Windows 10 Pro. It includes various ports for connectivity and integrated features like a webcam and fingerprint reader.

2.1. Notebook Components



Figure 2.1: Top-down view of the ThinkPad E580, showing the 15.6-inch display and full-size keyboard with numeric keypad.

The ThinkPad E580 features a 15.6-inch display, a standard QWERTY keyboard with a numeric keypad, and a responsive touchpad. It also includes a front-facing webcam for video conferencing and a fingerprint reader for enhanced security.

2.2. Ports and Connectors



Figure 2.2: Left side view of the ThinkPad E580, illustrating the various ports available for connectivity.



Figure 2.3: Right side view of the ThinkPad E580, highlighting additional ports.

The notebook is equipped with a range of ports for connecting external devices and networks:

- **USB 3.1 Ports:** Two USB 3.1 ports for high-speed data transfer.
- **USB Type-C Port:** One USB Type-C port for versatile connectivity and charging.
- **HDMI Port:** One HDMI port for connecting to external displays.
- **Ethernet (RJ-45) Port:** For wired network connections.
- **Audio Jack:** For headphones or external speakers.

3. SETUP

3.1. Initial Power On

1. **Connect Power:** Plug the AC adapter into the USB Type-C port on your notebook and then into a power outlet.
2. **Power On:** Open the lid and press the power button, typically located above the keyboard or on the side.
3. **Windows Setup:** Follow the on-screen instructions to complete the Windows 10 Pro setup, including language, region, network connection, and user account creation.

3.2. Connecting to a Network

- **Wi-Fi:** Click the Wi-Fi icon in the taskbar, select your desired network, enter the password, and click Connect.
- **Wired Ethernet:** Connect an Ethernet cable from your router or modem to the RJ-45 port on the notebook. The connection should establish automatically.

3.3. Connecting Peripherals

Use the available USB ports (USB 3.1 and USB Type-C) to connect external devices such as mice, keyboards, external hard drives, or printers. The HDMI port allows connection to external monitors or projectors.

4. OPERATING INSTRUCTIONS

4.1. Basic Navigation

- **Touchpad:** Use the touchpad for cursor control, clicking, and multi-touch gestures.
- **Keyboard:** Utilize the full-size keyboard for typing. Function keys (Fn) combined with F1-F12 keys provide quick access to system functions like volume, brightness, and wireless toggles.

4.2. Using the Fingerprint Reader

The integrated fingerprint reader allows for secure and quick login. To set it up, navigate to Windows Settings > Accounts > Sign-in options and follow the instructions to register your fingerprints.

4.3. Connecting Bluetooth Devices

To connect Bluetooth devices (e.g., headphones, mice):

1. Ensure Bluetooth is enabled on your notebook (Settings > Devices > Bluetooth & other devices).
2. Put your Bluetooth device into pairing mode.
3. On your notebook, click "Add Bluetooth or other device" and select "Bluetooth". Choose your device from the list to

pair.

5. MAINTENANCE

5.1. Battery Care

- Avoid fully discharging the battery frequently.
- Store the notebook in a cool, dry place if not used for extended periods.
- Use only the original Lenovo AC adapter for charging.

5.2. Cleaning the Notebook

- **Screen:** Use a soft, lint-free cloth lightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Keyboard and Chassis:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with mild soap solution can be used, ensuring no liquid enters openings.
- Always power off and unplug the notebook before cleaning.

5.3. Software Updates

Regularly check for and install Windows updates to ensure system stability, security, and optimal performance. You can find updates in Windows Settings > Update & Security > Windows Update.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your ThinkPad E580.

6.1. Power Issues

- **Notebook does not turn on:** Ensure the AC adapter is securely connected and the power outlet is functional. Try pressing and holding the power button for 10-15 seconds.
- **Battery not charging:** Verify the AC adapter is correctly plugged into both the notebook and the power source. Check for any damage to the adapter or cable.

6.2. Display Issues

- **No display on screen:** Connect an external monitor via HDMI to check if the issue is with the notebook's internal display. Restart the notebook.
- **Flickering or distorted display:** Update your graphics drivers. Adjust display resolution settings in Windows.

6.3. Connectivity Problems

- **Wi-Fi not connecting:** Ensure Wi-Fi is enabled. Restart your router and modem. Forget the network and reconnect.
- **Bluetooth device not pairing:** Ensure the device is in pairing mode and within range. Restart Bluetooth on your notebook.

For more complex issues, refer to the Lenovo support website or contact customer service.

7. SPECIFICATIONS

Brand	Lenovo
Model Name	ThinkPad E580

Model Number	20KS003WUS
Screen Size	15.6 Inches
Display Resolution	1366 x 768 pixels (HD)
CPU Model	Intel Core i5-7200U (7th Gen)
Processor Speed	2.5 GHz
RAM Memory Installed Size	4 GB DDR4 SDRAM
Hard Disk Size	500 GB HDD (Serial ATA-600, 7200 RPM)
Operating System	Windows 10 Pro (64-bit)
Graphics Coprocessor	Intel HD Graphics 620 (Integrated)
Connectivity Technology	Bluetooth, Wi-Fi (IEEE 802.11a/b/g/n/ac), Ethernet
Ports	2x USB 3.1, 1x USB Type-C, 1x HDMI, 1x RJ-45, Audio Jack
Special Features	Webcam, Fingerprint Reader
Battery Type	3-cell Lithium Ion (45 Watt Hours)
Item Weight	4.6 Pounds (Approx. 2.09 kg)
Dimensions (L x W x Th)	9.9" x 14.5" x 0.8" (25.1 cm x 36.8 cm x 2.0 cm)
Color	Black
UPC	192158484761

8. WARRANTY AND SUPPORT

8.1. Limited Warranty

The Lenovo ThinkPad E580 (Model 20KS003WUS) comes with a **1-year limited warranty**. This warranty covers manufacturing defects and hardware malfunctions under normal use. For detailed terms and conditions, please refer to the warranty documentation included with your product or visit the official Lenovo support website.

8.2. Customer Support

For technical assistance, driver downloads, or service requests, please visit the official Lenovo Support website. You can also find contact information for customer service in your region on their website.

- **Lenovo Support Website:** support.lenovo.com
- **Product-Specific Support:** Search for "ThinkPad E580" or "20KS003WUS" on the support website for model-specific resources.

