

[Manuals.plus](#) /

› [FoodSaver](#) /

› FoodSaver Fresh Food Preservation System FFS010 Instruction Manual

FoodSaver FFS010

FoodSaver Fresh Food Preservation System

MODEL: FFS010

Brand: FoodSaver

1. Introduction

The FoodSaver Fresh Food Preservation System FFS010 is designed to extend the freshness of your food by removing air and sealing it in specialized bags and containers. This manual provides essential information for safe and effective use of your new appliance.



Image: FoodSaver Fresh Food Preservation System FFS010 shown with fresh berries in a vacuum-sealed container.

2. Safety Information

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Keep out of reach of children.
- Do not operate with a damaged cord or plug.
- Use only FoodSaver brand bags and accessories.

- Always unplug the appliance before cleaning.

3. Package Contents

Verify that all items are present in your package:

- FoodSaver Fresh Food Preservation System FFS010 Unit
- FoodSaver Vacuum Seal Bags (various sizes)
- FoodSaver Vacuum Seal Containers (various sizes, may be sold separately)
- Accessory Hose with Adapters (for use with containers and jar sealers)
- Power Cord

4. Setup

1. **Unpack the Unit:** Carefully remove the FoodSaver FFS010 from its packaging.
2. **Initial Cleaning:** Wipe down the exterior of the unit with a damp cloth. Ensure the drip tray and sealing area are clean and dry.
3. **Power Connection:** Plug the power cord into the appliance and then into a standard electrical outlet. The 'Ready' indicator light should illuminate.
4. **Bag Roll Installation (for custom bags):**
 - Open the lid of the unit.
 - Place a FoodSaver bag roll into the designated compartment.
 - Pull the bag material through the sealing channel to the desired length.
 - Close the lid and press the 'Seal' button to create the bottom seal of your custom bag.
 - Use the built-in cutter to separate the bag from the roll.

5. Operating Instructions

5.1. Vacuum Sealing with Bags

1. **Prepare the Bag:** Place your food item into a FoodSaver vacuum seal bag, leaving at least 3 inches of space between the food and the top of the bag.
2. **Position the Bag:** Place the open end of the bag into the vacuum channel of the FoodSaver FFS010 unit. Ensure the bag is flat and smooth, covering the vacuum gasket.
3. **Close and Lock:** Close the lid firmly until it clicks into place on both sides.
4. **Select Mode (if applicable):** If sealing moist food, press the 'Moist' button. For dry food, ensure 'Dry' mode is selected.
5. **Start Vacuum and Seal:** Press the 'Vacuum' button. The appliance will automatically remove air from the bag and then seal it. The process is complete when the indicator light turns off.
6. **Release:** Press the release buttons on the sides of the unit to open the lid and remove your vacuum-sealed bag.

5.2. Vacuum Sealing with Containers and Accessories

The FoodSaver FFS010 can be used with FoodSaver containers and other accessories via the accessory port.

1. **Prepare Container:** Place food into a FoodSaver container and secure the lid.

2. **Connect Accessory Hose:** Insert one end of the accessory hose into the handheld accessory port on the FoodSaver FFS010 unit.
3. **Connect to Container:** Attach the other end of the accessory hose to the port on the container lid.
4. **Start Vacuum:** Press the 'Vacuum' button. The appliance will remove air from the container. The process stops automatically when a sufficient vacuum is achieved.
5. **Remove Hose:** Gently twist and pull the accessory hose from the container and then from the appliance.

Your browser does not support the video tag.

Video: Demonstration of various FoodSaver vacuum seal containers being used to preserve different food items, showcasing the versatility of the system.

6. Maintenance and Cleaning

1. **Unplug Before Cleaning:** Always ensure the appliance is unplugged from the electrical outlet before cleaning.
2. **Clean Drip Tray:** The removable drip tray collects any overflow liquids. Remove the drip tray, wash it with warm, soapy water, rinse thoroughly, and dry completely before reinserting.
3. **Clean Sealing Strip and Gaskets:** Wipe the sealing strip and vacuum chamber gaskets with a damp cloth to remove any food residue. Ensure they are dry before closing the lid.
4. **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners.

7. Troubleshooting

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
- **Bag Not Vacuuming Properly:** Check that the open end of the bag is placed entirely within the vacuum channel and is flat. Ensure the lid is securely latched on both sides. Inspect the gaskets for any debris or damage.
- **Bag Not Sealing:** Verify that the sealing strip is clean and dry. Ensure the bag material is not wrinkled in the sealing area.
- **Liquid in Drip Tray:** This is normal, especially with moist foods. Clean the drip tray as described in the Maintenance section.

8. Specifications

Feature	Detail
Brand	FoodSaver
Model Number	FFS010
Material	Plastic, Stainless Steel
Color	Black
Product Dimensions	13.23"L x 12.09"W x 7.24"H
Item Weight	7.04 pounds (3.2 Kilograms)

Power Source	Corded Electric
Operation Mode	Manual
Wattage	150 watts
Voltage	230
UPC	053891110402

9. Warranty and Support

Specific warranty details are not provided in the current information. Please refer to the product packaging, the official FoodSaver website, or contact FoodSaver customer support for comprehensive warranty information and assistance.