

[Manuals.plus](#) /

› [Mr. Christmas](#) /

› Mr. Christmas Nostalgic Ceramic Christmas Tree with LED Lights (Model 19653)

Mr. Christmas 19653

Mr. Christmas Nostalgic Ceramic Christmas Tree with LED Lights (Model 19653)

Instruction Manual

INTRODUCTION

The Mr. Christmas Nostalgic Ceramic Christmas Tree is a vintage-inspired indoor decoration featuring modern LED technology. This 18-inch tree, with its shiny, polished, hand-painted finish, brings a classic holiday touch to any setting. It is designed to evoke cherished memories and create new ones for generations to come.

SAFETY INFORMATION

- Always place the tree on a stable, flat surface to prevent tipping.
- Keep the tree away from water or excessive moisture.
- Do not attempt to modify the electrical components or wiring.
- Ensure the power adapter is compatible with your electrical outlet.
- Keep out of reach of small children and pets to prevent accidental damage or injury.
- Unplug the tree from the power outlet when not in use or during cleaning.

PACKAGE CONTENTS

- 1 x Mr. Christmas Nostalgic Ceramic Christmas Tree (18-inch, White)
- 1 x Power Adapter

SETUP INSTRUCTIONS

1. **Unpack the Tree:** Carefully remove the ceramic Christmas tree and its power adapter from the packaging. Inspect for any damage.
2. **Position the Tree:** Place the tree on a stable, level surface where it will not be easily knocked over. Ensure there is sufficient space around it.

3. **Connect Power Adapter:** Locate the power input port at the base of the tree. Insert the small end of the power adapter into this port.
4. **Plug into Outlet:** Plug the larger end of the power adapter into a standard electrical wall outlet.
5. **Activate:** Locate the on/off switch on the power cord and switch it to the 'ON' position. The LED lights and star will illuminate.





Image: The 18-inch white ceramic Christmas tree with multi-colored LED lights and a star topper.

OPERATING INSTRUCTIONS

The Mr. Christmas Nostalgic Ceramic Christmas Tree is designed for simple operation. Once properly set up and plugged into a power source, simply use the on/off switch located on the power cord to control the illumination. The multi-colored faceted LED bulbs and the bright yellow star will light up, creating a festive ambiance.

Your browser does not support the video tag.

Video: An official Mr. Christmas video demonstrating the Nostalgic Ceramic Christmas Tree with LED Lights, showcasing its features and illumination.

MAINTENANCE

- **Cleaning:** To clean the ceramic tree, gently wipe it with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish.
- **Storage:** When not in use, store the tree in its original packaging in a cool, dry place to protect it from dust and damage.
- **Bulb Care:** The LED bulbs are permanently affixed and designed for long-lasting use. Do not attempt to remove or replace them.

TROUBLESHOOTING

- **Tree does not light up:**
 - Ensure the power adapter is securely connected to both the tree and a functional electrical outlet.
 - Check that the on/off switch on the power cord is in the 'ON' position.
- **Lights are dim or flickering:**
 - Verify the power adapter is fully inserted into the electrical outlet.
 - Ensure the power source is stable and not overloaded.

SPECIFICATIONS

Brand	Mr. Christmas
Model Number	19653
Product Dimensions	10.4"D x 10.4"W x 17.75"H
Color	White
Material	Ceramic
Item Weight	5.3 Pounds
Light Type	LED
Light Color	Multicolor
Power Source	Adapter Operated (4ft plug-in cord)
Assembly Required	No

WARRANTY INFORMATION

For detailed warranty information regarding your Mr. Christmas Nostalgic Ceramic Christmas Tree, please refer to the documentation included with your purchase or visit the official Mr. Christmas website. Warranty terms and conditions may vary.

CUSTOMER SUPPORT

Should you require further assistance, have questions, or need to report an issue, please contact Mr. Christmas customer support. You can typically find contact information on the product packaging or on the official Mr. Christmas website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question