

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [SEIKO](#) /

> [Seiko Melodies in Motion Wall Clock Model QXM376BRH Instruction Manual](#)

## SEIKO QXM376BRH

# Seiko Melodies in Motion Wall Clock Model QXM376BRH Instruction Manual

Model: QXM376BRH

## INTRODUCTION

Thank you for purchasing the Seiko Melodies in Motion Wall Clock, Model QXM376BRH. This unique timepiece combines accurate timekeeping with enchanting hourly melodies and captivating motion. The clock features a rotating center dial that opens to reveal a decorative wheel adorned with Swarovski crystals, playing one of eighteen Hi-Fi melodies. This manual provides essential information for proper setup, operation, and maintenance to ensure long-lasting enjoyment of your clock.

## SAFETY INFORMATION

- Do not expose the clock to direct sunlight, high temperatures, or high humidity.
- Avoid placing the clock near strong magnetic fields.
- Use only the specified battery type and ensure correct polarity during installation.
- Remove exhausted batteries promptly to prevent leakage and damage.
- Keep batteries out of reach of children.
- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or chemicals.
- Ensure the clock is securely mounted to a wall to prevent accidental falls.

## PACKAGE CONTENTS

Please check that all items are present in the package:

- Seiko Melodies in Motion Wall Clock (Model QXM376BRH)
- 4 x C Batteries
- Instruction Manual (this document)

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the clock.

2. Open the battery compartment cover.
3. Insert 4 C batteries, ensuring the correct positive (+) and negative (-) polarity as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 1: Rear view of the clock, highlighting the battery compartment and control switches.

## 2. Mounting the Clock

- Select a suitable wall location that can support the weight of the clock (approximately 1 pound).
- Use an appropriate wall anchor and screw for your wall type.
- Hang the clock securely using the mounting hole on the back.

## OPERATING INSTRUCTIONS

## 1. Setting the Time

- Locate the time setting knob on the back of the clock.
- Turn the knob clockwise to set the correct time.
- Ensure the clock hands move smoothly.

## 2. Melody Selection and Volume Control

The clock offers three sets of melodies. Use the selector switch on the back of the clock to choose your preferred melody set:

- **Set A:** The Four Seasons "Spring," Kanon, Eine Kleine Nachtmusik, Symphony No. 6 "Pastoral," "Morning" From Peer Gynt, La Traviata "Drinking Song"
- **Set B:** Amazing Grace, The Planets "Jupiter," Waltz Of The Flowers, Salut d'Amour, Pictures At An Exhibition "Promenade," Dance Of The Reed Pipes
- **Set C (Christmas):** Deck The Halls, O Tannenbaum, We Wish You A Merry Christmas, Joy To The World, Silent Night, Jingle Bells

Adjust the melody volume using the volume control knob located on the back of the clock.

## 3. Automatic Melody Play and Motion

- On the hour, the clock will automatically play a selected melody and initiate the decorative motion sequence. The dial will open to reveal the turning decorative wheel with Swarovski crystals.
- The clock features a light sensor that automatically silences the melodies when the room becomes dark, typically during nighttime hours. This feature helps conserve battery life and prevents disturbance.
- A general ON/OFF switch for the clock's functions (including melodies and motion) is located on the back.



Figure 2: Front view of the clock with the dial in its closed position.



Figure 3: Front view of the clock demonstrating the open dial and internal motion during melody play.

#### 4. Demonstration Button

- Press the demonstration button (located on the back or side of the clock) to play the current melody and activate the motion sequence once, outside of the hourly schedule.

### MAINTENANCE

#### 1. Cleaning

- Wipe the clock's surface with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the finish and internal components.

## 2. Battery Replacement

- Replace all 4 C batteries when the clock stops working, the melodies become faint, or the motion mechanism slows down.
- Always replace all batteries at the same time with new ones of the same type.
- Dispose of old batteries according to local regulations.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not operate.	Batteries are exhausted or incorrectly installed. Clock is switched OFF.	Check battery polarity and replace with new batteries. Ensure the ON/OFF switch is in the ON position.
Melodies do not play.	Volume is set too low. Melody function is switched OFF. Room is too dark (light sensor activated).	Increase volume using the control knob. Ensure the clock's ON/OFF switch is ON. Verify the room lighting.
Motion mechanism does not work.	Batteries are low. Mechanism is obstructed.	Replace batteries. Ensure no foreign objects are obstructing the moving parts.
Time is inaccurate.	Low battery power.	Replace batteries with new ones.

## SPECIFICATIONS

- **Brand:** SEIKO
- **Model:** QXM376BRH
- **Display Type:** Analog
- **Case Material:** Metallic Silver, Wood Frame (Brown)
- **Product Dimensions:** 18.75" (Width) x 4.25" (Depth)
- **Item Weight:** Approximately 1 pound (454 Grams)
- **Power Source:** 4 x C Batteries (included)
- **Special Features:** Hourly Melodies, Decorative Motion with Swarovski Crystals, Volume Control, Light Sensor (for night silence), Demonstration Button
- **UPC:** 029665191335

## WARRANTY AND SUPPORT

### Warranty Information

Seiko guarantees this product's workmanship and material quality for **one year** from the date of purchase, assuming normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty service, please contact Seiko customer support. Refer to the official Seiko website or your purchase documentation for contact details.



## Related Documents - QXM376BRH

	<p><a href="#">Seiko Melodies in Motion Clock Instruction Manual - Model QXM379SRH</a></p> <p>Official instruction manual for the Seiko Melodies in Motion Clock (Model QXM379SRH). Learn how to set time, volume, melodies, operate the pendulum, and understand the automatic light sensor.</p>
	<p><a href="#">Seiko QHL095-W Clock Instruction Manual - Setup and Operation Guide</a></p> <p>Comprehensive guide for the Seiko QHL095-W clock, covering setup, time and alarm setting, operation, maintenance, and troubleshooting. Ensure optimal performance of your Seiko timepiece.</p>
	<p><a href="#">Seiko Clock Limited One-Year Warranty Certificate</a></p> <p>This document outlines the terms and conditions for the Seiko Clock Limited One-Year Warranty, including coverage, limitations, and procedures for obtaining warranty service.</p>
	<p><a href="#">Seiko Digital Clock Instruction Manual</a></p> <p>Comprehensive instruction manual for the Seiko digital clock, covering time setting, alarm functions, temperature display, and daylight saving time (DST).</p>
	<p><a href="#">Seiko R-Wave XR131-1 Radio-Controlled Clock Instructions</a></p> <p>Official instructions for the Seiko R-Wave XR131-1 radio-controlled clock. Learn how it works, setup, time zone settings, automatic and manual time setting, DST, and specifications.</p>
	<p><a href="#">Seiko Melody Clock Instruction Manual</a></p> <p>Instruction manual for the Seiko Melody Clock, detailing setup, time and volume adjustment, melody selection, demonstration mode, light sensor functionality, and battery life information.</p>



### [Seiko Clocks: A Century of Excellence - Wall, Chime, and Alarm Clocks](#)

Explore the extensive collection of Seiko clocks, featuring wall clocks, chime clocks, bedside alarms, desk clocks, mantel clocks, and more. Discover timeless designs and quality craftsmanship from Seiko.

lang:en score:14 filesize: 2.24 M page\_count: 36 document date: 2020-04-16