

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Elefun and Friends Shark Chase Game Instruction Manual Model 33893

Hasbro 33893

Hasbro Elefun and Friends Shark Chase Game Instruction Manual

Model: 33893

INTRODUCTION

Welcome to the exciting world of Hasbro Elefun and Friends Shark Chase Game! This manual provides comprehensive instructions for setting up, playing, and maintaining your game. Prepare for a thrilling race to escape the chomping shark!



Image: The game box, featuring a large blue shark and colorful fish characters, with the title "Shark Chase!"

What's in the Box

Before you begin, ensure all components are present:

- 1 Game Board
- 1 Motorized Shark with Rotation Arm
- 4 Fish Movers (various colors)
- 2 Dice
- Instruction Manual (this document)



Requires 2x AA batteries

64cm

Image: All game components including the folded game board, the blue shark, two dice, and four colorful fish movers.

SETUP

1. **Prepare the Game Board:** Unfold the game board and place it on a flat, stable surface.
2. **Insert Batteries into the Shark:** The motorized shark requires 2 AA batteries (not included). Open the battery compartment on the underside of the shark, insert the batteries according to polarity markings, and close the compartment securely.
3. **Position the Shark:** Place the motorized shark in the designated center area of the game board. Ensure its rotation arm can move freely.
4. **Choose Fish Movers:** Each player selects a fish mover of their preferred color. Place your fish mover on the starting space indicated on the board.

SHARK CHASE!

If your fish isn't dinner, you'll be the WINNER!
Pour sortir GAGNANT, reste loin de ses dents!

CONTENTS
 Motorized shark with rotation arm and 2 discs • Gameboard •
 4 Fish pawns • 2 Dice • Instructions

CONTENU
 Requin motorisé avec bras de rotation et 2 disques • Plateau de jeu •
 4 pions poissons • 2 dés • Règles du jeu





1. This hungry shark CHOMPS and CHASES your fish around the board.
Ce requin affamé POURSUIT ton poisson pour le DÉVORER.



2. ROLL your fish's color and SWIM away as fast as you can.
OBTIENS la couleur de ton poisson et SAUVE-TOI le plus vite possible.



3. If you get CHOMPED you're OUT!
Si tu te fais MANGER, tu es ÉLIMINÉ!

HASBRO ARCADE™ app works with iPhone/iPad/iPod touch—iOS 5.0 or later required—and select Android devices. Check www.hasbro.com/arcade for instructions, availability, and compatibility info. Ask a parent before going online. Available for a limited time. Not available in all languages. Website not intended for Quebec residents under 13. Note: Hasbro is only responsible for Hasbro-generated content. Please refer to third party terms and conditions for further information.

Appli HASBRO ARCADE compatible avec iPhone/iPad/iPod touch (iOS 5.0 ou plus récent) et certains appareils Android. Voir www.hasbro.com/arcade pour les instructions et de l'info sur la disponibilité et la compatibilité de l'appli. Demander à un parent avant d'aller sur Internet. Accessible pour une durée limitée. Non disponible dans toutes les langues. Le site Web ne s'adresse pas aux résidents du Québec de moins de 13 ans. Note: Hasbro n'est responsable que du contenu qu'il produit. Veuillez consulter les modalités des tierces parties pour de plus amples renseignements.

Apple, the Apple logo, iPhone, iPad, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play and Android are trademarks of Google Inc.

Colors and parts may vary from those pictured. Retain this information for future reference. Les couleurs et les pièces peuvent différer de celles illustrées. Conservez cette information pour référence ultérieure. Duracell and its logo are trademarks of Procter & Gamble and are used with permission. © 2015 Procter & Gamble. All rights reserved. ® and/or TM® & © 2014 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. Tous droits réservés. TM & ® denote U.S. Trademarks.

HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2. US/CANADA TEL. 1-800-255-5516.
 MADE IN CHINA • FABRIQUÉ EN CHINE







Download on the
App Store

Télécharger dans l'App Store

GET IT ON
Google play

DISPONIBLE SUR Google play

Image: The back of the game box illustrating the setup steps and how the shark chomps fish.

How to PLAY (OPERATING)

The objective of Shark Chase is to be the last fish remaining on the board. Players race their fish around the board while avoiding the chomping shark.

Game Start

- The youngest player goes first. Play proceeds clockwise.
- Turn on the shark by pressing the button. The shark's arm will begin to rotate and chomp.

Player Turn

1. **Roll the Dice:** On your turn, roll both dice. The dice show colors corresponding to the fish movers.
2. **Move Your Fish:** Move your fish mover forward the number of spaces indicated by the color on the dice. For example, if you roll a yellow and a red, and your fish is yellow, you move your yellow fish one space. If you roll two of your color, you move two spaces. If you roll a color that is not yours, that player moves their fish one space.

3. **Avoid the Shark:** As the shark's arm rotates, it will attempt to "chase" and "chomp" fish. If the shark's mouth closes on your fish, your fish is out of the game. Remove your fish from the board.



Image: A child's hand carefully moving a yellow fish game piece on the blue game board, with the shark and dice visible.

GAME RULES

- Players must move their fish according to the dice roll.
- If a player's fish is chomped by the shark, that player is eliminated from the current round.
- The game continues until only one fish remains on the board. That player is the winner!
- If the shark chomps all fish simultaneously, the game is a draw, or players can choose to restart.



Image: Four children gathered around a table, playing the Shark Chase game, with expressions of excitement and anticipation as the shark moves.

MAINTENANCE

Proper care will ensure the longevity of your game:

- **Cleaning:** Wipe the game board and plastic components with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the game in its original box in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove batteries from the shark if the game will not be used for an extended period to prevent leakage.
- **Board Care:** If the game board shows signs of separation at the folds, a strip of strong tape applied to the underside can reinforce it without affecting play.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Shark is not moving or chomping.	• Ensure the power button on the shark is pressed. • Check if the 2 AA batteries are correctly inserted and not depleted. Replace if necessary. • Verify that the shark's rotation arm is not obstructed.
Game board is separating at the folds.	This can occur with repeated folding. Apply a strong, clear tape to the underside of the board along the fold lines to reinforce it. This will not affect the ability to fold the board for storage.

SPECIFICATIONS

- **Model Number:** 33893
- **Brand:** Hasbro
- **Product Dimensions:** 3.62 x 10.55 x 10.55 inches
- **Item Weight:** 1.43 pounds
- **Batteries Required:** 2 AA batteries (not included)
- **Recommended Age:** Ages 5+ (as indicated on product packaging)
- **Players:** 2-4

SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.
Always supervise young children during play. Keep batteries away from small children. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

WARRANTY AND SUPPORT

For product support, replacement parts, or warranty information, please contact Hasbro Customer Service. Refer to the contact information provided on the product packaging or visit the official Hasbro website.
Hasbro Website: www.hasbro.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B079Z817JG>

More documents and user manuals: <https://manuals.plus/>