

Walker Edison W52NORGSDW

Walker Edison Saxon Modern Glass Shelf TV Stand

Model: W52NORGSDW

User Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Walker Edison Saxon Modern Glass Shelf TV Stand. Crafted from high-grade MDF with a tempered safety glass shelf and angled metal legs, this 52-inch TV stand offers a blend of modern design and practical storage. Please read this manual thoroughly before beginning assembly or use to ensure safe and proper operation.



Image 1.1: The Walker Edison Saxon Modern Glass Shelf TV Stand, showcasing its dark walnut finish and modern design.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the product:

- **Weight Limits:** Do not exceed the maximum weight capacity. The top surface supports up to 150 lbs. and

adjustable wood and tempered safety glass shelves support up to 30 lbs. Overloading can cause the stand to collapse, leading to serious injury or property damage.

- **TV Size:** This stand is designed to support TVs up to 58 inches. Ensure your television's base fits securely on the top surface and its weight does not exceed the stated limit.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all hardware is securely tightened before use. Periodically check and re-tighten all connections.
- **Stability:** Place the TV stand on a level, stable surface. Uneven surfaces can cause the stand to tip.
- **Children Safety:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb or play on the TV stand. Consider using anti-tip restraints (not included) for added safety, especially in homes with children or pets.
- **Ventilation:** Ensure adequate ventilation around electronic devices placed on or within the stand to prevent overheating.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support immediately.

Component	Description
TV Stand Panels	All engineered wood panels forming the main structure.
Shelves	Includes both engineered wood and tempered safety glass shelves.
Legs	Angled metal legs for support.
Hardware Pack	All necessary screws, bolts, cam locks, dowels, and other fasteners.
Assembly Instructions	Detailed step-by-step assembly guide (this document).

4. SETUP AND ASSEMBLY

Assembly is required for this TV stand. It is recommended that two adults assemble this unit. Estimated assembly time is approximately 60-90 minutes. You will need a Phillips head screwdriver and possibly a hammer (not included).

Preparation:

1. Clear a spacious area for assembly, preferably on a carpeted or soft surface to protect the furniture finish.
2. Unpack all components and lay them out. Identify each part using the provided parts list (refer to Section 3).
3. Gather the necessary tools: Phillips head screwdriver.

Assembly Steps (General Guide):

While specific steps may vary, the general assembly process for this type of furniture includes:

1. **Attach Cam Locks and Dowels:** Insert cam locks and wooden dowels into the designated holes on the main panels.
2. **Assemble Side and Base Panels:** Connect the side panels to the base and top panels using cam bolts and cam locks. Ensure all connections are snug.
3. **Install Shelves:** Insert shelf pins into the desired height holes for adjustable shelves. Carefully place the wood and

tempered glass shelves onto the pins.

4. **Attach Legs:** Securely fasten the angled metal legs to the bottom of the TV stand using the provided screws.
5. **Install Door:** Attach the door hinges to the door and the main frame, then mount the door. Adjust hinges as needed for proper alignment.
6. **Attach Door Handle:** Secure the door handle to the door.
7. **Final Check:** Once assembled, gently lift and move the stand to its desired location. Ensure all connections are tight and the stand is stable.

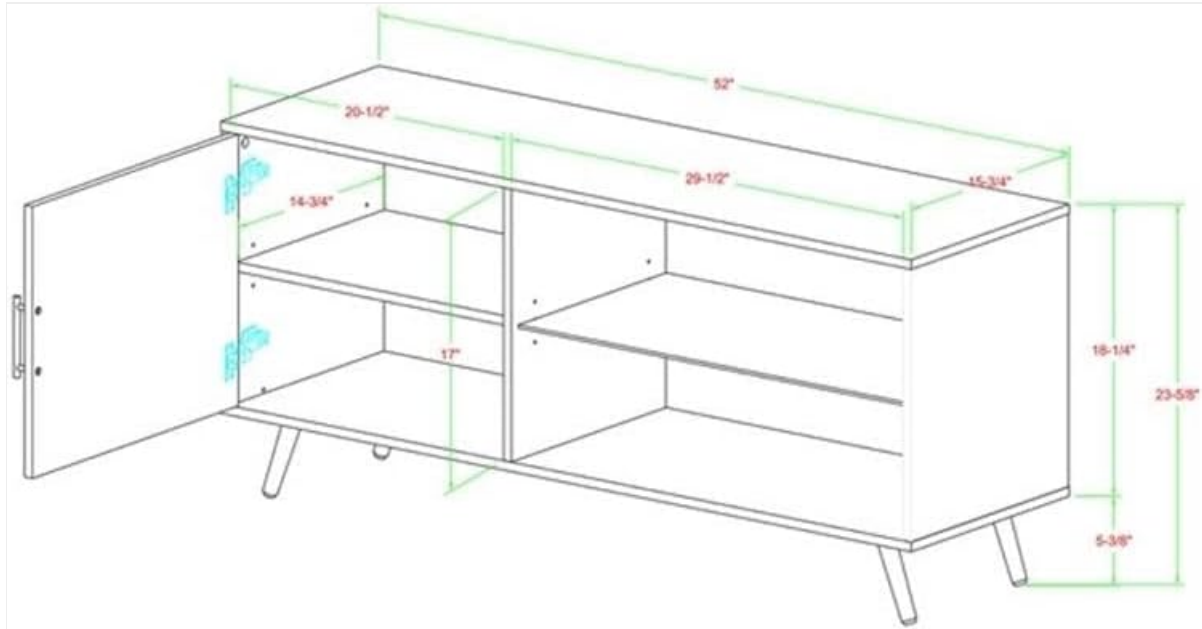 


Image 4.1: Dimensional diagram of the TV stand, illustrating its overall size and internal compartment measurements.

5. OPERATING INSTRUCTIONS

Your Walker Edison Saxon TV Stand is designed for optimal media organization and display.

- **Placement:** Position the TV stand in your desired location, ensuring it is on a flat, stable surface.
- **TV Placement:** Carefully place your television on the top surface, ensuring it is centered and stable. Verify that the TV's weight does not exceed 150 lbs and its size is within the recommended 58 inches.
- **Storage:** Utilize the open and closed storage cubbies for media devices, books, decor, and other items. The closed cubby provides discreet storage, while the open shelves are ideal for displaying items.
- **Cable Management:** The stand features two cord management ports in the back panel. Route your electronic device cables through these ports to keep them tidy and out of sight, maintaining a clean aesthetic.



Image 5.1: The TV stand integrated into a living room, demonstrating its capacity to hold a television and various media accessories.



Image 5.2: A detailed view of the closed storage cubby, illustrating its internal capacity for discreet storage.

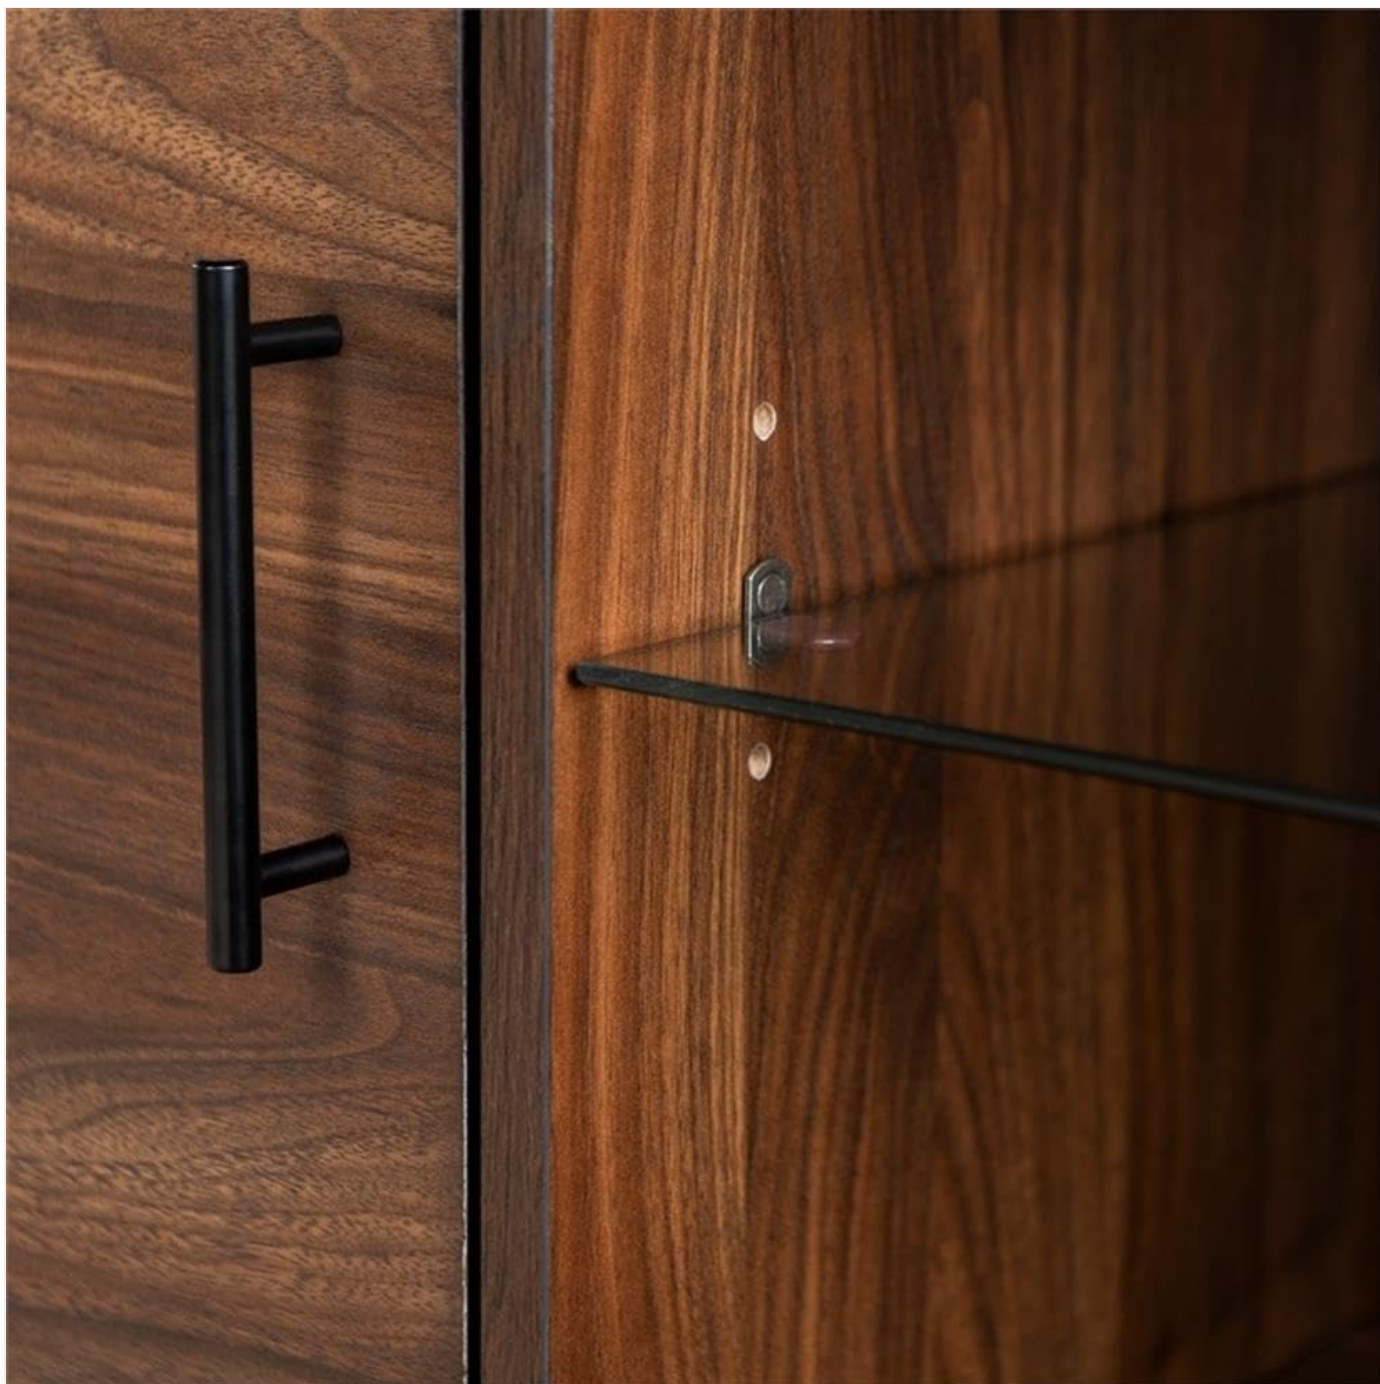 


Image 5.3: A detailed view of the tempered glass shelf and the integrated cable management port, designed to keep wires organized.

6. MAINTENANCE AND CARE

Proper care will extend the life and maintain the appearance of your TV stand.

- **Cleaning:** Wipe the surfaces with a dry cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the engineered wood finish or glass.
- **Spills:** Immediately wipe up any spills with a soft, dry cloth to prevent moisture damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary.

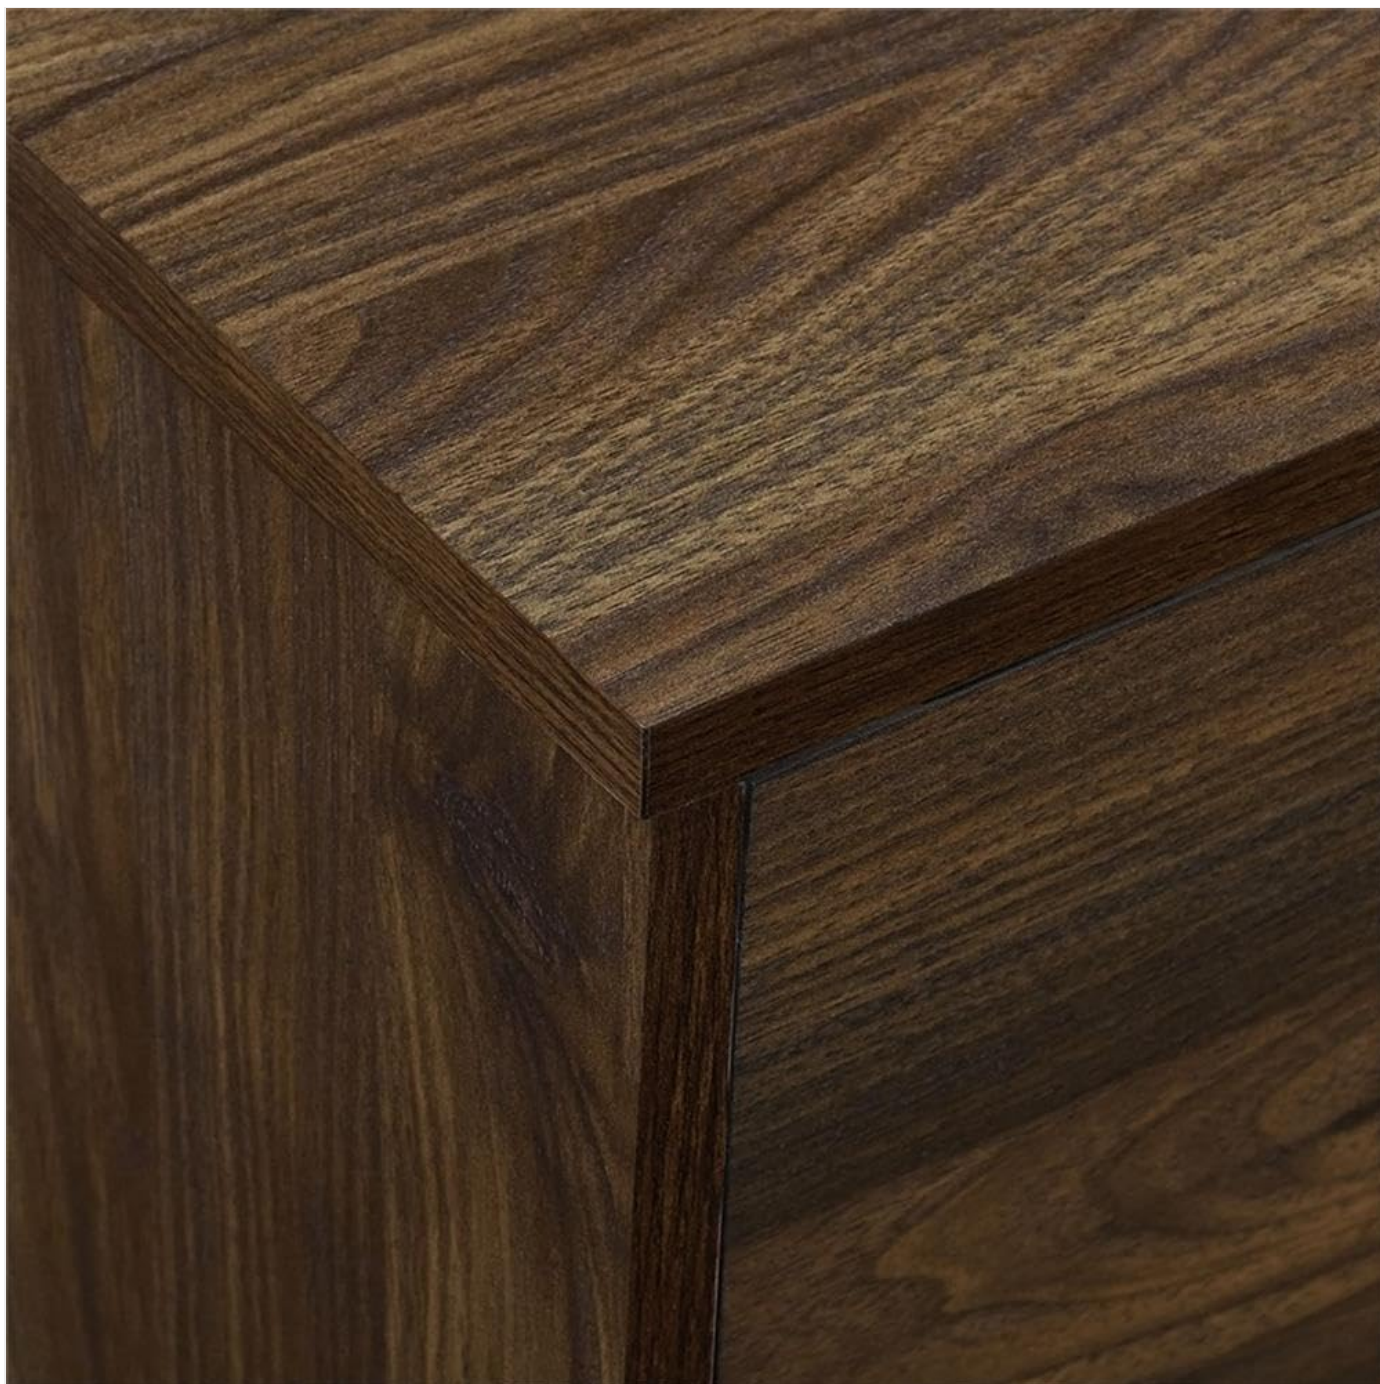 


Image 6.1: A close-up view of the dark walnut engineered wood surface, highlighting its grain and finish.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Wobbling/Instability:**
 - Ensure the stand is placed on a completely level surface.
 - Check all assembly hardware (screws, cam locks) and tighten any loose connections.
- **Door Misalignment:**
 - Adjust the hinges on the door to correct alignment. Most hinges allow for minor adjustments using a screwdriver.
- **Missing or Damaged Parts:**

- Do not attempt to assemble the unit with missing or damaged parts. Contact Walker Edison customer support immediately for replacements.

8. SPECIFICATIONS

Feature	Detail
Model Number	W52NORGSDW
Brand	Walker Edison
Color	Dark Walnut
Material	Engineered Wood, Tempered Safety Glass
Product Dimensions (D x W x H)	16"D x 52"W x 24"H
Item Weight	65 Pounds
Top Surface Weight Limit	150 Pounds
Shelf Weight Limit	30 Pounds
Max TV Size Supported	Up to 58 inches
Number of Shelves	2
Assembly Required	Yes
Care Instructions	Wipe with Dry Cloth

9. WARRANTY AND SUPPORT

 
Warranty: This Walker Edison Saxon TV Stand comes with a 30-day limited manufacturer warranty. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support: For any questions regarding assembly, missing parts, or warranty claims, please contact Walker Edison customer support. Visit the official Walker Edison website or refer to your purchase documentation for contact information.

For more information and to explore other products, visit the[Walker Edison Store on Amazon](#).



Related Documents

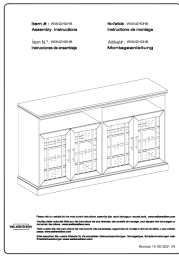


[Walker Edison W584DHDHB Assembly Instructions | Furniture Setup Guide](#)

Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.



[Walker Edison NOAM3F2 Assembly Instructions](#)

 Detailed assembly guide for the Walker Edison NOAM3F2 TV stand or media console, including parts list and step-by-step instructions for home assembly.

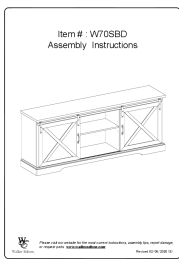

[Walker Edison W70SBD TV Stand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison W70SBD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.



[Walker Edison W60FPXDHB Assembly Instructions](#)

Comprehensive assembly guide for the Walker Edison W60FPXDHB TV stand with fireplace. Includes parts list, hardware, and step-by-step instructions in multiple languages.