

oneConcept DB004

oneConcept DB004 Mini Washing Machine User Manual

Model: DB004

INTRODUCTION

The oneConcept DB004 Mini Washing Machine is a compact and efficient appliance designed for single households, students, garden houses, and campers. It offers both washing and spinning functions with a 4.8 kg capacity, making it suitable for small to medium laundry loads. Its portable design and user-friendly controls ensure a convenient laundry experience in various settings.

SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance to prevent damage and ensure safe operation. Keep this manual for future reference.

- Ensure the power supply voltage matches the rating label on the appliance (220-240 V, 50/60 Hz).
- Do not operate the machine with a damaged power cord or plug. Contact qualified service personnel for repairs.
- Keep the appliance away from water sources and do not immerse it in water. Do not operate with wet hands.
- Always unplug the machine from the power outlet before cleaning, maintenance, or if it will not be used for an extended period.
- Do not allow children to operate or play with the appliance. Close supervision is necessary when the machine is used near children.
- Place the machine on a stable, level surface to prevent vibrations and movement during operation.
- Do not overload the washing or spinning compartments. Refer to the capacity guidelines.
- Ensure the spin compartment lid is securely closed before starting the spin cycle to prevent injury.

- Only use detergents suitable for washing machines.
- Do not wash items containing flammable substances.

PRODUCT OVERVIEW

Control Panel



This image displays the top of the oneConcept DB004 Mini Washing Machine, highlighting the control panel. From left to right, you can see the wash timer knob, the water inlet selector switch, the wash program selector knob (for 'Soft' or 'Normal' cycles), the drain selector knob, and the spin timer knob. These controls allow you to manage the washing and spinning processes.

- **Wash Timer:** Sets the duration of the wash cycle (0-15 minutes).
- **Water Inlet Selector:** Directs water to either the wash tub or the spin tub.
- **Wash Program Selector:** Choose between 'Soft' for delicate items or 'Normal' for regular laundry.

- **Drain Selector:** Controls the water drainage from the machine.
- **Spin Timer:** Sets the duration of the spin cycle (0-5 minutes).

Components

- Wash Tub (left compartment)
- Spin Tub (right compartment)
- Lids for Wash and Spin Tubs
- Integrated Drain Hose
- Power Cord
- Lint Filter (located inside the wash tub)

SETUP

Before first use, ensure the machine is placed on a stable, level surface. Unpack all components and check for any damage.

1. **Positioning:** Place the washing machine in a location with access to a water source and a drain. Ensure there is enough space around the machine for operation and ventilation.
2. **Drain Hose:** Extend the integrated drain hose and position it to drain into a sink, bathtub, or floor drain. Ensure the hose is not kinked or blocked. The machine relies on gravity for drainage, so the drain point must be lower than the machine's outlet.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240 V, 50/60 Hz).



The rear view of the washing machine shows the power cord neatly stored in a compartment and the integrated drain hose extending from the lower left side. This hose is used to discharge water after washing or spinning.

OPERATING INSTRUCTIONS

Washing Cycle

1. **Load Laundry:** Open the lid of the wash tub (left compartment) and place your sorted laundry inside. Do not exceed the 4.8 kg capacity.
2. **Add Water:** Set the Water Inlet Selector to 'Wash'. Fill the wash tub with water using a hose or bucket. Ensure the water level covers the laundry but does not overflow.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub.
4. **Select Program:** Turn the Wash Program Selector to either 'Soft' for delicate fabrics or 'Normal' for regular clothes.
5. **Set Wash Timer:** Turn the Wash Timer knob to your desired wash duration (up to 15 minutes). The machine will start washing automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the Drain Selector to 'Drain' to empty the water from the wash tub. Ensure the drain hose is positioned correctly.
7. **Rinse (Optional):** For rinsing, you can either refill the wash tub with clean water and run a short wash cycle, or transfer the laundry to the spin tub for rinsing during the spin cycle.

Spin Cycle

1. **Transfer Laundry:** Carefully transfer the washed laundry from the wash tub to the spin tub (right compartment). Distribute the laundry evenly to prevent imbalance.
2. **Secure Lid:** Place the safety cover over the laundry in the spin tub and close the spin tub lid securely.
3. **Set Spin Timer:** Turn the Spin Timer knob to your desired spin duration (up to 5 minutes). The machine will start spinning.
4. **Rinse During Spin (Optional):** If you wish to rinse during the spin cycle, set the Water Inlet Selector to 'Spin' and allow clean water to flow into the spin tub while it is spinning. This helps to remove residual detergent.
5. **Remove Laundry:** Once the spin cycle is complete, open the lid and carefully remove the spun laundry.



This image presents the oneConcept DB004 Mini Washing Machine from a front-side angle, with neatly folded laundry items placed beside it. This visual helps to convey the compact dimensions of the machine and provides a sense of its capacity for typical laundry loads.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Lint Filter

The lint filter, located inside the wash tub, collects lint and debris during washing. It should be cleaned regularly to maintain washing efficiency.

1. Ensure the machine is unplugged and empty.
2. Locate the lint filter inside the wash tub. It may be a removable mesh bag or a fixed screen.
3. If removable, carefully detach it. Clean any accumulated lint and debris under running water.
4. If fixed, use a brush or cloth to remove lint from the screen.
5. Reinstall the filter securely.

General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the interior of the wash and spin tubs periodically to prevent residue buildup. You can run a short cycle with just water and a small amount of vinegar.
- After each use, leave the lids slightly ajar to allow the tubs to air dry and prevent odors.
- Check the drain hose for any blockages or damage.

TROUBLESHOOTING

If you encounter any issues with your oneConcept DB004 Mini Washing Machine, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not start	No power supply Lid not closed properly Timer not set	Check power plug and outlet Ensure wash/spin tub lid is securely closed Set the wash or spin timer
Poor washing performance	Overloading Insufficient water Too little detergent Lint filter clogged	Reduce laundry load Add more water Use recommended amount of detergent Clean the lint filter
Water not draining	Drain hose kinked or blocked Drain hose positioned too high Drain selector not set to 'Drain'	Check and clear drain hose Ensure drain point is lower than machine's outlet Turn Drain Selector to 'Drain'
Excessive vibration/noise during spin	Uneven laundry distribution Machine not on a level surface	Redistribute laundry evenly in the spin tub Adjust machine's position to a level surface
Water leakage	Overfilling Loose hose connection Damaged tub	Do not overfill the tub Check all hose connections Contact customer support if tub is damaged

SPECIFICATIONS

Feature	Detail
Brand	oneConcept
Model Number	DB004 (Item: 10006739)
Product Dimensions (W x H x D)	67.5 x 74 x 38 cm
Item Weight	14.8 kg
Washing Capacity	4.8 Kilograms
Wash Power	380 W

Feature	Detail
Spin Power	160 W
Power Supply	220 - 240 V, 50/60 Hz
Wash Timer	0 - 15 minutes
Spin Timer	0 - 5 minutes
Wash Programs	Normal, Delicate
Access Location	Top loader
Material	Plastic
Color	White-Grey
Special Features	Low noise operation, compact dimensions, wash timer, spin timer
Date First Available	March 13, 2020

WARRANTY AND SUPPORT

This oneConcept DB004 Mini Washing Machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance beyond this manual, or to inquire about spare parts, please contact oneConcept customer service. Contact information can typically be found on the product packaging, the official oneConcept website, or your purchase receipt.

When contacting support, please have your product model number (DB004) and item number (10006739) ready, along with your purchase date.