

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hormann](#) /

› [Hormann 4511647 IT3b-1 Interior Push Button User Manual](#)

## Hormann 4511647

# Hormann IT3b-1 Interior Push Button User Manual

Model: 4511647 | Brand: Hormann

## 1. INTRODUCTION AND PRODUCT OVERVIEW

The Hormann IT3b-1 Interior Push Button (Model 4511647) is designed for convenient and reliable operation of your garage door system from within your garage or home. This wired push button features a large, easy-to-press button with an illuminated ring for enhanced visibility and user comfort. It offers multiple functions for controlling your garage door and its associated lighting.

## 2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before installation and operation. Failure to follow these instructions may result in injury or damage to the product.

- **Electrical Safety:** Installation should only be performed by qualified personnel or under the supervision of a qualified electrician. Ensure power to the garage door operator is disconnected before beginning any installation or wiring work.
- **Intended Use:** This device is intended for controlling Hormann garage door operators. Do not use it for purposes other than those specified.
- **Children:** Keep children away from the push button and garage door area.
- **Environment:** Do not expose the device to moisture, extreme temperatures, or corrosive substances.

## 3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Hormann IT3b-1 Interior Push Button
- Mounting hardware (screws, wall plugs)
- Connection cable (typically included)
- Multilingual instruction manual

## 4. SETUP AND INSTALLATION

The IT3b-1 push button is designed for surface mounting and requires a wired connection to your garage door operator's control unit.

- 1. Choose Location:** Select a suitable indoor location for the push button, typically near the garage entrance, ensuring it is easily accessible but out of reach of small children.
- 2. Disconnect Power:** Before proceeding, ensure the main power supply to your garage door operator is completely disconnected.
- 3. Mount the Push Button:**



Image: The Hormann IT3b-1 Interior Push Button, showing its compact design and large central button with an illuminated ring. This image illustrates the product's appearance when mounted.

Use the provided mounting hardware to securely attach the push button housing to the wall.

- 4. Wire the Connection:** Connect the provided cable from the push button to the designated terminals on your Hormann garage door operator's control unit. Refer to your garage door operator's manual for specific wiring diagrams and terminal assignments. The push button uses screw terminals for connection.
- 5. Restore Power:** Once wiring is complete and secure, restore power to the garage door operator.

## 5. OPERATING INSTRUCTIONS

The IT3b-1 push button offers intuitive control over your garage door system.

- **Garage Door Operation:** Press the large central button once to initiate the garage door movement (open or close). Pressing it again during movement will stop the door. A third press will reverse the door's direction.
- **Illuminated Ring:** The illuminated ring around the button provides visual feedback and makes the button easy to locate in low light conditions.
- **Drive Light Control:** The push button may also include a function to control the drive unit's integrated lighting. Consult your garage door operator's manual for specific instructions on activating this feature.
- **Remote Control Stop Function:** This button can be used to stop or deactivate remote control access, providing an added security feature. Refer to your garage door operator's manual for details on configuring and using this function.

## 6. MAINTENANCE

The Hormann IT3b-1 Interior Push Button requires minimal maintenance.

- **Cleaning:** Clean the surface of the push button with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check the wiring connections to ensure they are secure.
- **No User-Serviceable Parts:** The device contains no user-serviceable parts. Do not attempt to open or repair the unit yourself.

## 7. TROUBLESHOOTING

If you experience issues with your IT3b-1 Interior Push Button, consider the following:

- **Button Not Responding:**
  - Check if the garage door operator has power.
  - Verify all wiring connections are secure at both the push button and the operator's control unit.
  - Ensure there are no obstructions preventing the garage door from moving.
- **Illuminated Ring Not Working:**
  - Confirm the push button is correctly wired and receiving power.
  - If the button functions but the light does not, the internal LED may be faulty. Contact customer support.
- **Intermittent Operation:**
  - Inspect wiring for any loose connections or damage.
  - Ensure the push button is not exposed to excessive vibration or impact.

If problems persist, consult your garage door operator's manual or contact Hormann customer support.

## 8. SPECIFICATIONS

Feature	Specification
Model Number	4511647
Dimensions (L x W x H)	8 x 8 x 4.5 cm (3.15 x 3.15 x 1.77 inches)
Weight	200 grams (0.44 lbs)
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	White
Switch Type	Push Button, 3-way
Mounting Type	Surface Mount
Operating Mode	ON-OFF
Current Rating	1 A
Operating Voltage	1 Volt (Please refer to your operator's manual for compatible voltage requirements)
Contact Type	Normally Open
Connector Type	Plug-in
Terminal Type	Screw
Batteries Required/Included	No

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your Hormann garage door operator or visit the official Hormann website. Keep your proof of purchase for warranty claims.

**Manufacturer:** Hormann