

Seco-Larm SD-862T-GWSQ

Seco-Larm Enforcer SD-862T-GWSQ Wireless Push-to-Exit
Desktop Transmitter User Manual

Model: SD-862T-GWSQ | Brand: Seco-Larm

1. INTRODUCTION

The Seco-Larm Enforcer SD-862T-GWSQ Wireless Push-to-Exit Desktop Transmitter is designed to provide convenient access control by activating any SK-910 series RF receiver (315 MHz) without the need for wiring. This battery-powered transmitter can be placed on a desktop or wall-mounted, offering flexibility in installation. It features interchangeable message plates for the "PUSH TO EXIT" caption, supporting English, Spanish, French, or a blank face.

2. PRODUCT FEATURES

- Works with any SK-910 series RF receiver (315 MHz).
- Wireless range up to 250 feet (line of sight).
- Includes English, Spanish, French, and blank message plates for customization.
- Battery-powered operation eliminates the need for wiring.
- Designed for versatile installation, allowing wall-mount or tabletop placement.
- Multi-colored LED indicator for battery status and button activation.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Wireless Desktop Transmitter (SD-862T-GWSQ)
- 9V Alkaline Battery
- Mounting Backbox
- (2) Wallplate Screws
- (2) Mounting Screws
- (2) Wall Anchors
- (4) Message Plates (English, Spanish, French, blank)
- (4) Adhesive Rubber Feet
- Instruction Manual (this document)

4. SETUP AND INSTALLATION

The Wireless Desktop Transmitter offers two primary installation methods: desktop placement or wall-mounting.

4.1. Battery Installation

1. Open the battery compartment on the back of the transmitter.
2. Insert the included 9V alkaline battery, ensuring correct polarity.
3. Close the battery compartment securely. The battery is designed to last up to four years with typical usage (60 uses per day).

4.2. Message Plate Selection

1. Choose the desired message plate (English, Spanish, French, or blank) from the included set.
2. Carefully insert the chosen plate into the designated slot on the transmitter's button face.

4.3. Desktop Placement

- Attach the four adhesive rubber feet to the bottom of the transmitter to prevent slipping and protect surfaces.
- Place the transmitter on a flat, stable surface within 250 feet (line of sight) of the SK-910 series RF receiver.

4.4. Wall Mounting

- Secure the mounting backbox to the desired wall location using the provided wallplate screws and wall anchors. Ensure the location is within 250 feet (line of sight) of the SK-910 series RF receiver.
- Attach the transmitter to the mounted backbox using the mounting screws.

Note: The Wireless Desktop Transmitter requires an SK-910 series RF receiver (315 MHz), which is sold separately, to function.



Figure 1: Seco-Larm Enforcer SD-862T-GWSQ Wireless Push-to-Exit Desktop Transmitters. This image displays six units of the Seco-Larm Enforcer Push-to-Exit Wireless Desktop Transmitter. Each unit features a white faceplate with the 'ENFORCER' logo, a prominent green 'PUSH TO EXIT' button, and a small blue LED indicator above the button. The units are shown in a grid layout, highlighting their compact design suitable for desktop placement or wall mounting.

5. OPERATING INSTRUCTIONS

5.1. Activating the Transmitter

To activate the transmitter and send a signal to the paired SK-910 series RF receiver, simply press the "PUSH TO EXIT" button.

5.2. LED Indicator

- When the button is pressed, the multi-colored LED illuminates **blue**, indicating that a signal is being transmitted.

- When the battery begins to run low, the LED will illuminate **red**. Refer to the Maintenance section for battery replacement.

6. MAINTENANCE

6.1. Battery Replacement

The transmitter is powered by a 9V alkaline battery. When the multi-colored LED illuminates red, it indicates that the battery level is low and requires replacement.

1. Open the battery compartment on the back of the transmitter.
2. Remove the old 9V battery.
3. Insert a new 9V alkaline battery, ensuring correct polarity.
4. Close the battery compartment securely.

6.2. Cleaning

Wipe the transmitter's surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Transmitter does not activate receiver.	Low or dead battery.	Replace the 9V battery.
	Transmitter out of range.	Move the transmitter closer to the receiver (within 250 ft line of sight).
	Receiver not properly paired or powered.	Ensure the receiver is powered and correctly paired with the transmitter. Refer to the receiver's manual for pairing instructions.
LED illuminates red.	Low battery.	Replace the 9V battery immediately.
Intermittent operation.	Interference from other RF devices.	Relocate the transmitter or receiver to minimize interference.
	Obstructions between transmitter and receiver.	Ensure a clear line of sight between the transmitter and receiver.

8. SPECIFICATIONS

Manufacturer	Seco-Larm
Part Number	SD-862T-GWSQ
UPC	676544018278
Color	Green (button)
Type	RF Wireless Transmitter
Operating Frequency	315 MHz
Operating Voltage	9VDC (Alkaline battery included)

Battery Life	Up to four (4) years (based on 60 uses per day)
Maximum Range	250 feet (76m) line of sight (actual range may vary)
Dimensions (Desktop)	4-5/8 x 2-7/8 x 1-7/8 inches (117 x 73 x 48 mm)
Dimensions (Wall-mount)	4-5/8 x 2-7/8 x 2 inches (117 x 73 x 50 mm)
Weight	6 ounces (178g)
Approvals	FCC, CE, RoHS

9. WARRANTY AND SUPPORT

9.1. Warranty Information

This Seco-Larm Enforcer SD-862T-GWSQ Wireless Push-to-Exit Desktop Transmitter comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For full warranty terms and conditions, please refer to the official Seco-Larm warranty policy or contact customer support.

9.2. Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Seco-Larm customer support.

- **Website:** www.seco-larm.com
- **Phone:** Refer to the Seco-Larm website for regional contact numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07B1M4DKN>

More documents and user manuals: <https://manuals.plus/>