

Manuals+


[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Thomson](#) /

› [Thomson Universal 2-in-1 Zapper Remote Control ROC Z107 User Manual](#)

Thomson ROC Z107

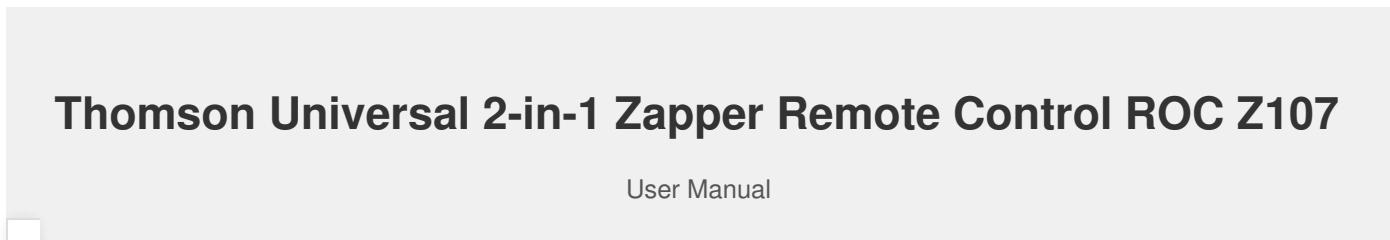

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Thomson Universal 2-in-1 Zapper Remote Control ROC Z107. Please read this manual carefully before using the device to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Thomson ROC Z107 is a universal remote control designed to operate two devices, typically a Television (TV) and a Set-Top Box (STB). It features large buttons for ease of use and includes a learning function for expanded compatibility.



Image: Thomson Universal 2-in-1 Zapper Remote Control ROC Z107. This image displays the remote control from a slightly angled top-down perspective, highlighting its ergonomic design and the layout of its primary buttons.

SETUP

1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -). Two AAA batteries are included with your purchase.
3. Close the battery compartment cover securely.

2. Initial Programming (Pre-programmed Devices)

The remote control is pre-programmed for many popular brands such as LG, Sony, Samsung, Sharp, and Philips. For these brands, the remote may function immediately after battery installation without further setup. Test the remote with your TV and STB.

3. Learning Function (For Unlisted or Specific Functions)

If your device is not immediately compatible or if you wish to add specific functions from your original remote, use the learning function:

1. Place the Thomson remote and your original remote control head-to-head, approximately 2-5 cm apart.
2. Press and hold the desired device button (TV or STB) on the Thomson remote until the indicator light blinks.
3. Press the button on the Thomson remote that you wish to program. The indicator light will blink slowly.
4. Press the corresponding button on your original remote control. The indicator light on the Thomson remote will blink rapidly to confirm successful learning.
5. Repeat for other buttons as needed.
6. Press the device button (TV or STB) again to exit learning mode.

4. Master Volume and Program Selection

This feature allows you to designate which device (TV or STB) controls the volume and program channels, regardless of which device mode the remote is currently in. Refer to the full user manual for specific steps on setting up master control functions.

OPERATING INSTRUCTIONS

The Thomson ROC Z107 remote control features a simplified button layout for essential functions.



Image: Close-up of Thomson ROC Z107 remote control buttons. This image provides a detailed view of the remote's buttons, including Power, TV, STB, Program Up/Down, Volume Up/Down, Mute, and AV input selection.

- **Power Button ()**: Turns the selected device (TV or STB) on or off.
- **TV Button**: Selects the Television control mode.
- **STB Button**: Selects the Set-Top Box control mode.
- **Prog + / Prog - Buttons**: Changes the program/channel up or down.
- **Vol + / Vol - Buttons**: Increases or decreases the volume.
- **Mute Button ()**: Mutes or unmutes the audio.
- **AV Button**: Switches the input source on the TV (e.g., HDMI 1, HDMI 2, AV).

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or the indicator light does not respond, it is time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are correctly inserted and not depleted. Replace if necessary.
- Ensure there are no obstructions between the remote and the device's IR receiver.
- Verify that the remote is in the correct device mode (TV or STB).

- **Specific functions not working:**

- If a specific button does not work, it may not be programmed for your device or the device may not support that function. Use the learning function to program the button from your original remote.
- Some older devices may have limited compatibility with universal remotes.

- **Remote range is limited:**

- Ensure batteries are fresh.
- The maximum operating range is 10 meters. Operating beyond this distance may result in unreliable performance.

SPECIFICATIONS

Brand	Thomson
Model Name	ROC Z107
Model Number	00132672
Material	Plastic
Color	Black
Transmission	Infrared (IR Wireless)
Number of Devices Supported	2 (TV, STB)
Compatible Peripherals	Television, DTH, Set-Top Box
Power Source	2 x AAA Batteries (included)
Maximum Range	10 meters
Product Dimensions	31.5 x 15.5 x 4 cm
Item Weight	170 grams

WARRANTY

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in the product packaging or contact Thomson customer support for detailed warranty information and terms.

SUPPORT

For further assistance, technical support, or inquiries regarding your Thomson Universal 2-in-1 Zapper Remote Control ROC Z107, please visit the official Thomson website or contact their customer service department. Contact details can typically be found on the product packaging or the brand's official online presence.

