

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Eureka](#) /

› [Eureka NEU182A PowerSpeed Bagless Upright Vacuum Cleaner Instruction Manual](#)

Eureka NEU182A

Eureka NEU182A PowerSpeed Bagless Upright Vacuum Cleaner Instruction Manual

Model: **NEU182A** | Brand: **Eureka**

INTRODUCTION

Thank you for choosing the Eureka NEU182A PowerSpeed Bagless Upright Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum. Its lightweight design, powerful suction, and versatile features are engineered to make your home cleaning tasks easier and more effective across various surfaces.

IMPORTANT SAFETY INFORMATION

WARNING: To ensure safe operation, always read and understand all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the vacuum cleaner from the electrical outlet before performing any maintenance or cleaning.
- Do not use the appliance on wet surfaces or to pick up liquids.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- When using the vacuum cleaner, the floor brush may be clogged by hairs and dirt. We recommend cleaning the roller brush and the belt every 2 weeks. Long-term failure to clean may cause malfunction, or even risk of smoke and belt broken.

PACKAGE CONTENTS

Your Eureka NEU182A PowerSpeed vacuum cleaner comes with the following components:

- Eureka NEU182A PowerSpeed Upright Vacuum Cleaner
- Crevice Tool
- Dusting Brush
- Upholstery Tool
- Owner's Manual

On Board Accessories

Conveniently store all accessories right on board your Eureka vacuum cleaner.



Image: The Eureka PowerSpeed vacuum cleaner is shown with its three primary accessories: a dusting brush, an upholstery tool, and a crevice tool, highlighting their convenient onboard storage.

SETUP AND ASSEMBLY

Assembling your Eureka PowerSpeed vacuum cleaner is quick and straightforward. Follow these steps to get started:

1. Insert the handle into the main vacuum body until it clicks securely into place.
2. Connect the flexible hose to the hose inlet on the main body and secure it.
3. Attach the desired cleaning tools (crevice tool, dusting brush, upholstery tool) to the onboard storage clips for easy access.

Washable Foam Filter

No maintenance costs with a washable filter and bagless design.



Image: A side view of the Eureka PowerSpeed vacuum cleaner illustrating the simple process of inserting the handle into the main unit for quick assembly.

OPERATING INSTRUCTIONS


Power On/Off

To turn the vacuum cleaner on or off, locate the power switch on the main body and press it. Ensure the vacuum is upright before turning it on.

Height Adjustment

The Eureka PowerSpeed features 5 height adjustment settings to optimize cleaning performance on various floor types. Rotate the dial on the cleaner head to select the appropriate setting:

- **Lowest Setting:** For bare floors and low-pile carpets.
- **Higher Settings:** For medium to high-pile carpets and rugs.

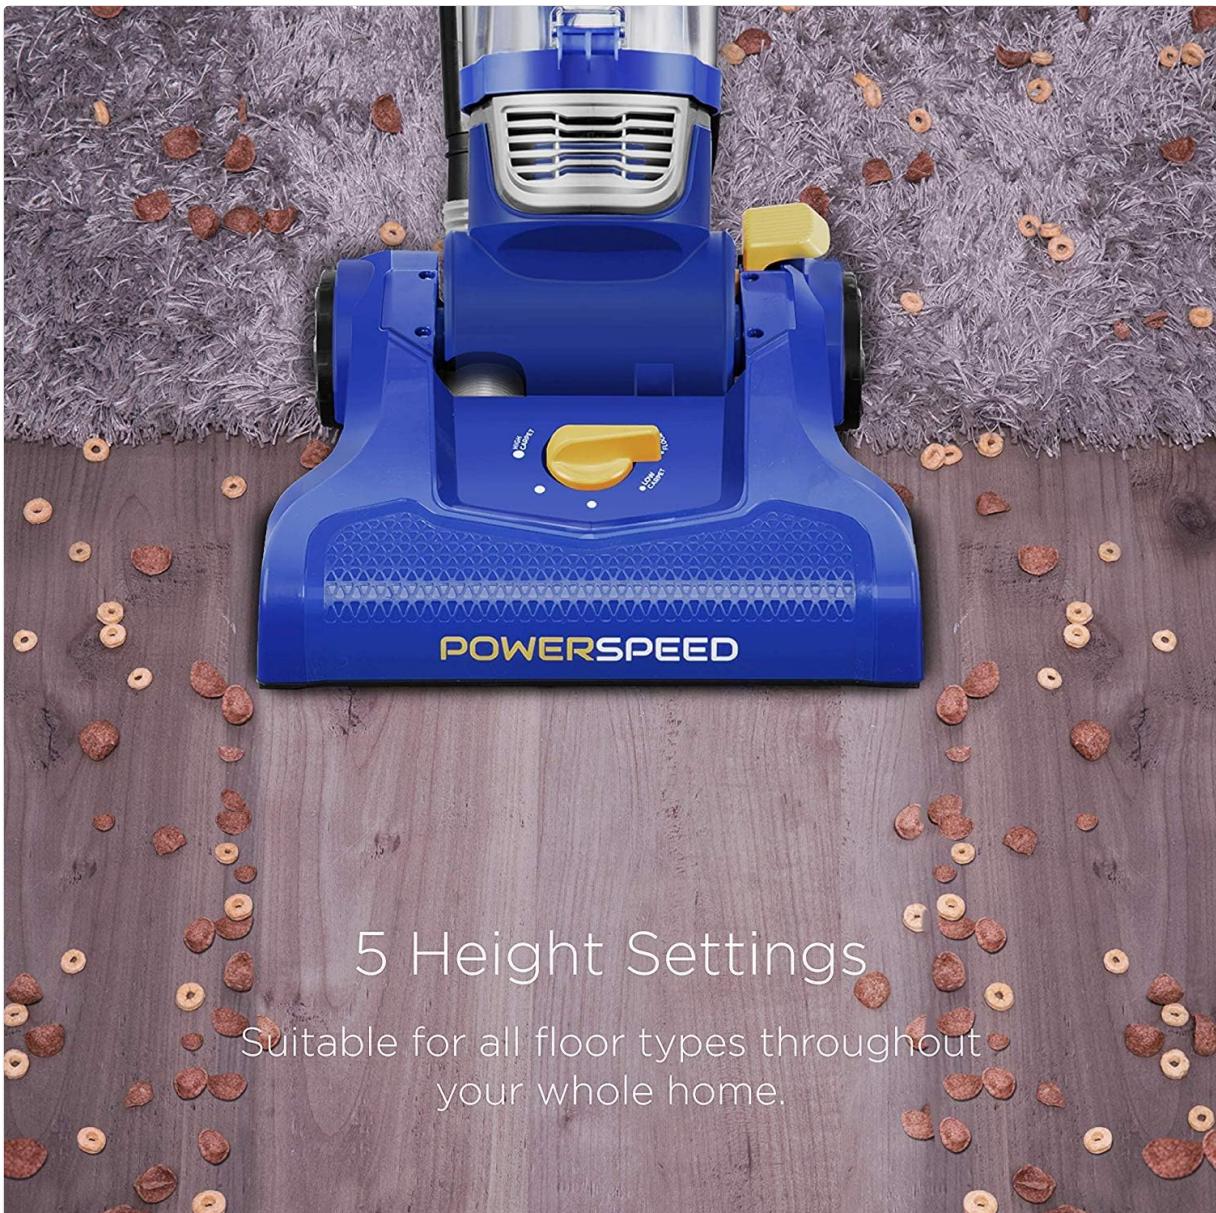

5 Height Settings

Suitable for all floor types throughout your whole home.

Image: A detailed view of the vacuum's cleaning head, highlighting the yellow dial used to select one of five height settings for different floor types, from bare floor to high carpet.

Using Attachments

For versatile cleaning beyond floors, utilize the quick-release handle and included accessories:

1. Press the handle release button and pull the handle away from the main unit.
2. Attach the desired accessory (crevice tool, dusting brush, or upholstery tool) to the end of the hose or handle.
3. Use the tools to clean hard-to-reach areas, upholstery, stairs, and other surfaces.



Quick Release Handle

Clean high, low and everywhere in between.

Image: A user demonstrates the quick-release handle feature, extending the vacuum's reach to clean high areas like curtains, showcasing its versatility.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dust Cup

The extra-large 2.6L dust cup holds more dirt, reducing the frequency of emptying. To empty:

1. Press the dust cup release button and lift the dust cup away from the vacuum.
2. Hold the dust cup over a trash bin and press the bottom release latch to empty contents.
3. Close the bottom latch and reattach the dust cup to the vacuum until it clicks into place.

Extra-Large Dust Cup

Less trips to the trash can saves you time and energy. Clean faster and more efficiently.



PowerSpeed



Others

Image: A visual comparison highlighting the Eureka PowerSpeed's extra-large 2.6L dust cup, demonstrating its generous capacity compared to a standard dust cup from another vacuum.

Cleaning the Washable Filter

The foam filter is washable, eliminating the need for frequent replacements:

1. Remove the dust cup.
2. Remove the foam filter from the dust cup.
3. Rinse the filter under cold running water until the water runs clear.
4. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the vacuum without a dry filter.



Image: The washable foam filter of the Eureka PowerSpeed vacuum cleaner is shown being rinsed under water, emphasizing its low-maintenance design.

Brush Roll and Belt Maintenance

To maintain optimal performance and prevent issues, it is crucial to regularly inspect and clean the brush roll and belt. We recommend cleaning the roller brush and the belt every 2 weeks. Failure to do so may cause malfunction, or even risk of smoke and belt breakage.

TROUBLESHOOTING

If you encounter any issues with your Eureka PowerSpeed vacuum cleaner, refer to the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker if necessary.
- **Loss of Suction:** Empty the dust cup and clean the foam filter. Check the hose and brush roll for any blockages and remove them.
- **Brush Roll Not Spinning:** Ensure the vacuum is in the correct height setting for the floor type. Check the brush roll for tangled hair or debris and remove any obstructions.

For further assistance, please contact our customer service team.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Eureka
Model Name	PowerSpeed
Item Model Number	NEU182A
Power Source	Corded Electric
Capacity	2.6 Liters
Item Weight	10 pounds
Product Dimensions	13" L x 14" W x 44" H
Filter Type	Foam (Washable)
Special Features	Bagless, Lightweight, Washable Filter, Wheels, 5 Height Adjustments
Recommended Uses	Carpet, Hard Floor, Rug

WARRANTY AND SUPPORT

Warranty Information

Your Eureka NEU182A PowerSpeed Bagless Upright Vacuum Cleaner is covered by a **2-year limited manufacturer warranty**. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty inquiries, please contact our customer service team at:
Phone: 1-800-282-2886