

VonHaus 3500359, 8100090, 8100093

VonHaus 1600W Electric Corded Lawnmower Instruction Manual

Model: 3500359, 8100090, 8100093

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using your VonHaus Lawnmower. Keep these instructions in a safe place for future reference.

- Always wear appropriate personal protective equipment (PPE) including safety glasses, sturdy footwear, and hearing protection when operating the lawnmower.
- Ensure the work area is clear of debris, stones, and other objects that could be thrown by the blades.
- Never operate the lawnmower in wet conditions or rain.
- Disconnect the power supply before cleaning, performing maintenance, or if the power cable is damaged.
- Keep children and pets away from the operating area.
- Do not use the lawnmower if any parts are damaged or missing.
- Always hold the lawnmower firmly with both hands during operation.

2. PRODUCT OVERVIEW

The VonHaus 1600W Electric Corded Lawnmower is designed for efficient lawn maintenance. Familiarize yourself with its key components and features.

Key Features.



Figure 2.1: Key Features of the Lawnmower

- **Powerful 1600W Motor:** Delivers 3,400 RPM no-load speed for effective cutting.
- **5 Cutting Heights:** Easily adjustable between 20mm and 70mm.
- **42L Collection Bag:** Large capacity to reduce emptying frequency.
- **380mm Working Width:** For efficient coverage of your lawn.
- **10m Power Cable:** Provides ample reach for most gardens.
- **Foldable & Height Adjustable Handlebar:** For comfortable use and compact storage.
- **2-Stage Safety Trigger:** Prevents accidental activation.
- **Integrated Carry Handle:** For easy transportation.



Figure 2.2: VonHaus 1600W Electric Corded Lawnmower

3. SETUP AND ASSEMBLY

Follow these steps to assemble your lawnmower before first use.

1. **Handlebar Assembly:** Attach the lower and upper handlebar sections using the provided fasteners. Ensure all connections are secure. The handlebars are designed to be height-adjustable and foldable for storage.
2. **Grass Collection Bag Assembly:** Assemble the fabric grass collection bag by attaching it to its frame. Ensure it is securely fitted.
3. **Attaching the Grass Collection Bag:** Lift the rear flap of the lawnmower and hook the assembled grass collection bag onto the designated points. Ensure it is firmly in place to prevent grass clippings from escaping.
4. **Cable Management:** Use the provided cable clips to secure the 10m power cable along the handlebar, keeping it tidy and out of the way during operation.




Carry Handle.

Making transportation easy.



42L Collection Bag.

Minimises time spent emptying.

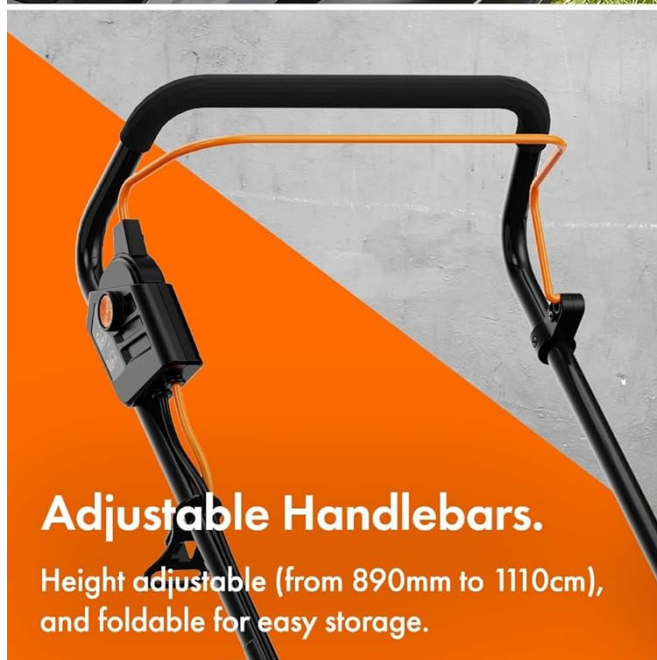

Adjustable Handlebars.

Height adjustable (from 890mm to 1110cm), and foldable for easy storage.



10m Power Cable.

Reach the furthest corners of your garden.

Figure 3.1: Components for Assembly and Use

4. OPERATING INSTRUCTIONS

4.1. Adjusting Cutting Height

The lawnmower offers 5 cutting height settings, from 20mm to 70mm, allowing you to achieve your desired lawn finish.

5 Depth Settings.

The 5 adjustable cutting depths allow you to choose the perfect depth setting for your lawn.

25mm / 40mm / 50mm / 60mm / 70mm



Figure 4.1: Cutting Height Adjustment

1. Ensure the lawnmower is switched off and disconnected from the power supply.
2. Locate the single lever height adjustment mechanism on the side of the mower.
3. Move the lever to select the desired cutting height. Higher numbers correspond to longer grass.

4.2. Starting and Stopping

1. Connect the power cable to a suitable outdoor power outlet.
2. To start, press and hold the safety button, then squeeze the operating lever on the handlebar. Release the safety button once the motor starts.
3. To stop, release the operating lever. The blade will stop rotating.

4.3. Mowing Technique

For best results, mow in overlapping strips. The 380mm working width ensures efficient coverage.

Wide Working Width.

Get your lawn mown quickly with a generous 380mm working width.



Figure 4.2: Wide Working Width

The design allows for a small 2.5cm unmown gap to be left at raised edges, minimizing the need for additional trimming.

Powerful Motor.

The VonHaus 1600W motor is able to tackle any lawn.



Small Gap to Border.

Only a 2.5cm unmown gap will be left at raised edges of your lawn.

Figure 4.3: Small Gap to Border

5. MAINTENANCE AND STORAGE

Regular maintenance ensures the longevity and optimal performance of your lawnmower.

5.1. Cleaning

- Always disconnect the power supply before cleaning.
- Clean the exterior of the lawnmower with a damp cloth. Do not use abrasive cleaners or solvents.
- Remove grass clippings from the underside of the deck and around the blade using a brush or scraper.
- Empty the grass collection bag after each use and clean it if necessary.

5.2. Blade Care

- Periodically inspect the blade for sharpness and damage. A dull or damaged blade can affect cutting performance.
- If the blade needs sharpening or replacement, consult a qualified service technician or refer to the VonHaus website for genuine replacement parts.

5.3. Storage

- Clean the lawnmower thoroughly before storing.
- Fold the handlebars for compact storage.
- Store the lawnmower in a dry, secure place, away from direct sunlight and extreme temperatures.
- Keep out of reach of children.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your lawnmower.

Problem	Possible Cause	Solution
Lawnmower does not start	No power supply Safety trigger not activated correctly Damaged power cable	Check power connection and outlet Ensure both safety button and operating lever are pressed Inspect cable for damage; do not use if damaged, contact service
Poor cutting performance	Dull or damaged blade Grass collection bag full Cutting height too low for grass condition	Sharpen or replace blade Empty grass collection bag Adjust cutting height to a higher setting
Excessive vibration	Blade unbalanced or damaged Loose components	Inspect blade for damage; replace if necessary Check all fasteners and tighten if loose
Motor stops during operation	Overload due to thick grass Grass clippings clogging the deck	Raise cutting height; mow in smaller passes Disconnect power and clear clippings from underside

7. SPECIFICATIONS

Detailed technical specifications for your VonHaus Lawnmower.



Figure 7.1: Product Dimensions and Key Specifications


Specification	Value
Brand	VonHaus
Model Number	3500359, 8100090, 8100093
Power Source	Corded Electric
Motor Power	1600W
No-Load Speed	3,400 RPM
Cutting Width	380mm (36 cm)
Cutting Heights	5 settings (20mm - 70mm)
Collection Bag Capacity	42 Litres

Specification	Value
Cable Length	10m
Product Dimensions (L x W x H)	107.5 x 43.7 x 112 cm
Item Weight	13.5 kg (11.5 kg item display weight)
Material	Plastic

8. WARRANTY AND SUPPORT

VonHaus is committed to providing quality tools for your home and garden. Your product is covered by a standard return policy.

- **Return Policy:** This product is eligible for a refund/replacement within 30 days of purchase. Please refer to your retailer's specific return policy for full details.
- **Brand Promise:** Established in 2009, VonHaus aims to deliver value and quality tools designed with customers in mind.
- For further assistance or inquiries, please visit the official VonHaus website or contact their customer support.

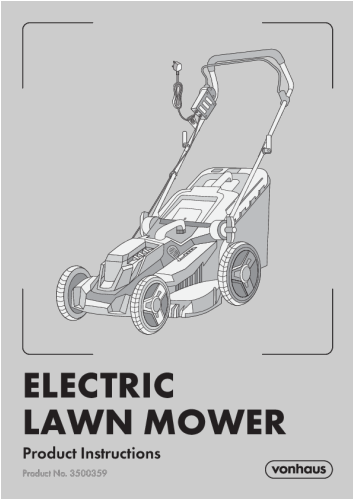

[VonHaus Electric Lawn Mower 3500359 - Product Instructions](#)

Comprehensive product instructions for the VonHaus 1800W Electric Lawn Mower and Mulcher (Product No. 3500359). Includes assembly guide, operating instructions, safety precautions, and maintenance tips.

lang:en score:66 filesize: 1.49 M page_count: 9 document date: 2025-04-14



[\[pdf\] User Manual Instructions](#)

Read the instruction manual 1800W Electric Lawn Mower Mulcher Attachment VonHaus 3500359 IM vonhaus media manuals |||

3500359 Please read all instructions carefully before use and retain for future reference. Protect your ears. CAUTION Do not immerse in water. Protect your hands. Wear a dust mask. Do not use in wet conditions. Protect your eyes. Protective clothing must be worn CAUTION Sharp edges. A5P 0...

lang:en score:57 filesize: 253.91 K page_count: 12 document date: 2024-08-14