

[Manuals.plus](#) /

› [Xtreme](#) /

› Xtreme Helix Bluetooth Portable Speaker User Manual

Xtreme XBS9-1026-BLK

Xtreme Helix Bluetooth Portable Speaker

Model: XBS9-1026-BLK

INTRODUCTION

Thank you for choosing the Xtreme Helix Bluetooth Portable Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use to ensure optimal performance and longevity.

PRODUCT OVERVIEW



Figure 1: Xtreme Helix Bluetooth Portable Speaker. This image shows the cylindrical black speaker from a slightly elevated angle, highlighting its top mesh grille with a subtle Xtreme logo and the vibrant LED light ring around the top edge. A thin silver band separates the main body from the base.

The Xtreme Helix is a compact, portable Bluetooth speaker designed to deliver quality sound with a built-in rechargeable battery and LED illumination. It features a USB mini-B port for charging and connects wirelessly to various Bluetooth-enabled devices.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Locate the USB mini-B female port on the side of the base. Connect the included USB charging cable (1.5 ft length) to this port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

- A charging indicator light (if present) will typically illuminate during charging and turn off or change color when fully charged.
- Charging time may vary depending on the power source.

2. Powering On/Off

Press and hold the power button (location typically on the base or side) for a few seconds to turn the speaker on or off. An audible prompt or LED indicator will confirm the power status.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode. The LED light ring may flash to indicate pairing mode.
2. On your Bluetooth-enabled device (cellphone, tablet, computer), navigate to the Bluetooth settings.
3. Enable Bluetooth and search for available devices.
4. Select "Xtreme Helix" or a similar name from the list of found devices.
5. Once connected, the speaker will typically provide an audible confirmation, and the LED light ring may change to a solid color.
6. The speaker should automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

OPERATING INSTRUCTIONS

Basic Functions:

- **Volume Control:** Adjust volume directly from your connected device. Some speakers may have physical volume buttons.
- **Music Playback:** Control playback (play, pause, skip track) directly from your connected device.
- **LED Illumination:** The speaker features LED illumination. Specific controls for the LED lights (e.g., changing modes, turning off) may be available via a dedicated button on the speaker or through the connected device. Refer to the product packaging or manufacturer's website for detailed LED control instructions if not immediately apparent.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in constant use.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable and try again.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode. Make sure Bluetooth is enabled on your device. Move the speaker closer to your device. Turn off and on both the speaker and your device's Bluetooth. Forget the device from your Bluetooth list and try pairing again.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is properly paired and connected. Try playing a different audio source.

Problem	Possible Solution
Sound distortion.	Reduce the volume on your connected device. Move the speaker closer to your device to avoid interference. Ensure the speaker is fully charged.

SPECIFICATIONS

- **Model:** XBS9-1026-BLK
- **Dimensions:** Approximately 2.75" (70mm) Diameter x 1.75" (45mm) tall
- **Connectivity:** Bluetooth, USB (for charging)
- **Power Source:** Built-in Rechargeable Battery
- **Charging Port:** USB mini-B female
- **Included Cable:** USB charging cable (1.5 ft length)
- **Special Features:** LED Illumination, Portable
- **Color:** Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Xtreme website. Keep your proof of purchase for warranty claims.
Note: Specifications and features are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question