

## Technical Precision GR-SXM250 Replacement Battery

# Technical Precision Replacement Battery for JVC GR-SXM250 User Manual

Model: GR-SXM250 Replacement Battery

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective use of your Technical Precision Replacement Battery for JVC GR-SXM250 camcorders. Please read this manual thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

---

**WARNING: To prevent fire, electric shock, or injury, observe the following safety precautions:**

- Do not disassemble, open, or shred the battery pack.
- Do not expose the battery to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit the battery pack.
- Do not expose the battery to mechanical shock.
- Do not immerse the battery in liquid.
- Keep the battery out of reach of children.
- Dispose of used batteries promptly and properly according to local regulations.

## 3. PRODUCT OVERVIEW

---

### 3.1 What's in the Box

- 1 x Replacement Part (Battery)

### 3.2 Features

- Replacement battery for JVC GR-SXM250 camcorders.
- Unit per sale: 1 battery.

### 3.3 Product Image



Image of the Technical Precision Replacement Battery for JVC GR-SXM250. The battery is black, rectangular, with a label on top indicating specifications and warnings.

## 4. SETUP (INSTALLATION)

---

1. Ensure your JVC GR-SXM250 camcorder is powered off before installing or removing the battery.
2. Locate the battery compartment on your camcorder.
3. Align the battery with the battery compartment, ensuring the contacts match.
4. Gently slide the battery into place until it clicks securely. Do not force the battery.
5. Close the battery compartment cover, if applicable.

## 5. OPERATING (CHARGING & USAGE)

---

### 5.1 Charging the Battery

1. Before first use, fully charge the battery.
2. Connect the battery to a compatible charger designed for your JVC GR-SXM250 camcorder.
3. Monitor the charging indicator on your camcorder or charger. Charging time may vary.
4. Once fully charged, disconnect the battery from the charger.

### 5.2 Battery Usage

The battery is rechargeable and provides 6 Volts of power to your camcorder. Ensure the battery is sufficiently charged before extended use to avoid interruptions.

## 6. MAINTENANCE

---

- **Storage:** Store the battery in a cool, dry place (between 0°C and 30°C or 32°F and 86°F) when not in use. Avoid extreme temperatures.
- **Cleaning:** Periodically clean the battery contacts with a dry, clean cloth to ensure good connection.
- **Discharge:** Avoid fully discharging the battery for extended periods, as this can reduce its lifespan. Recharge the battery at least once every six months if not in regular use.

## 7. TROUBLESHOOTING

---

- **Battery not charging:** Ensure the charger is properly connected to both the battery and a power source. Verify the charger is functional and compatible with your camcorder's battery.
- **Camcorder not powering on:** Check that the battery is correctly installed and fully charged. If issues persist, try another charged battery if available.
- **Short battery life:** Ensure the battery is fully charged before use. Battery life can be affected by usage patterns, environmental temperature, and age.

## 8. SPECIFICATIONS

---

Specification	Value
Brand	Technical Precision
Model Name (Compatibility)	JVC GR-SXM250
Reusability	Rechargeable
Voltage	6 Volts
Unit Count	1.0 Count
ASIN	B07B46MLGS
Date First Available	February 28, 2018

## 9. WARRANTY AND SUPPORT

---

This product is manufactured by Technical Precision. For support or inquiries regarding this replacement battery, please contact Technical Precision directly. Specific warranty details are not provided in this manual; please refer to the product packaging or the seller's information for warranty terms.

*This product is from a small business brand. Support small.*

You can visit the Technical Precision store on Amazon for more information: [Technical Precision Store](#)