

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AKB73715607 Replacement Remote Control User Manual for LG TVs

ECONTROLLY AKB73715607

ECONTROLLY AKB73715607 Replacement Remote Control User Manual

Model: AKB73715607

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB73715607 Replacement Remote Control. This remote is designed to function as a direct replacement for original LG TV remote controls, offering compatibility with various LG TV models. Please read this manual carefully to ensure proper setup and operation of your new remote control.

2. PRODUCT OVERVIEW

The ECONTROLLY AKB73715607 is an infrared replacement remote control for specific LG TV models. It features a standard button layout for easy navigation and control of your television's functions.



Figure 1: Front view of the ECONTROLLY AKB73715607 Replacement Remote Control.

3. SETUP

The AKB73715607 remote control requires no programming or complex setup. Simply install the batteries, and it will be ready for use with compatible LG TV models.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



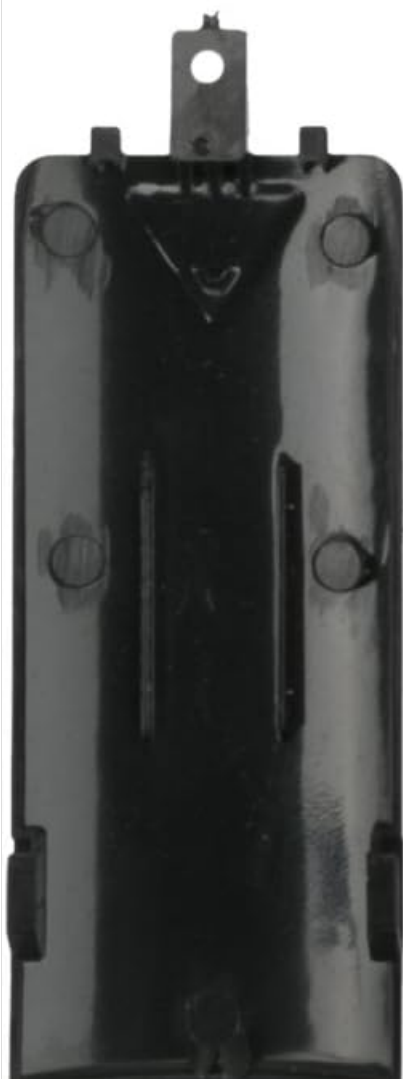




Figure 2: Back view of the remote control with the battery compartment open, showing AAA battery placement.

Note: Batteries are not included with the remote control. Please use new AAA batteries for optimal performance.

4. OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible LG TV models. Point the remote directly at your television's infrared receiver for best performance.

4.1 Basic Functions

- **Power (●):** Turns the TV on or off.
- **Input:** Selects the input source (HDMI, AV, Component, etc.).
- **Q.MENU:** Accesses the Quick Menu for common settings.
- **Ratio:** Adjusts the screen aspect ratio.
- **Caption:** Toggles closed captions.
- **Number Buttons (0-9):** Directly select channels.
- **List:** Displays the channel list.
- **Flashbk:** Returns to the previously viewed channel.
- **Vol (+/-):** Adjusts the volume level.
- **Mute:** Mutes or unmutes the TV audio.
- **CH Page (▲/▼):** Changes channels up or down.
- **Settings:** Accesses the main TV settings menu.
- **Info:** Displays current program information.
- **Simplink:** Controls compatible HDMI-CEC devices.
- **Smart:** Accesses the Smart TV features.
- **My Apps:** Opens the applications menu.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigate through menus and options.
- **OK:** Confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or function.
- **AV Mode:** Selects audio/video modes.
- **Sleep:** Sets the sleep timer.
- **Playback Controls (◀◀ ▶▶, ■ ■ , ▶▶, ■):** Control media playback (Rewind, Play, Pause, Fast Forward, Stop).
- **Color Buttons (Red, Green, Yellow, Blue):** Access specific functions within certain menus or applications.

5. MAINTENANCE

5.1 Battery Replacement

If the remote control becomes unresponsive or its range decreases, replace the batteries. Follow the battery installation steps in Section 3.1. Always replace both batteries at the same time with new ones of the same type (AAA).

5.2 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Certain buttons not working:**
 - This may indicate low battery power. Try replacing the batteries.
 - Ensure the remote is compatible with your specific LG TV model.

7. SPECIFICATIONS

- **Model:** AKB73715607
- **Brand:** ECONTROLLY
- **Compatible Devices:** LG Televisions (specific models include 42LN5200UM, 47LN5200UB, 42LN5400UA, 60PB6650UA, 60PB6600UA, 55LN5200UB)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounce
- **Special Feature:** Ergonomic design

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY AKB73715607 Replacement Remote Control, please refer to the documentation provided at the time of purchase or contact the seller directly. Ensure you have your purchase details available when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07B476P1T>

More documents and user manuals: <https://manuals.plus/>