

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Westinghouse](#) /
- › [Westinghouse Halley 7217800 44-Inch Indoor/Outdoor Ceiling Fan Instruction Manual](#)

Westinghouse 7217800

Westinghouse Halley 7217800 44-Inch Indoor/Outdoor Ceiling Fan Instruction Manual

Model: 7217800

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Westinghouse Halley 7217800 44-inch indoor/outdoor ceiling fan. Please read all instructions carefully before beginning installation to ensure proper function and safety.



Image: The Westinghouse Halley 7217800 44-inch ceiling fan in an oil rubbed bronze finish, featuring three blades and an

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these safety guidelines:

- Disconnect power at the main circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. Consult a qualified electrician if you are unsure about wiring procedures.
- The mounting structure must be capable of supporting the fan's weight (approximately 15.87 pounds).
- Ensure the fan blades are at least 7 feet (2.1 meters) from the floor and 18 inches (0.46 meters) from any wall or obstruction.
- Do not operate the fan with damaged blades or housing.
- This fan is suitable for both indoor and outdoor (damp location rated) use.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling Fan Motor Assembly
- Fan Blades (3)
- Blade Brackets
- Mounting Bracket
- Light Kit with Frosted Opal Glass
- LED Bulbs (2)
- Remote Control with Wall Mount
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual (this document)

SETUP AND INSTALLATION

Follow these steps for proper installation. It is recommended to have two people for certain steps.

1. Prepare for Installation

1. Turn off power at the circuit breaker or fuse box.
2. Ensure the electrical box is securely mounted and capable of supporting the fan.
3. Unpack all components and lay them out on a soft surface to prevent scratches.

2. Mount the Mounting Bracket

Attach the mounting bracket to the outlet box using the screws provided with the outlet box. Ensure the bracket is firmly secured.



Image: A detailed view of the fan's central body, showing the oil rubbed bronze finish, the Westinghouse logo, and the frosted opal glass light cover.

3. Wiring Connections

Connect the fan's electrical wires to the household wiring according to the following:

- Connect the **green** or **bare copper** wire from the fan to the **ground** wire from the outlet box.
- Connect the **white** wire from the fan to the **neutral** (white) wire from the outlet box.
- Connect the **black** wire from the fan to the **hot** (black) wire from the outlet box.
- Secure all wire connections with the provided wire nuts and ensure no loose strands.

4. Attach Fan Body to Mounting Bracket

Carefully lift the fan motor assembly and attach it to the mounting bracket. Secure it with the screws provided.

5. Install Fan Blades

Attach each fan blade to its respective blade bracket using the screws provided. Then, attach the blade assemblies to the motor housing.

6. Install Light Kit

Connect the light kit wires to the fan motor assembly wires. Secure the light kit to the fan body. Install the LED bulbs and then attach the frosted opal glass shade.

OPERATING INSTRUCTIONS

Your Westinghouse Halley ceiling fan is operated by the included remote control.

Remote Control Functions:

- **Fan ON/OFF:** Press to turn the fan on or off.
- **Fan Speed Control:** Buttons for 1 (low), 2 (medium-low), 3 (medium-high), 4 (high).
- **Light ON/OFF/Dimmer:** Press to turn the light on or off. Hold the button to dim or brighten the light.
- **Reverse Function:** This fan features a reversible motor for seasonal use. The reverse switch is located on the fan

motor housing.

- **Summer Mode:** Blades rotate counter-clockwise, pushing air down to create a cooling effect. (Switch position: typically "down" or "left")
- **Winter Mode:** Blades rotate clockwise, drawing air up to circulate warm air. (Switch position: typically "up" or "right")

Note: To change the direction of the fan blades, turn off the fan and wait for the blades to stop completely before sliding the reverse switch. Then, turn the fan back on.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- **Cleaning:** Use a soft brush or lint-free cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or water, as this can damage the motor or finish.
- **Blade Balancing:** If the fan wobbles, ensure all blade screws are tight. A balancing kit (not included) can be used to correct excessive wobble.
- **Light Bulb Replacement:** The fan uses two 9.8-watt (60-watt equivalent) Omni A19 LED bulbs with an E26 base. Ensure power is off before replacing bulbs.
- **Remote Battery Replacement:** Replace the remote control battery when its range decreases or it stops responding. Refer to the remote control's specific instructions for battery type and replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; remote control battery dead.	Check circuit breaker; ensure all wire connections are secure; replace remote battery.
Fan wobbles excessively	Loose blade screws; unbalanced blades; mounting bracket not secure.	Tighten all blade screws; use a balancing kit; ensure mounting bracket is securely fastened.
Light does not work	Loose wire connection; faulty bulb; remote control issue.	Check light kit wiring; replace LED bulbs; check remote battery.
Remote control not working	Dead battery; incorrect frequency setting (if applicable); obstruction.	Replace battery; ensure clear line of sight to fan receiver.

SPECIFICATIONS

Feature	Detail
Model Number	7217800
Fan Diameter	44 Inches
Finish	Oil Rubbed Bronze
Blade Material	Reversible Dark Cherry / Mahogany
Light Source	Integrated LED Light Kit

Feature	Detail
Bulb Type	2 x 9.8-watt (60-watt equivalent) Omni A19 LED, E26 Base
Brightness	1600 Lumens (total)
Control Method	Remote Control (4 speeds, light on/off/dimmer)
Indoor/Outdoor Use	Yes (Damp Location Rated)
Item Weight	15.87 Pounds
Voltage	120 Volts

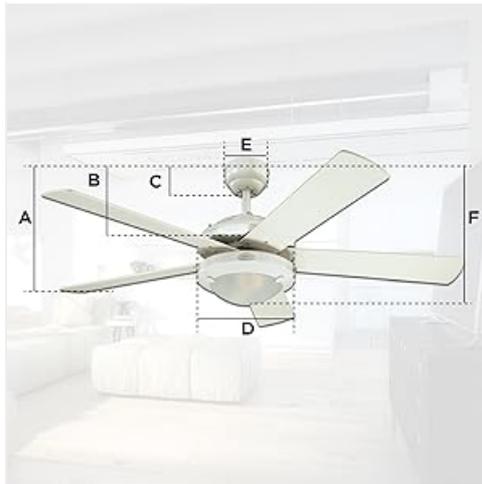


Image: A chart illustrating recommended ceiling fan diameters based on room size, helping users select the appropriate fan for their space.

WARRANTY INFORMATION

Westinghouse provides a **Lifetime Motor Warranty** and a **Two-Year Warranty** on all other parts for the Halley 7217800 ceiling fan. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the official Westinghouse website or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need to troubleshoot an issue not covered in this manual, please contact Westinghouse customer support:

- **Website:** www.westinghouselighting.com
- **Phone:** Refer to the Westinghouse website for regional contact numbers.

Please have your model number (7217800) and date of purchase available when contacting support.