

Manuals.plus /

> Husky /

> Husky KK70-BK-NL-HU Freestanding Beverage Cooler User Manual

Husky KK70-BK-NL-HU

Husky KK70-BK-NL-HU Freestanding Beverage Cooler User Manual

Model: KK70-BK-NL-HU | Brand: Husky

1. SAFETY INFORMATION

Please read all safety instructions carefully before operating the appliance to ensure safe and efficient use. Retain this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Ventilation:** Maintain adequate ventilation around the appliance. Do not block ventilation openings.
- **Placement:** Place the cooler on a firm, level surface away from direct sunlight, heat sources, and moisture.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside the appliance.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Husky KK70-BK-NL-HU is a freestanding beverage cooler designed for efficient storage and cooling of drinks. It features a sleek black finish and a glass door, making it suitable for various indoor environments.



Image 1: Front view of the Husky KK70-BK-NL-HU Freestanding Beverage Cooler. This image displays the compact black unit with its glass door, suitable for various beverage storage needs.

Key Features:

- Freestanding design for flexible placement.
- Capacity for approximately 70 bottles or cans.
- Energy efficiency class A+.
- Automatic defrost system.
- Low noise operation (35 dB).

3. SETUP

3.1 Unpacking

1. Carefully remove all packaging materials, including foam and adhesive tape.
2. Inspect the appliance for any shipping damage. Report any damage to your retailer immediately.
3. Remove any internal accessories and protective films.

3.2 Placement

- Place the cooler on a flat, stable surface that can support its weight when fully loaded.
- Ensure there is at least 10 cm (4 inches) of space around the back and sides for proper ventilation.
- Avoid placing the unit near heat sources such as ovens, radiators, or in direct sunlight.
- The appliance is designed for indoor use only.

3.3 Electrical Connection

Before plugging in the appliance, ensure the voltage indicated on the rating label matches your household power supply. Allow the unit to stand upright for at least 2-4 hours before connecting it to power to allow the refrigerant to settle.

- Plug the power cord into a dedicated, grounded wall outlet.
- Do not use multi-sockets or extension cords.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The cooler is equipped with an adjustable thermostat to control the internal temperature. Locate the thermostat dial, usually inside the unit or on the back panel.

- Turn the dial to the desired setting. Lower numbers typically correspond to warmer temperatures, and higher numbers to colder temperatures.
- Allow several hours for the temperature to stabilize after making adjustments.

4.2 Loading the Cooler

For optimal cooling performance and energy efficiency:

- Do not overload the cooler. Leave space between items for air circulation.
- Avoid placing hot items directly into the cooler. Allow them to cool down first.
- Ensure the door is closed properly after each use to maintain temperature.

4.3 Energy Efficiency

This appliance is rated A+ for energy efficiency. To maximize energy savings:

- Keep the door opening time to a minimum.
- Ensure the door seal is clean and intact.
- Place the cooler in a cool, well-ventilated area.

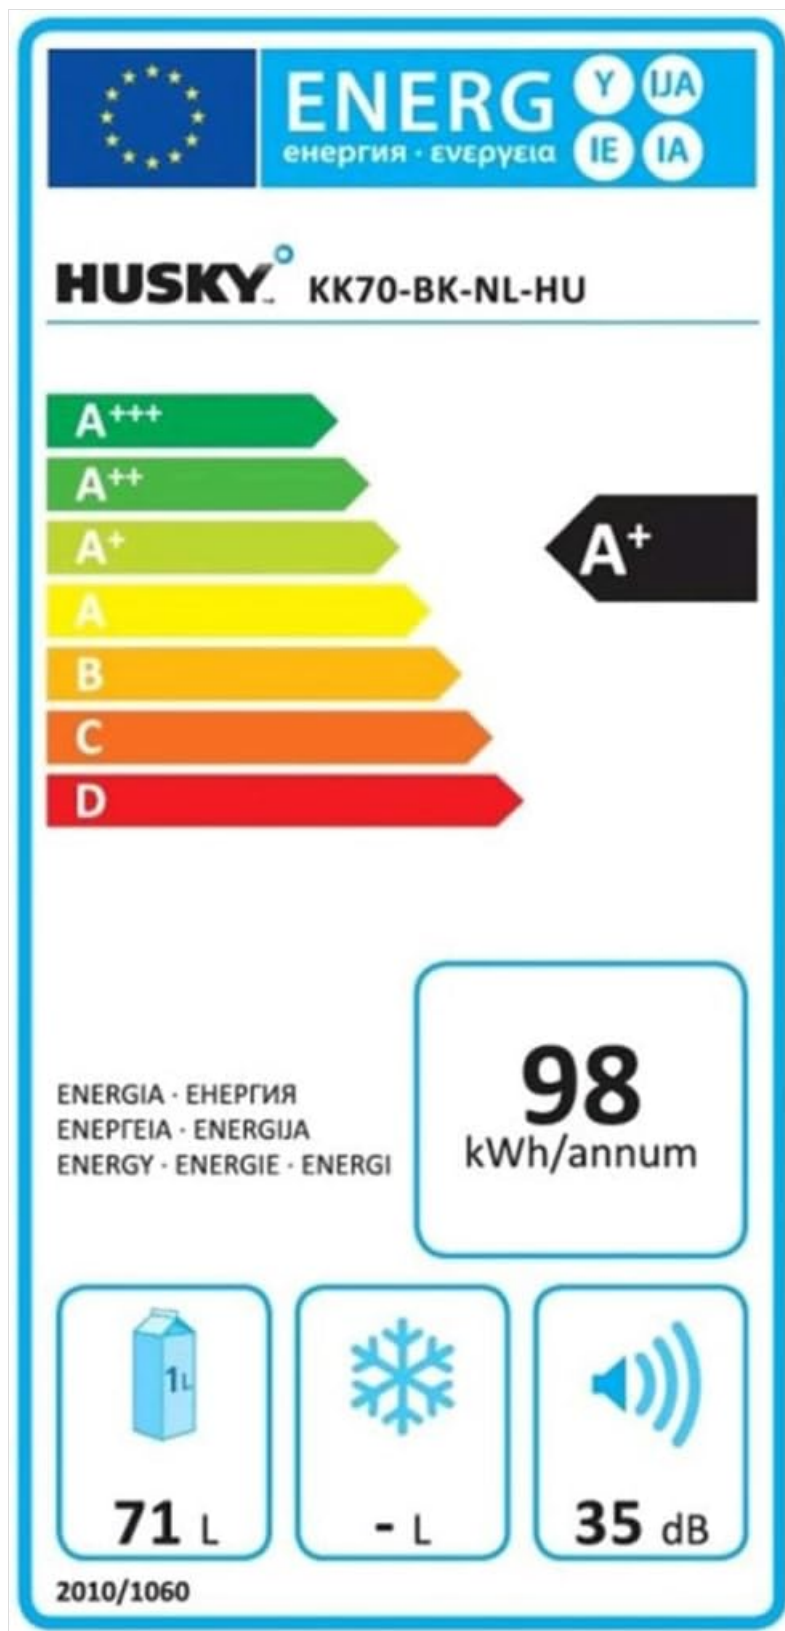


Image 2: Energy label for the Husky KK70-BK-NL-HU beverage cooler. This label indicates an A+ energy efficiency rating, an annual energy consumption of 98 kWh, a capacity of 71 liters, and a noise level of 35 dB.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the appliance's performance and appearance.

1. **Disconnect Power:** Always unplug the cooler before cleaning.
2. **Interior:** Clean the interior with a soft cloth dampened with a mild detergent solution. Rinse with clean water and dry

thoroughly.

- 3. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- 4. **Door Seal:** Clean the door gasket regularly to ensure a tight seal.

5.2 Defrosting

This appliance features an automatic defrost system, which means manual defrosting is generally not required. Frost on the evaporator will melt automatically and evaporate.

5.3 Long-Term Storage

If the cooler will not be used for an extended period:

- Unplug the power cord.
- Empty and clean the interior thoroughly.
- Leave the door slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Cooler does not operate.	No power supply.	Check if the power cord is plugged in and the outlet is functional.
Cooler is not cold enough.	Temperature setting is too high. Door is not closed properly. Poor ventilation.	Adjust thermostat to a colder setting. Ensure door is fully closed. Check for adequate space around the unit.
Excessive noise.	Unit is not level. Items inside are rattling.	Adjust leveling feet. Rearrange items to prevent contact.
Water on the floor.	Drain pan is full or displaced.	Check and empty the drain pan if accessible, or ensure it is correctly positioned.

7. SPECIFICATIONS

Detailed technical specifications for the Husky KK70-BK-NL-HU beverage cooler:

- **Model Number:** KK70-BK-NL-HU (Manufacturer Model: 5060055579598)
- **Brand:** Husky
- **Type:** Freestanding Beverage Cooler
- **Color:** Black
- **Dimensions (W x D x H):** 43 x 47 x 69 cm (approximately 16.9 x 18.5 x 27.2 inches)
- **Weight:** 23 kg (approximately 50.7 lbs)
- **Capacity:** 71 Liters (approx. 70 bottles/cans)
- **Energy Efficiency Class:** A+
- **Annual Energy Consumption:** 98 kWh/annum
- **Noise Level:** 35 dB
- **Defrost System:** Automatic
- **Refrigerant:** R600a

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and what is covered.

For technical support, service, or warranty claims, please contact your retailer or the Husky customer service department. Keep your proof of purchase and model number readily available when contacting support.

For more information, you may visit the official Husky website or contact their support channels as provided in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07B4CQMY2>

More documents and user manuals: <https://manuals.plus/>