

NIXON A1208-722

Nixon Ascender A1208-722 Men's Wristwatch Instruction Manual

Your guide to understanding and operating your Nixon Ascender timepiece.

1. INTRODUCTION

Thank you for choosing the Nixon Ascender A1208-722 Men's Wristwatch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

2. PRODUCT OVERVIEW

The Nixon Ascender A1208-722 is a sophisticated men's wristwatch featuring a stainless steel bracelet and a Japanese Miyota quartz movement. It includes a moon phase complication and is designed for durability and precision.

Key Features:

- **Movement:** Japanese Miyota quartz movement for accurate timekeeping.
- **Water Resistance:** 10 bar (100 meters), suitable for swimming and snorkeling.
- **Dial:** Features white and red hands, two silver seconds hands, Arabic numerals, a line index, and a concave dial ring with date numerals. Includes the NIXON logo.
- **Housing:** Durable stainless steel in silver finish.
- **Bracelet:** Multi-limbed stainless steel bracelet in silver.



Figure 1: Front view of the Nixon Ascender A1208-722 wristwatch, showcasing the blue dial, hands, numerals, and moon phase indicator.



Figure 2: Side view of the Nixon Ascender A1208-722 wristwatch, highlighting the crown and pushers, and the profile of the stainless steel bracelet.



Figure 3: Back view of the Nixon Ascender A1208-722 wristwatch, showing the case back engravings and the clasp of the stainless steel bracelet.

3. SETUP

3.1 Setting the Time

1. Pull the crown out to the second click position.
2. Rotate the crown to move the hands clockwise until the desired time is set. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or date change mechanism.
3. Push the crown back into the normal position.

3.2 Setting the Date and Day

1. Pull the crown out to the first click position.
2. Rotate the crown to adjust the date and day. Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.
3. Once the correct date and day are displayed, push the crown back into the normal position.

3.3 Adjusting the Bracelet

The stainless steel bracelet can be adjusted for a comfortable fit. It is recommended to have this adjustment performed by a professional watchmaker or jeweler to prevent damage to the links or clasp.

4. OPERATING INSTRUCTIONS

4.1 Basic Timekeeping

Once the time, date, and day are set, your Nixon Ascender watch will accurately keep time. The second hand will move in one-second intervals. If the second hand begins to move in two-second intervals, it indicates a low battery and requires replacement.

4.2 Moon Phase Complication

The moon phase indicator displays the current phase of the moon. This complication is typically set in conjunction with the date and time. Refer to the specific instructions for your movement if detailed moon phase setting is required, as it often involves a dedicated pusher or crown position.

4.3 Water Resistance

Your watch has a water resistance rating of 10 bar (100 meters). This means it is suitable for everyday use, showering, swimming, and snorkeling. **Do not operate the crown or pushers while the watch is wet or submerged**, as this can compromise the water resistance and lead to internal damage.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials, which can damage the finish.

5.2 Battery Replacement

The watch is powered by a quartz battery. When the battery is depleted, the watch will stop or the second hand may move erratically (e.g., in two-second intervals). Battery replacement should be performed by a qualified watch technician to ensure the proper sealing and water resistance are maintained.

5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keeping it in its original box or a watch case can protect it from dust and scratches.

6. TROUBLESHOOTING

6.1 Watch Not Running

- Check if the crown is pushed in completely.
- If the second hand is moving in two-second intervals, the battery may need replacement.
- If the watch still does not run after checking the above, it may require professional inspection.

6.2 Incorrect Time/Date

- Refer to Section 3.1 and 3.2 to reset the time and date.
- Ensure the crown is fully pushed in after setting.

6.3 Condensation Inside the Crystal

If you notice condensation under the watch crystal, this indicates a breach in the water resistance. Immediately take the watch to a professional watchmaker for inspection and repair to prevent further damage to the movement.

7. SPECIFICATIONS

Feature	Detail
Model Number	A1208-722
Movement	Japanese Miyota Quartz
Water Resistance	10 bar (100 meters)
Case Material	Stainless Steel
Bracelet Material	Stainless Steel
Product Dimensions	30 x 20 x 5 cm
Weight	100 g

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Nixon watches typically come with a limited warranty covering manufacturing defects. Please refer to the warranty card included with your purchase or visit the official Nixon website for specific terms and conditions regarding your model.

8.2 Customer Support

For further assistance, service, or repair inquiries, please contact Nixon customer support through their official website or an authorized service center. Ensure you have your watch model number (A1208-722) and proof of purchase available when contacting support.

