

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Analog-Digital Watch User Manual

Fastrack NL38035SL03/NN38035SL03

Fastrack Analog-Digital Watch User Manual

Model: NL38035SL03 / NN38035SL03

Brand: Fastrack

INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your Fastrack Analog-Digital Watch, Model NL38035SL03 / NN38035SL03. This timepiece combines traditional analog timekeeping with modern digital functionalities, offering versatility and a distinctive design.



Figure 1: Front view of the Fastrack Analog-Digital Watch, highlighting its black dial, orange hands, and green perforated leather strap.

Key Features:

- **Analog-Digital Fusion:** Seamlessly blends traditional analog timekeeping with the functionality of digital displays.
- **Striking Orange Accents:** Vibrant orange hands and indices provide a bold and energetic contrast against the black dial.
- **Textured Black Bezel:** A robust black bezel with a textured finish adds a sporty and eye-catching element.
- **Rugged Green Leather Strap:** The green leather strap with perforated detailing offers a unique and durable aesthetic.
- **Versatile Functionality:** Combines style and practicality for daily use.

SETUP

Initial Activation and Time Setting

Your Fastrack watch comes with a pre-installed lithium metal battery. Before first use, ensure any protective plastic

stoppers are removed from the crown or pushers if present. The watch may require initial time and date setting.

1. Setting Analog Time:

Locate the crown on the right side of the watch case. Pull the crown out to the first or second click position (refer to watch-specific instructions if available, as positions vary). Rotate the crown to adjust the hour and minute hands to the correct time. Once set, push the crown back in to secure the time.



Figure 2: Side view of the watch, illustrating the crown and pushers used for adjustments.

2. Setting Digital Time and Date:

The digital display is controlled by the pushers (buttons) located on the sides of the watch case. Typically, one button cycles through modes (Time, Date, Alarm, Stopwatch), and others are used for setting values. Press the mode button until the digital time or date flashes. Use the adjustment buttons to set the correct hour, minute, day, month, and year. Press the mode button again to confirm and exit setting mode.

OPERATING YOUR WATCH

Understanding Watch Functions

- **Analog Display:** The primary display for current time, indicated by the hour, minute, and second hands.
- **Digital Display Modes:**
 - **Time Mode:** Displays digital time (12-hour or 24-hour format).
 - **Date Mode:** Shows the current date (day, month, year).
 - **Alarm Mode:** Allows setting a daily alarm. When the alarm sounds, press any button to stop it.
 - **Stopwatch Mode:** Used for timing events. Typically includes start, stop, and reset functions.
- **Special Features:**
 - **Alarm:** Set and activate an audible alarm for reminders.
 - **Bezel Markings:** The rotating bezel (if applicable) can be used for elapsed time measurement or as a simple timer. Align the zero mark with the minute hand at the start of an event, then read the elapsed time from the bezel.
 - **Glow In The Dark:** Luminous hands and/or markers provide visibility in low-light conditions after exposure to light.

MAINTENANCE

Care and Longevity

- **Cleaning:**

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials.
- **Water Resistance:**

This watch is marked with "WR50M" on the dial, indicating water resistance up to 50 meters. This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating buttons or the crown when the watch is wet to prevent water ingress.



Figure 3: Rear view of the watch, displaying the stainless steel case back and the attachment of the green leather strap.

• **Battery Replacement:**

The watch uses a Lithium Metal battery. When the battery power is low (indicated by dimming digital display or erratic analog movement), it is recommended to have the battery replaced by an authorized Fastrack service center or a qualified watch technician. Improper battery replacement can damage the watch and compromise its water resistance.

• **Storage:**

When not in use, store your watch in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Analog hands not moving.	Battery depleted or crown pulled out.	Push crown back in. If still not working, battery may need replacement.
Digital display is dim or blank.	Low battery.	Replace battery at an authorized service center.
Time is inaccurate.	Incorrect setting or exposure to strong magnetic fields.	Reset time. Keep watch away from magnets (e.g., speakers, refrigerators).
Water inside the watch.	Crown or pushers operated underwater, or seals compromised.	Immediately take the watch to an authorized service center for inspection and repair. Do not attempt to dry it yourself.

If the problem persists after attempting these solutions, please contact Fastrack customer support or an authorized service center.

SPECIFICATIONS

Technical Details

Brand: Fastrack

Model: NR38035SL03 (also known as NL38035SL03 / NN38035SL03)

Model Name: Metal Digitals

Display Type: Analog-Digital

Power Source: Battery Powered

Battery Type: 1 Lithium Metal battery (included)

Special Features: Alarm, Bezel Markings, Glow In The Dark

Product Dimensions: 14 x 7 x 10 cm

Item Weight: 180 g

Country of Origin: India

ASIN: B07B4LZ7NT

First Available: 28 February 2018



Figure 4: The watch is typically packaged in a distinctive black cylindrical can.

WARRANTY AND SUPPORT

Manufacturer Information

For warranty claims, service, or technical support, please contact the manufacturer directly. Fastrack products are manufactured by Titan Company Ltd.

Manufacturer: Titan Company Ltd

Address: 3 Sipcot Industrial Complex, Hosur - 635126, Tamil Nadu, India

Telephone: +91-(0)4344-664199

Please retain your purchase receipt as proof of purchase for any warranty-related inquiries. Warranty terms and conditions may vary; refer to the warranty card included with your product or contact Fastrack customer service for detailed information.

