



Manuals.plus /

› X-Moove /

› Livoo Xmoove Mini 20 Power Bank User Manual

## X-Moove Mini 20 (XMVB101)

# Livoo Xmoove Mini 20 Power Bank User Manual

Model: XMVB101

## 1. PRODUCT OVERVIEW

---

The Livoo Xmoove Mini 20 is an ultra-compact 20,000 mAh portable power bank designed to provide reliable power for your mobile devices. Featuring USB-C PD 18W output, it supports fast charging for compatible smartphones and other gadgets. Its robust design makes it suitable for various uses, from daily commuting to outdoor adventures.



Image: The Livoo Xmoove Mini 20 power bank connected via a white USB-C cable to a smartphone, indicating 75% charge. This illustrates the primary function of the device.

### **Package Contents:**

- Livoo Xmoove Mini 20 Power Bank
- USB-C Charging Cable (may vary by region)
- User Manual (this document)

## **2. COMPONENTS AND FEATURES**

---

Familiarize yourself with the different parts of your Xmoove Mini 20 power bank:



Image: A close-up view of the power bank's top edge, showing two USB-A output ports and one USB-C input/output port. This highlights the connectivity options.

- **USB-C Port:** Used for both charging the power bank and charging compatible devices with Power Delivery (PD) up to 18W.
- **USB-A Ports (x2):** Used for charging various devices.
- **LED Indicators:** *(Note: Specific LED indicator details are not provided in the source data, general description used).* Typically indicate battery level and charging status.
- **Power Button:** *(Note: Not explicitly mentioned but common for power banks)* Used to check battery level or initiate charging.

### 3. SETUP AND INITIAL USE

---

#### 3.1. Initial Charging of the Power Bank

Before first use, it is recommended to fully charge your Xmoove Mini 20 power bank.

1. Connect the provided USB-C cable to the USB-C port on the power bank.
2. Connect the other end of the USB-C cable to a compatible USB wall charger (not included). For optimal charging speed, use a PD-compatible charger.
3. The LED indicators will illuminate to show the charging progress. Once all indicators are solid, the power bank is fully charged.

*Charging time may vary depending on the charger's output.*

### 4. OPERATING INSTRUCTIONS

---

## 4.1. Charging Your Devices

The Xmoove Mini 20 can charge up to three devices simultaneously using its USB-C and two USB-A ports.

1. Connect your device's charging cable to one of the available output ports (USB-C or USB-A) on the power bank.
2. Connect the other end of the cable to your device.
3. The power bank should automatically begin charging your device. If not, press the power button (if present) to initiate charging.
4. The LED indicators on the power bank will show the remaining battery level.



Image: The power bank charging a smartphone, depicted with a blue charging cable, emphasizing its portability and ease of use in a vibrant setting.

## 4.2. Checking Battery Level

To check the remaining battery level of the power bank, briefly press the power button. The LED indicators will light up to show the current charge status.

## 5. MAINTENANCE AND CARE

---

- Keep the power bank dry and away from moisture.
- Avoid extreme temperatures (hot or cold).
- Do not drop, disassemble, or attempt to repair the device yourself.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use for extended periods.
- Fully charge the power bank at least once every three months to maintain battery health.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Power bank not charging	Cable issue; Charger issue; Power bank fully charged.	Try a different USB-C cable and/or wall charger. Ensure the charger is working. Check LED indicators; if all are solid, it's fully charged.
Device not charging from power bank	Power bank low on charge; Cable issue; Device not compatible; Power bank in standby.	Recharge the power bank. Try a different charging cable. Ensure your device is compatible. Press the power button on the power bank to activate output.
Slow charging	Cable not suitable for fast charging; Charger not PD compatible; Device not supporting fast charging.	Use a high-quality cable that supports fast charging. Ensure your wall charger is PD compatible (for USB-C). Verify your device supports fast charging.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Name	Livoo Batterie externe USB-C ultra compacte (Mini 20)
Brand	X-Moove
Battery Capacity	20000 mAh
Connector Type	USB Type C, USB Type A
Special Features	Compact, Fast Charge (PD 18W)
Voltage	5 Volts (Output)
Recommended Uses	Phone, Smartphone
Power Source	Cable electric
Product Dimensions	11.8L x 7.2W x 2.9D centimeters
Number of Ports	3 (1x USB-C, 2x USB-A)



Image: The underside of the power bank displaying printed technical specifications such as capacity, input/output voltages, and certifications.

## 8. WARRANTY INFORMATION

---

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official X-Moove website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for any warranty claims.

## 9. CUSTOMER SUPPORT

---

For any questions, technical assistance, or support regarding your Livoo Xmoove Mini 20 power bank, please contact X-Moove customer service through their official website or the contact information provided in your product packaging. *Please have your model number (XMVB101) and purchase details ready when contacting support.*