

[Manuals.plus](#) /

› [Tescoma](#) /

› Tescoma GrandChef Non-Stick Frying Pan (Model T606828), 28 cm - User Manual

Tescoma T606828

Tescoma GrandChef Non-Stick Frying Pan (Model T606828), 28 cm - User Manual

Comprehensive instructions for safe and effective use.

INTRODUCTION

Thank you for choosing the Tescoma GrandChef Non-Stick Frying Pan. This manual provides essential information for the proper setup, operation, maintenance, and care of your new frying pan. Please read these instructions carefully before first use and retain them for future reference.

PRODUCT OVERVIEW

The Tescoma GrandChef Non-Stick Frying Pan is designed for versatile cooking, suitable for both stovetop and oven use. It features a high-quality non-stick coating, a solid long handle, and a durable stainless steel induction base, ensuring compatibility with various heat sources.

Key Features

- Equipped with a high-quality non-stick coating for easy food release and cleaning.
- Solid, long stainless steel handle designed to remain cool during stovetop use.
- Stainless steel induction bottom ensures even heat distribution and compatibility with all hob types.
- Suitable for electric, gas, ceramic, and induction cooktops.
- Oven safe up to 230°C (446°F).



Image: Side view of the Tescoma GrandChef Non-Stick Frying Pan, showcasing its design and long handle.

SETUP AND FIRST USE

Unpacking

Carefully remove the frying pan from its packaging. Inspect the pan for any signs of damage. Dispose of all packaging materials responsibly.

Initial Cleaning

Before first use, wash the frying pan thoroughly with warm soapy water and a soft sponge. Rinse completely and dry immediately. This removes any manufacturing residues.

Cooktop Compatibility

This frying pan is designed for use on all types of hobs, including electric, gas, ceramic, and induction cooktops. Ensure the pan's base is clean and dry before placing it on any heat source.





Image: Bottom view of the frying pan, highlighting the stainless steel induction base suitable for all hob types.

OPERATING INSTRUCTIONS

Cooking on Stovetop

- **Heat Settings:** For optimal performance and to preserve the non-stick coating, use low to medium heat settings. High heat is generally not necessary due to the pan's efficient heat distribution.
- **Oil/Fat:** While the non-stick coating allows for cooking with minimal oil, a small amount is recommended for best results and flavor.
- **Utensils:** Always use wooden, silicone, or plastic utensils to avoid scratching the non-stick surface. Metal utensils can damage the coating.

Oven Use

The Tescoma GrandChef frying pan is oven safe up to 230°C (446°F). When using in the oven, always use oven mitts or heat-resistant gloves when handling the pan, as the handle will become hot.

Handle Safety

The stainless steel handle is designed to be non-burning during normal stovetop use. However, prolonged exposure to high heat or oven use will cause the handle to become hot. Always exercise caution and use protective gear when handling a hot pan.

MAINTENANCE AND CARE

Cleaning

- **Cool Down:** Always allow the pan to cool completely before washing. Submerging a hot pan in cold water can cause warping.
- **Hand Washing:** For best results and to prolong the life of the non-stick coating, hand washing with warm soapy water and a soft sponge is recommended.
- **Dishwasher Safe:** The pan is dishwasher safe. However, frequent dishwasher use may dull the exterior finish over time.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or scouring pads, as these can damage the non-stick surface.

Non-Stick Coating Care

To maintain the non-stick properties, avoid overheating the pan when empty. Store the pan carefully to prevent scratching the interior surface with other cookware. If stacking, place a soft cloth or pan protector between pans.

Storage

Store the pan in a dry place. If stacking with other cookware, use pan protectors to prevent scratches to the non-stick surface.

TROUBLESHOOTING

Food Sticking

- **Cause:** Pan not preheated sufficiently, too little oil, or damaged non-stick coating.
- **Solution:** Ensure the pan is properly preheated before adding food. Use a small amount of cooking oil or fat. If the coating is visibly damaged, consider replacing the pan.

Uneven Heating

- **Cause:** Incorrect burner size, pan not centered on heat source, or residue on the pan's base.
- **Solution:** Use a burner that matches the size of the pan's base. Ensure the pan is centered on the heat source. Clean the pan's base thoroughly to remove any debris that might interfere with heat transfer.

SPECIFICATIONS

Brand	Tescoma
Model Name	GrandCHEF
Model Number	T606828
Material	Stainless Steel (Handle), Metal (Body)
Special Feature	Induction Stovetop Compatible, Non-Stick Coating
Color	Gray / Black (Non-stick interior)
Capacity	1 Liters
Item Weight	950 Grams
Maximum Temperature	230°C (Oven Safe)
Compatible Devices	Electric Coil, Gas, Glass-ceramic, Oven, Smooth Surface Induction
Coating Description	High quality non-stick
Handle Material	Stainless Steel
Dishwasher Safe	Yes
GTIN	08595028491043



Image: Diagram illustrating the dimensions of the frying pan, including diameter and height.

WARRANTY AND SUPPORT

Tescoma products are manufactured to high-quality standards. For specific warranty information or support inquiries, please refer to the documentation included with your purchase or visit the official Tescoma website. You can also find more information and contact details on the [Tescoma Brand Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07B51T8M4>

More documents and user manuals: **<https://manuals.plus/>**