

EWA EWA-A109mini

EWA A109mini Bluetooth Speaker User Manual

Model: EWA-A109mini

Brand: EWA

INTRODUCTION

The EWA A109mini Bluetooth Speaker is a compact and portable wireless speaker designed to deliver powerful sound with enhanced bass. Its small size makes it ideal for home use, hiking, and various outdoor activities. This manual provides detailed instructions for setting up, operating, and maintaining your speaker.



Figure 1: The EWA A109mini speaker, showcasing its compact design when held in a hand.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- EWA A109mini Bluetooth Speaker x1
- Micro USB cable x1
- User manual x1

Familiarize yourself with the components and features of your EWA A109mini speaker.

Simple & Multi-functional Control



Figure 2: Key features and controls of the EWA A109mini speaker.

- **Multi-functional Control Button:** Used for power, play/pause, volume, track control, and selfie mode.
- **Micro USB Charging Port:** For charging the speaker's internal battery.
- **Micro SD Card Slot:** Supports TF cards up to 32GB for direct audio playback.
- **Bass Radiator:** Located at the bottom, providing enhanced bass output.

Small Size Powerful Sound

Fabulous small body blasts out unbelievable clear and loud sound



Figure 3: Internal components of the EWA A109mini, highlighting the driver and bass radiator for powerful sound.

Product Feature Overview Video

Your browser does not support the video tag.

Video 1: A detailed overview of the EWA A109mini Bluetooth speaker, demonstrating its features, controls, and sound capabilities.

SETUP

Charging the Speaker

Before first use, fully charge your EWA A109mini speaker. Use the provided Micro USB cable to connect the speaker's charging port to a USB power source (e.g., computer, wall adapter). The charging time is approximately 2 hours.

Bluetooth Pairing

1. Ensure the speaker is turned off.
2. Press and hold the multi-functional button until you hear an audible prompt and the LED indicator flashes, indicating it's in pairing mode.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.

4. Select "EWA A109mini" from the list of devices.

5. Once successfully paired, you will hear a confirmation sound, and the LED indicator will remain solid.

The speaker will automatically connect to the last paired device when turned on, if it's within range.



Figure 4: The EWA A109mini supports both Bluetooth and TF card playback.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the multi-functional button until the LED indicator lights up.
- **Power Off:** Press and hold the multi-functional button until the LED indicator turns off.

Music Playback Control

- **Play/Pause:** Press the multi-functional button once.
- **Volume Up:** Long press the right side of the multi-functional button.
- **Volume Down:** Long press the left side of the multi-functional button.
- **Next Track:** Press the right side of the multi-functional button once.
- **Previous Track:** Press the left side of the multi-functional button once.

TF Card Playback

Insert a Micro SD (TF) card (up to 32GB) loaded with audio files into the Micro SD card slot. The speaker will automatically switch to TF card playback mode. Use the same control button functions for play/pause, volume, and track navigation.

Selfie Mode (Remote Shutter)

The EWA A109mini can act as a remote shutter for your smartphone camera:

1. Ensure the speaker is paired with your smartphone via Bluetooth.
2. Open your smartphone's camera application.
3. Double-press the multi-functional button on the speaker to trigger the camera shutter. This allows for convenient photo taking without touching your phone.



Support Selfie Mode

Remote Shutter, more convenient to take photos

Figure 5: Utilizing the EWA A109mini's selfie mode for remote photo capture.

MAINTENANCE

- Keep the speaker away from extreme temperatures, humidity, and dust.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping or subjecting the speaker to strong impacts.

- While portable, the speaker is not waterproof. Avoid exposure to water or rain.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both speaker and connected device. Re-pair the speaker if disconnected.
TF card not playing.	Card not inserted correctly; unsupported file format; corrupted card.	Re-insert TF card. Ensure audio files are in a supported format. Try a different TF card.

SPECIFICATIONS

Model Name	A109 mini
Brand	EWA
Speaker Type	Subwoofer
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Speaker Maximum Output Power	3 Watts
Battery Life	5 hours (up to 8 hours at 50% volume)
Charging Time	2 Hours
Product Dimensions	1.89"D x 1.89"W x 1.58"H
Item Weight	6.4 ounces
Material	Metal
Control Method	Touch (Multi-functional button)
Bluetooth Range	10 Meters
Signal-to-Noise Ratio	85 dB







WARRANTY AND SUPPORT

Your EWA A109mini Bluetooth Speaker comes with a limited warranty. For any questions or assistance, please do not hesitate to reach out to our dedicated customer service. We aim to reply within 24 hours to ensure your satisfaction.

Contact information for customer service can typically be found on the product packaging or the official EWA website.

© 2024 EWA. All rights reserved.

Related Documents - EWA-A109mini

	<p>EWA A109mini User Manual: Portable Bluetooth Speaker Guide</p> <p>Comprehensive user manual for the EWA A109mini portable wireless Bluetooth speaker, covering setup, controls, specifications, and warranty information.</p>
	<p>EWA A119 Mini Bluetooth Speaker User Manual</p> <p>User manual for the EWA A119 Mini Bluetooth Speaker, covering setup, TWS pairing, indicator status, specifications, important notices, and warranty information.</p>
	<p>EWA A17 Mini Karaoke Machine User Manual</p> <p>User manual for the EWA A17 Mini Karaoke Machine, detailing packaging contents, button interfaces, connection instructions, LED indicator guide, specifications, troubleshooting, notices, and FCC compliance.</p>
	<p>EWA A106Pro Wireless Speaker User Manual</p> <p>User manual for the EWA A106Pro wireless speaker, covering setup, connection, charging, commands, LED indicator guide, reset button, specifications, and important care instructions.</p>
	<p>EWA L102 Wireless Speaker User Manual</p> <p>Comprehensive user manual for the EWA L102 Wireless Speaker, covering packaging, button functions, connection, specifications, and important notices.</p>
	<p>EWA A106Max Portable Bluetooth Speaker User Manual & Quick Start Guide</p> <p>Comprehensive user manual for the EWA A106Max portable Bluetooth speaker. Learn about packaging, setup, button functions, Bluetooth connection, specifications, indicator lights, important notices, and warranty information from J.Y.M. Electronics Co., Ltd.</p>