



Manuals.plus /

› VINGLI /

› VINGLI 10x20 ft Pop Up Canopy Tent Instruction Manual

VINGLI bk1020

VINGLI 10x20 ft Pop Up Canopy Tent Instruction Manual

Model: bk1020

INTRODUCTION

Thank you for choosing the VINGLI 10x20 ft Pop Up Canopy Tent. This manual provides essential information for the correct assembly, safe operation, and proper maintenance of your canopy tent. Please read these instructions thoroughly before setup and retain them for future reference.

SETUP INSTRUCTIONS


The VINGLI 10x20 ft Pop Up Canopy Tent is designed for easy setup, typically requiring two people. No tools are required for assembly.

1. Unpacking and Initial Frame Expansion

1. Remove the fully assembled frame with the top fabric from the carry bag.
2. Place the frame in the desired setup location.
3. With one person at each end, gently pull the frame outwards to partially expand it.

EASILY SET UP

TWO PERSON
RECOMMENDED

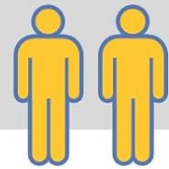

STEP 1

Open the frame and put the canopy on

STEP 2

Push the central lock
at the same time



STEP 3

Open the frame and
put the canopy on


Image: Steps 1-3 for setting up the canopy frame and attaching the fabric top.

2. Securing the Frame


1. Continue pulling the frame open until it is nearly fully extended.
2. Push up the central locks on the frame simultaneously until they click into place, securing the frame in its open position. This action should be performed by two people for stability.

QUICK AND EASY SET-UP

Push up 2 Central Locks to fix and set up the frame effortlessly within 30 seconds.

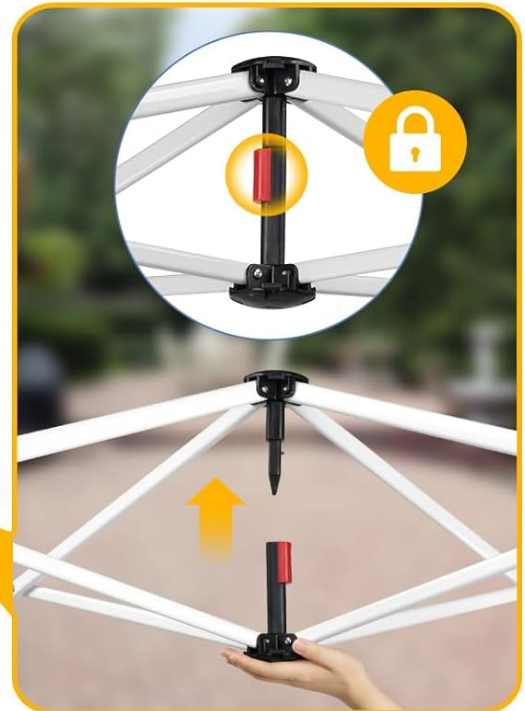

VS ours
others

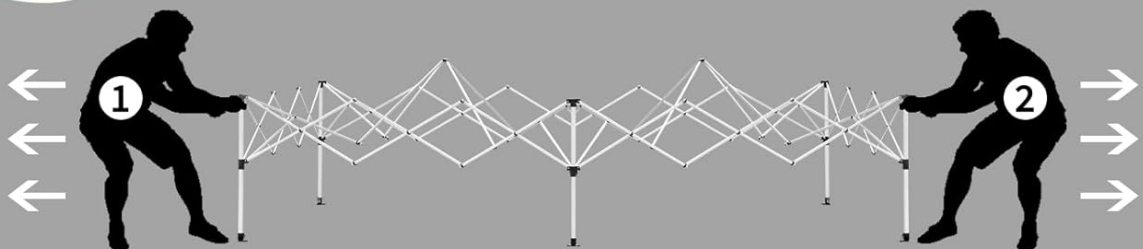

At least 2 persons are needed to pull apart the frame and lock the top buttons on the leg tubes.

Image: Illustration of pushing up the central locks to secure the canopy frame.



Image: Detailed view of the central lock mechanism for frame stability.

3. Extending the Legs and Adjusting Height

1. Extend each leg of the canopy by pressing the red button on the leg and pulling the lower section downwards until it locks into place.

2. Adjust the height to one of the three available positions (8.2 ft, 8.5 ft, or 8.8 ft peak height) by repeating the process for each leg. Ensure all legs are set to the same height for stability.



Image: Close-up of the red button for adjusting the leg height.

4. Attaching Sidewalls (Optional)

The canopy includes six removable sidewalls. Attach them using the provided fasteners (e.g., Velcro straps, zippers) to the canopy frame and top fabric as needed for wind protection or privacy.

5. Anchoring the Canopy

Always anchor the canopy tent to the ground for stability, especially in windy conditions. Use the provided ropes and stakes to secure each leg and corner of the canopy. Failure to properly anchor the tent can result in damage or injury.

OPERATING YOUR CANOPY TENT

UV and Water Protection

The canopy top is made from UV-coated fabric, offering 50+ UV sun protection and blocking approximately 99% of harmful UV rays. The material is also waterproof, designed to dry quickly and prevent water pooling due to its pointed profile. While waterproof, it is not recommended to leave the canopy up overnight or during severe weather conditions.

UV Protection

Top cover with silver coating can block 99% of the UV rays



Waterproof

Durable water-resistant fabric can effectively keep out rain (Don't recommend to leave the canopy up overnight or under bad weather)



Image: Visual representation of the canopy's UV protection and waterproof capabilities.

Usage Guidelines

- This canopy is suitable for outdoor events, parties, camping, market stalls, and other recreational activities.
- Always ensure the canopy is properly anchored to prevent movement or damage from wind.
- Do not use the canopy in severe weather conditions, including heavy rain, strong winds, or snow.
- Avoid placing heat sources or open flames directly under or near the canopy fabric.

CARE AND MAINTENANCE

Cleaning

- Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners.
- Rinse thoroughly and allow the fabric to air dry completely before folding and storing.
- Wipe down the metal frame with a damp cloth to remove dirt and debris. Ensure the frame is dry to prevent rust.

Storage

- Ensure the canopy fabric and frame are completely dry before disassembling and storing to prevent mold, mildew, and rust.
- Fold the canopy neatly and place it back into the oversized rolling wheeled storage bag for easy transport and protection.
- Store the canopy in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Canopy Not Standing Firmly

- **Check Leg Extension:** Ensure all four legs are fully extended and locked into place at the same height.
- **Verify Central Locks:** Confirm that the central locks on the frame are fully engaged and clicked into position.
- **Proper Anchoring:** Ensure the canopy is securely anchored to the ground using all provided stakes and ropes. Insufficient anchoring is a common cause of instability.

Difficulty Expanding/Collapsing Frame

- **Two-Person Operation:** This canopy is designed for two-person setup and takedown. Attempting it alone can make the process difficult.
- **Lubrication:** If the frame joints are stiff, apply a silicone-based lubricant to the moving parts.
- **Obstructions:** Check for any fabric or debris caught in the frame's moving parts.

Water Pooling on Canopy Top

- **Ensure Proper Tension:** Make sure the canopy fabric is taut and evenly distributed over the frame.
- **Adjust Height:** If possible, slightly adjust the leg height to increase the slope of the canopy, allowing water to run off more easily.

PRODUCT SPECIFICATIONS

PRODUCT SIZE



**Portable and
Convenient**



Image: Product dimensions and the compact size of the canopy when stored in its wheeled bag.

Feature	Detail
Brand	VINGLI
Model Number	bk1020
Size	10x20 ft (240"L x 120"W)
Max Ceiling Height	103 Inches (approx. 8.58 ft)
Adjustable Peak Height	8.2 ft, 8.5 ft, 8.8 ft
Floor Area	200 Square Feet
Color	Black
Material (Frame)	Metal (Aluminum or Fiberglass)
Material (Canopy)	UV-coated, Waterproof Fabric
UV Protection	50+ UV Sun Protection (blocks 99% UV rays)
Water Resistance Level	Waterproof
Item Weight	70.5 Pounds
Sidewalls Included	6 Removable Sidewalls
Portability	Oversized rolling wheeled storage bag included
Assembly Required	Yes

style="font-family:Arial, sans-serif;">

SAFETY INFORMATION

- **Weather Conditions:** Do not use this canopy tent in severe weather conditions, including heavy rain, strong winds, thunderstorms, or snow.
- **Anchoring:** Always anchor the tent securely to the ground using all provided stakes and ropes to ensure stability and prevent it from blowing away.
- **Fire Hazards:** Be cautious of fire hazards. Do not use open flames, heaters, or cooking equipment inside or too close to the canopy tent. The fabric is not fireproof.
- **Assembly:** Always follow assembly instructions carefully. Ensure all parts are correctly connected and secured before use.
- **Supervision:** Keep children and pets away from the canopy during assembly and disassembly.

WARRANTY AND SUPPORT

Return Policy

This product is typically eligible for a 30-day return policy from the date of purchase. Please refer to your purchase platform's specific return guidelines for detailed information on eligibility and procedures.

Customer Support

For any questions, concerns, or assistance with your VINGLI Pop Up Canopy Tent, please contact the seller directly

through your purchase platform. For purchases made on Amazon, you can typically find seller contact information via your order history or by visiting the VINGLI-Direct seller page.