

[manuals.plus](#) /› [RYOBI](#) /› [Ryobi ONE+ 18-Volt Cordless 8-inch Lithium-Ion Pole Saw Instruction Manual \(Model B07B6G356M\)](#)

RYOBI B07B6G356M

Ryobi ONE+ 18-Volt Cordless 8-inch Lithium-Ion Pole Saw Instruction Manual

Model: B07B6G356M

Contents	Assembly	Introduction	Safety Information	Package	Maintenance	Specifications	Warranty & Support
--------------------------	--------------------------	------------------------------	------------------------------------	-------------------------	-----------------------------	--------------------------------	----------------------------------------

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Ryobi ONE+ 18-Volt Lithium-Ion Cordless Pole Saw. This cordless pole saw is designed for trimming branches up to 6 inches in diameter, offering an adjustable length for reaching various heights. It features an in-line motor, an angled cutting head for improved control, and automatic bar and chain oiling. The included 18-Volt compact Lithium-ion battery and charger ensure fade-free power and quick recharging. Please read this manual thoroughly before operation.

2. SAFETY INFORMATION

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Always wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and hearing protection when operating the pole saw. Ensure a stable footing and clear work area. Keep bystanders, especially children and pets, at a safe distance. Do not operate the saw in wet conditions or near power lines. Always disconnect the battery before performing any maintenance or adjustments.

3. PACKAGE CONTENTS

Your Ryobi ONE+ 18-Volt Cordless Pole Saw package includes the following items:

- Ryobi ONE+ 8 in. 18-Volt Cordless Pole Saw Head
- Extension Pole (for adjustable length)
- 18-Volt Compact Lithium-Ion Battery (1.3 Ah)
- 18-Volt Battery Charger
- Bar and Chain Cover
- Operator's Manual



Image 1: The included Ryobi ONE+ 18-Volt Lithium-Ion Battery and Charger, essential for powering the pole saw.

4. ASSEMBLY

The Ryobi ONE+ Pole Saw is designed for easy assembly. Follow these steps to prepare your tool for use:

- 1. Attach the Pole Saw Head:** Align the pole saw head with the main shaft. Push firmly until it clicks into place, ensuring the connection is secure.
- 2. Install the Extension Pole (Optional):** For extended reach, insert the extension pole between the main shaft and the pole saw head. Ensure all connections are securely fastened with the locking mechanisms. The pole saw can be used with or without the extension pole, providing adjustable lengths of 6.5 ft. or 9.5 ft.
- 3. Insert Battery:** Slide a fully charged 18-Volt Lithium-Ion battery into the battery port on the handle until it locks into place.
- 4. Fill with Bar and Chain Oil:** Unscrew the oil cap located on the pole saw head. Carefully fill the reservoir with appropriate bar and chain oil. Monitor the clear-view fluid window to avoid overfilling. Replace the cap securely.



Image 2: The Ryobi ONE+ 18-Volt Cordless Pole Saw shown fully assembled with its extension pole, ready for use.



Image 3: A detailed view of the Ryobi ONE+ 8-inch pole saw head, highlighting the bar and chain mechanism.

5. OPERATION

Before operating, ensure the battery is fully charged and the oil reservoir is filled. Always wear safety gear.

- 1. Starting the Pole Saw:** To start the pole saw, depress the safety button located on the handle, then squeeze the trigger. The chain will begin to move.
- 2. Cutting Technique:** Position the saw blade against the branch to be cut. Allow the saw to do the work; do not force it. Use a steady, controlled motion. The in-line motor and angled cutting head facilitate precision pruning, even in tight spaces.
- 3. Branch Diameter:** The 8-inch bar and chain are suitable for cutting branches up to 6 inches in diameter. For larger

branches, consider alternative tools.

4. **Stopping the Pole Saw:** Release the trigger to stop the chain. The chain brake feature will engage to quickly stop the chain's movement.



Image 4: An individual demonstrating the use of the Ryobi ONE+ pole saw to trim an overhead tree branch.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your pole saw.

- **Bar and Chain Oiling:** The saw features an automatic oiler. Regularly check the clear-view fluid window and refill the bar and chain oil reservoir as needed. Proper lubrication is crucial for chain performance and lifespan.
- **Chain Sharpening/Replacement:** A dull chain can reduce cutting efficiency and increase kickback risk. Sharpen or replace the chain as necessary. Refer to the full product manual for detailed instructions on chain maintenance.
- **Cleaning:** After each use, clean the pole saw head, bar, and chain to remove sawdust, sap, and debris. Ensure ventilation openings are clear.
- **Storage:** Store the pole saw in a dry, secure location out of reach of children. Remove the battery during storage.

7. SPECIFICATIONS

Feature	Specification
Brand	RYOBI
Model	B07B6G356M
Power Source	Battery Powered (18-Volt Lithium-Ion)
Blade Length	8 Inches
Max Cutting Diameter	Up to 6 Inches

Feature	Specification
Adjustable Length	6.5 ft. or 9.5 ft.
Battery Type	Lithium-Ion
Charger Included	Yes (1 hour quick charger)
Special Feature	Automatic Oiler, Brake
Item Weight	9.63 pounds (4368 Grams)
Color	Green, Black

8. WARRANTY & SUPPORT

The Ryobi ONE+ 18-Volt Lithium-Ion Cordless Pole Saw is backed by a **3-year limited warranty**. For warranty claims, technical support, or replacement parts, please refer to the contact information provided in the full product manual or visit the official Ryobi website. Keep your purchase receipt as proof of purchase for warranty validation.

© 2026 RYOBI. All rights reserved.