

Rabalux 7119

Rabalux EVANGELINE 7119 Ceiling Light User Manual

Model: 7119

INTRODUCTION

Thank you for purchasing the Rabalux EVANGELINE 7119 Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.

Safety Instructions

- Installation must be performed by a qualified electrician in accordance with local wiring regulations.
- Ensure the power supply is disconnected at the main circuit breaker before installation, maintenance, or bulb replacement.
- Do not exceed the maximum wattage specified for the light bulbs.
- This product is designed for indoor use only (IP20 rating). Do not expose to moisture or extreme temperatures.
- Handle glass components with care to prevent breakage.
- Keep packaging materials out of reach of children.

PACKAGE CONTENTS

Please check that all components are present and undamaged before proceeding with installation:

- Rabalux EVANGELINE 7119 Ceiling Light fixture (main body with arms and lamp holders)
- 3 x Glass shades
- Mounting hardware (screws, wall plugs)
- Instruction Manual (this document)

Light bulbs are not included and must be purchased separately.

SETUP AND INSTALLATION

Follow these steps carefully to install your ceiling light. If you are unsure about any step, consult a qualified

electrician.

1. Prepare for Installation:

- Ensure the main power supply to the installation area is switched off at the circuit breaker.
- Gather necessary tools: screwdriver, wire strippers, drill, pencil, measuring tape.

2. Mount the Fixture Base:

Position the mounting bracket (usually integrated into the fixture base) against the ceiling at the desired location. Mark the drilling points with a pencil. Drill holes, insert wall plugs (if necessary), and secure the mounting bracket to the ceiling using the provided screws.



Image: The main body of the Rabalux EVANGELINE 7119 Ceiling Light, showing the central mounting base and the curved metal arms extending outwards. The base is antique bronze colored.

3. Electrical Connection:

Connect the household electrical wires to the terminal block on the fixture. Ensure correct polarity: Live (L) to Live, Neutral (N) to Neutral, and Earth (E) to Earth. Double-check all connections are secure.

- **Live (L):** Brown or Red wire
- **Neutral (N):** Blue or Black wire
- **Earth (E):** Green/Yellow wire

Warning: Incorrect wiring can cause electric shock or fire. If in doubt, consult a qualified electrician.

4. Attach the Fixture Body:

Once wired, carefully attach the main body of the light fixture to the mounting bracket, securing it with the screws or fasteners provided.

5. Install Light Bulbs:

Screw three E14 base light bulbs (max 40W each, LED recommended) into the lamp holders. Do not overtighten.

6. **Attach Glass Shades:**

Carefully place each glass shade over its respective lamp holder and secure it according to the fixture's design (e.g., by twisting or using a retaining ring). Ensure they are firmly in place but do not apply excessive force.



Image: The Rabalux EVANGELINE 7119 Ceiling Light with all three ribbed white glass shades attached to the antique bronze arms.

7. **Restore Power:**

Once installation is complete and all components are securely in place, restore power at the main circuit breaker and test the light fixture.

OPERATING INSTRUCTIONS

Switching On/Off

The Rabalux EVANGELINE 7119 Ceiling Light is operated via a standard wall switch connected to your household electrical circuit. Flip the switch to turn the light on or off.

Dimming Functionality

This fixture is designed to be dimmable. To utilize the dimming feature, you must use dimmable E14 LED bulbs and connect the fixture to a compatible dimmer switch (not included). Follow the dimmer switch manufacturer's instructions for installation and operation.

Bulb Replacement

1. Ensure the power supply to the fixture is switched off at the main circuit breaker.
2. Allow bulbs to cool completely before handling.
3. Carefully remove the glass shade by twisting or releasing its retaining mechanism.
4. Unscrew the old E14 bulb counter-clockwise.
5. Screw in a new E14 bulb (max 40W, LED recommended) clockwise until snug.

- 6. Reattach the glass shade securely.
- 7. Restore power and test the light.

MAINTENANCE

Regular cleaning will help maintain the appearance and performance of your light fixture.

- Always disconnect power before cleaning.
- Wipe the metal parts with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- The glass shades can be gently wiped with a damp cloth and then dried with a soft, lint-free cloth.
- Do not spray cleaning liquids directly onto the fixture.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------|---|---|
| Light does not turn on. | No power to the fixture. Loose wire connection. Faulty light bulb. Faulty wall switch. | Check circuit breaker. Ensure power is off, then check wiring connections. Replace bulb with a new, working one. Test switch or consult electrician. |
| Light flickers. | Loose bulb. Incompatible dimmer switch/bulb. Loose wiring. | Tighten bulb. Ensure dimmable bulbs are used with a compatible dimmer. Ensure power is off, then check wiring connections. |
| Dimming not working. | Non-dimmable bulbs installed. Incompatible dimmer switch. | Replace with dimmable E14 LED bulbs. Ensure dimmer switch is compatible with LED bulbs. |

If the problem persists after attempting these solutions, please contact a qualified electrician or Rabalux customer support.

SPECIFICATIONS

| | |
|-----------------------|-----------------|
| Model | EVANGELINE 7119 |
| Brand | Rabalux |
| Type | Ceiling Light |
| Socket Type | E14 |
| Number of Bulbs | 3 |
| Max. Wattage per Bulb | 40W |
| Recommended Bulb Type | LED |

| | |
|--------------------------------|--|
| Dimmable | Yes (with dimmable bulbs and compatible dimmer switch) |
| Material | Metal (antique bronze finish), Glass (white shades) |
| Color | Bronze (fixture), White (shades) |
| Protection Class | IP20 (Indoor use only) |
| Energy Efficiency Class | A++ (for compatible bulbs) |
| Diameter | 530 mm |

WARRANTY AND SUPPORT

Rabalux products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Rabalux website.

For technical support, spare parts, or further assistance, please contact your retailer or the Rabalux customer service department.