

[manuals.plus](#) /› [TOUCHBeauty](#) /› [TOUCHBeauty Electric Eyebrow Trimmer TB-815 User Manual](#)

## TOUCHBeauty TB-815

# TOUCHBeauty Electric Eyebrow Trimmer TB-815 User Manual

Model: TB-815

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your TOUCHBeauty Electric Eyebrow Trimmer, model TB-815. Please read this manual thoroughly before first use and retain it for future reference. This device is designed for precise trimming of eyebrows and other delicate facial hair.

## 2. PRODUCT OVERVIEW

### 2.1 Components

The TOUCHBeauty Electric Eyebrow Trimmer TB-815 includes the following components:

- Trimmer Blade: Hypo-allergenic stainless steel for safe trimming.
- Blade Release Button: For detaching the blade for cleaning or replacement.
- Power Switch: To turn the device on and off.
- Battery Cover: Protects the battery compartment.
- Protective Cap: Covers the blade when not in use.
- Cleaning Brush: For removing hair residue from the blade.
- Double-Sided Comb: For trimming eyebrows at different lengths.

# DEVICE ACCESSORIES



**Figure 2.1:** Overview of the TOUCHBeauty Electric Eyebrow Trimmer TB-815 and its accessories. The image displays the main trimmer unit with its protective cap off, revealing the blade, alongside a separate battery, a small cleaning brush, and a double-sided comb attachment.

## 2.2 Key Features

- **Hypo-allergenic Stainless Steel Trimmer Head:** Designed for safe and skin-friendly trimming.
- **Double-sided Comb:** Attaches to the blade for trimming and shaping eyebrows at different lengths.
- **Compact and Portable:** Sleek, pen-sized aluminum body, ideal for travel and on-the-go touch-ups.
- **Battery-Operated:** Powered by 1 x AAA Battery (not included).

## SLEEK LIPSTICK-SHAPE DESIGN


Small & portable, perfect for on the go touch-ups



**Figure 2.2:** The trimmer's sleek, lipstick-shape design emphasizes its portability, fitting easily into a purse for convenient touch-ups.

# MULTIFUNCTIONAL TRIMMER

Trims body and facial hair

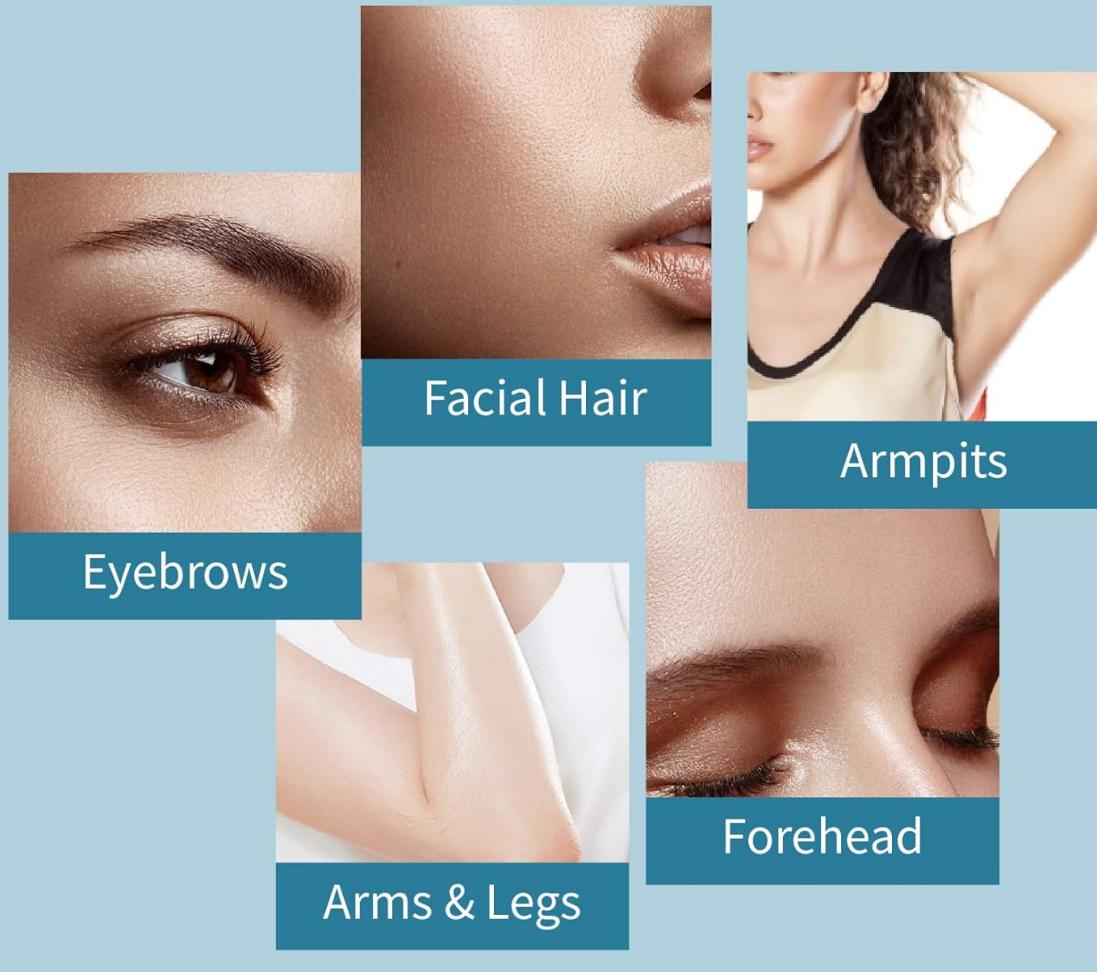

**Figure 2.3:** The trimmer is designed for multifunctional use, suitable for eyebrows, facial hair, armpits, and arms & legs.

## 3. SETUP

### 3.1 Battery Installation

1. Ensure the power switch is in the "OFF" position.
2. Gently twist the bottom part of the trimmer (battery cover) counter-clockwise and pull it off.
3. Insert one AAA battery (not included) into the battery compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Replace the battery cover by aligning it and twisting clockwise until securely fastened.

**Note:** Always use a fresh AAA battery for optimal performance. Do not mix old and new batteries or different types of batteries.



**Figure 3.1:** The trimmer, battery, and accessories. This image shows the required AAA battery for operation.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Trimming

1. Ensure your skin is clean and dry before use.
2. Remove the protective cap from the trimmer head.
3. Slide the power switch to the "ON" position. The trimmer will begin to operate.
4. Gently press the trimmer head against the skin and move it slowly against the direction of hair growth.
5. For precise shaping, use the edge of the blade.

6. After use, slide the power switch to the "OFF" position and replace the protective cap.



**Figure 4.1:** The trimmer's design allows for gentle and effective hair removal with a single stroke.

## SKIN-FRIENDLY DESIGN GENTLE ON SENSITIVE SKIN

Stainless steel trimmer blade with safe reticulated pattern edges trim hair without nicking or hurting the skin



**Figure 4.2:** The stainless steel trimmer blade features a safe reticulated pattern, designed to trim hair without causing nicks or irritation to the skin.

# SAFE & GENTLE NO SCRATCHES

Gives a smooth finish, does not irritate the skin



Successfully passed the balloon scratch test, trims and shapes eyebrows without hurting the skin

**Figure 4.3:** The trimmer provides a smooth finish and does not irritate the skin, having successfully passed scratch tests.

## 4.2 Using the Double-Sided Comb

1. Ensure the trimmer is turned off.
2. Align the double-sided comb with the trimmer head and gently slide it on until it clicks into place. The comb has two sides for different trimming lengths.
3. Turn the trimmer on.
4. Hold the trimmer at a slight angle and move it slowly across your eyebrows in the direction of hair growth to trim to the desired length.
5. After use, turn off the trimmer and carefully remove the comb.

## 5. MAINTENANCE

### 5.1 Cleaning the Trimmer

1. Ensure the trimmer is turned off and the battery is removed before cleaning.
2. Press the blade release button to detach the trimmer blade from the main unit.
3. Use the provided cleaning brush to gently brush away any hair residue from the blade and the trimmer head.

4. The blade can be rinsed under running water. Ensure it is completely dry before reattaching. **Do not rinse the main body of the trimmer.**
5. Reattach the blade to the main unit by aligning it and pressing until it clicks into place.
6. Wipe the main body of the trimmer with a soft, dry cloth.

## 5.2 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Always replace the protective cap on the blade when storing. If the trimmer will not be used for an extended period, remove the battery to prevent leakage.

## 6. SAFETY INFORMATION

Please observe the following safety precautions:

- Always keep the trimmer away from water sources.
- Avoid use on infants.
- Follow recommended cleaning and maintenance procedures.
- Keep the trimmer out of reach of children when not in use.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Do not use the trimmer if the blade is damaged or bent, as this may cause injury.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is dead or incorrectly installed.	Check battery polarity, replace with a new AAA battery.
Trimmer is not cutting effectively.	Blade is dull or clogged with hair.	Clean the blade thoroughly. If problem persists, consider replacing the blade (if replacement blades are available from manufacturer).
Trimmer pulls hair.	Blade is dull or moving too fast.	Clean the blade. Move the trimmer more slowly and gently against hair growth.

## 8. SPECIFICATIONS

- **Model Number:** TB-815
- **Brand:** TOUCHBeauty
- **Power Source:** 1 x AAA Battery (Not Included)
- **Product Dimensions:** 5.75 x 0.71 x 0.67 inches
- **Item Weight:** 0.32 ounces (0.01 Kilograms)
- **Manufacturer:** TOUCHBEAUTY BEAUTY & HEALTH SHENZHEN CO.,LTD
- **Recommended Uses:** Shaver, Hair Remover, Trimmer

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact TOUCHBeauty customer service. Refer to the product packaging or the official TOUCHBeauty website for contact details.

**Website:** [TOUCHBeauty Official Store](#)

## Related Documents - TB-815

	<p><b><a href="#">TB-1951 Electric Nose Hair Trimmer - User Manual</a></b></p> <p>User manual for the TB-1951 Electric Nose Hair Trimmer, covering safety instructions, device specifications, preparation, usage, cleaning, storage, recycling, and troubleshooting.</p>
	<p><b><a href="#">TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set User Manual</a></b></p> <p>Explore the TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set with this comprehensive user manual. Learn about its features, attachments, safe operation, maintenance, and troubleshooting for achieving professional nail care at home.</p>
	<p><b><a href="#">TOUCHBeauty TB-14838 Rotary Facial Cleanser Set: Instruction Manual</a></b></p> <p>Comprehensive instruction manual for the TOUCHBeauty TB-14838 Rotary Facial Cleanser Set, detailing safety instructions, product specifications, operating procedures, cleaning, maintenance, and troubleshooting.</p>
	<p><b><a href="#">TB-2035 Manicure/Pedicure Nail Set - Instruction Manual &amp; User Guide   TOUCHBeauty</a></b></p> <p>Official instruction manual for the TOUCHBeauty TB-2035 Manicure/Pedicure Nail Set. Learn how to use, clean, maintain, and troubleshoot your nail care device. Includes specifications and safety information.</p>
	<p><b><a href="#">TB-1951 Electric Nose Hair Trimmer - User Manual</a></b></p> <p>User manual for the TB-1951 Electric Nose Hair Trimmer, covering safety instructions, device specifications, preparation, usage, cleaning, storage, recycling, and troubleshooting.</p>



### [TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set User Manual](#)

Explore the TOUCHBeauty TB-1733 6-in-1 Electric Manicure/Pedicure Set with this comprehensive user manual. Learn about its features, attachments, safe operation, maintenance, and troubleshooting for achieving professional nail care at home.