

Bontempi 122406

Bontempi 122406 24-Key Electronic Keyboard

INSTRUCTION MANUAL

Introduction

This manual provides essential instructions for the safe and proper use of your Bontempi 122406 24-Key Electronic Keyboard. Please read it thoroughly before use and retain it for future reference.

The Bontempi 122406 is a 24-key electronic keyboard designed for children aged 3 to 8 years. It features 8 pre-recorded melodies and an automatic shut-off function to conserve battery life.



Figure 1: Bontempi 122406 24-Key Electronic Keyboard. This image shows the red and white keyboard with 24 keys, some numbered, and the 'Toy Band' and 'BONTEMPI' logos.

Safety Warnings

- **Not suitable for children under 3 years of age.** Contains small parts which may present a choking hazard.
- Adult supervision is recommended during use.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Remove batteries if the product is not used for an extended period.

Setup

Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 x AA (LR6) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Initial Power-On

After installing batteries, locate the power switch (usually marked 'ON/OFF') on the keyboard. Slide the switch to the 'ON' position to power on the device.

Operating Instructions

Playing the Keyboard

Press any of the 24 keys to produce musical notes. Some keys may be numbered to assist with learning simple melodies.

Using Pre-recorded Melodies

The keyboard includes 8 pre-recorded melodies. Locate the dedicated button(s) for melody playback (refer to the keyboard's controls for specific labeling, often indicated by a musical note icon or 'DEMO'). Pressing this button will cycle through or play the pre-recorded tunes.

Automatic Shut-Off

To conserve battery life, the keyboard is equipped with an automatic shut-off feature. If left inactive for a certain period, the device will power off automatically. To resume play, simply turn the power switch off and then on again.

Maintenance

Cleaning

Wipe the surface of the keyboard with a soft, dry cloth. Do not use abrasive cleaners or solvents. Avoid getting moisture into any openings.

Storage

Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for an extended period to prevent leakage.

Troubleshooting

- **Keyboard does not turn on:**
 - Ensure batteries are inserted correctly with the correct polarity.

- Check if the batteries are fresh and not depleted. Replace if necessary.
- Verify the power switch is in the 'ON' position.
- **No sound:**
 - Check battery status. Low batteries can affect sound output.
 - Ensure the keyboard is fully powered on.
- **Keys are unresponsive:**
 - Ensure the keyboard is powered on.
 - Check for any obstructions under the keys.

Specifications

Model Number	122406
Brand	Bontempi
Number of Keys	24
Pre-recorded Melodies	8
Power Supply	2 x AA (LR6) batteries (included)
Material	Plastic
Dimensions (L x W x H)	36 x 23 x 22 cm (approximately)
Weight	210 grams (approximately)
Recommended Age	36 months - 8 years

Warranty and Support

Specific warranty information for the Bontempi 122406 Electronic Keyboard is not provided in this manual. Please refer to the product packaging or contact Bontempi customer support for details regarding warranty coverage and technical assistance.

For further inquiries or support, please visit the official Bontempi website or contact your retailer.