

Hisense 50DU6070

Hisense 50DU6070 50-inch 4K UHD Smart LED TV User Manual

Model: 50DU6070

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Hisense 50DU6070 50-inch 4K UHD Smart LED TV. Please read this manual thoroughly before using your television and retain it for future reference. This television features a 50-inch LED display with 4K Ultra HD resolution, Smart TV capabilities, and Wi-Fi connectivity.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- **Power Source:** Connect the TV only to an AC 120V, 60Hz power outlet. Ensure the power cord is not damaged or pinched.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Stability:** Ensure the TV is placed on a stable, level surface or securely mounted to a wall to prevent tipping.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, contact your retailer.

- Hisense 50DU6070 50-inch 4K UHD Smart LED TV
- Remote Control

- Power Cord
- TV Stand (2 pieces)
- Screws for TV Stand
- Quick Setup Guide (this document)

4. SETUP

4.1 Attaching the TV Stand

To ensure stability, attach the included stand to your television.

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure each stand piece with the provided screws, tightening them firmly.



Image: Front view of the Hisense 50DU6070 TV with its stand attached, showing the display and the Hisense logo.

4.2 Wall Mounting (Optional)

If you prefer to wall mount your TV, you will need a VESA-compatible wall mount kit (not included). The VESA mounting

pattern for this model is standard. Consult a professional for wall mounting installation to ensure safety.

4.3 Connecting Devices

Connect your external devices such as cable boxes, Blu-ray players, or gaming consoles to the TV using the appropriate ports.

- **HDMI:** For high-definition video and audio. This TV features multiple HDMI inputs.
- **USB:** For connecting USB storage devices to play media files.
- **Power:** Connect the power cord to the TV's power input and then to a wall outlet.



Image: Rear view of the Hisense 50DU6070 TV, highlighting the various input ports including HDMI and USB connections.

4.4 First Time Setup

After connecting all devices and powering on the TV for the first time, follow the on-screen instructions to complete the initial setup, which typically includes:

- Language selection
- Network connection (Wi-Fi setup)
- Channel scanning (if using an antenna)
- Time zone settings

5. OPERATING

5.1 Remote Control Functions

The included remote control allows you to navigate the TV's features. Common buttons include:

- **Power:** Turns the TV on or off.
- **Input:** Selects the input source (HDMI 1, HDMI 2, USB, etc.).
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels.
- **Navigation (Arrow) Buttons:** Moves cursor through menus.
- **OK/Enter:** Confirms selections.
- **Home:** Accesses the Smart TV home screen.
- **Back/Return:** Returns to the previous screen or menu.

5.2 Smart TV Features

Your Hisense 50DU6070 is a Smart TV, offering access to various internet services and applications.

- **Accessing Apps:** Press the 'Home' button on your remote to open the Smart TV interface, where you can select and launch installed applications.
- **Wi-Fi Connectivity:** Ensure your TV is connected to a stable Wi-Fi network for optimal Smart TV performance. You can manage network settings in the TV's main menu.
- **Content Streaming:** Use pre-installed or downloaded apps to stream movies, TV shows, and other digital content.

5.3 Input Selection

To switch between connected devices (e.g., a Blu-ray player on HDMI 1, a gaming console on HDMI 2, or a USB drive), press the 'Input' button on your remote control and select the desired source from the on-screen menu.

6. MAINTENANCE

Proper maintenance helps extend the life of your television.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (apply to cloth, not directly to screen). Avoid harsh chemicals.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet.
- **Dusting:** Regularly dust the ventilation openings on the back of the TV to prevent overheating.
- **Power Cord:** Periodically check the power cord for any signs of damage. If damaged, replace it immediately with an approved cord.

7. TROUBLESHOOTING

Before contacting customer support, try these common troubleshooting steps.

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Try a different outlet. Check if the power indicator light is on.
No picture, but sound is present	Check the input source. Ensure the connected device is powered on and functioning correctly. Try a different HDMI cable.
No sound, but picture is present	Check the volume level. Ensure the TV is not muted. Check audio settings in the TV menu. If using external speakers, ensure they are connected and powered on.

Problem	Possible Solution
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and the router. Check network settings in the TV menu.

8. SPECIFICATIONS

Feature	Detail
Model Number	50DU6070
Screen Size	50 Inches
Display Technology	LED
Resolution	4K Ultra HD
Smart TV Features	Yes, Internet Services Compatible
Connectivity Technology	Wi-Fi
Hardware Interface	HDMI, USB
Audio Input	HDMI, USB
Mounting Type	Table Mount (VESA compatible for wall mount)
Controller Type	Remote Control
GTIN (UPC)	819130020440
ASIN	B07B8CZNG6

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Hisense website. You may also contact Hisense customer service directly for assistance with product registration, troubleshooting, or service requests.

Online Support: www.hisense-usa.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question